CHANGE NO. 1

PARTS LIST

1/4 TON 4 X 4

Ford Motor Company

BUILT FOR

UNITED STATES ARMY

MODEL GPW
CONTRACT NUMBER
398—QM—11424

U.S.A. REGISTRATION NUMBERS 20100000 TO 20163145



APRIL 1942

Jeep Draw.com

PARTS LIST	PA	RI	S		19	51
------------	----	----	---	--	----	----

1/4 TON 4 x 4

Ford Motor Company

BUILT FOR

UNITED STATES ARMY

Model GPW

Parts are designated in this book under both Ford Motor Co. and Willys-Overland Motors part numbers, since these numbers are interchangeable.

FORD

Contract W398 QM 11424 Model GPW

U.S.A. Registration Numbers 20100000 to 20163145

TM-10-1348

WILLYS

Contract W398 QM 11423 Model MB

U.S.A. Registration Numbers 2073506 to 2078606


TM-10-1512

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

APRIL 1942

Copyright 1942 FORD MOTOR COMPANY DEARBORN, MICHIGAN All rights reserved

INDEX	Gov't. Group	Page	
Wheels	13	1	
Brake	12	1	
Front Axle	10	7	
Steering	14	12	
Rear Axle	11	15	
Drive Shaft	09	16	
Frame	15	17	
Exhaust	04	19	
Springs	16	20	
Engine	01	21	
Transmission	07	30	
Clutch	02	33	- 1
Transfer Case	08	36	
Cooling	05	38	
Fuel	03	40	
Electrical	06	49	
Hood - Fenders	17	62	
Bumper Guards	21	64	Esteroid
Body	18	67	
Standard Parts	23	76	
Bearing Chart	25	79	

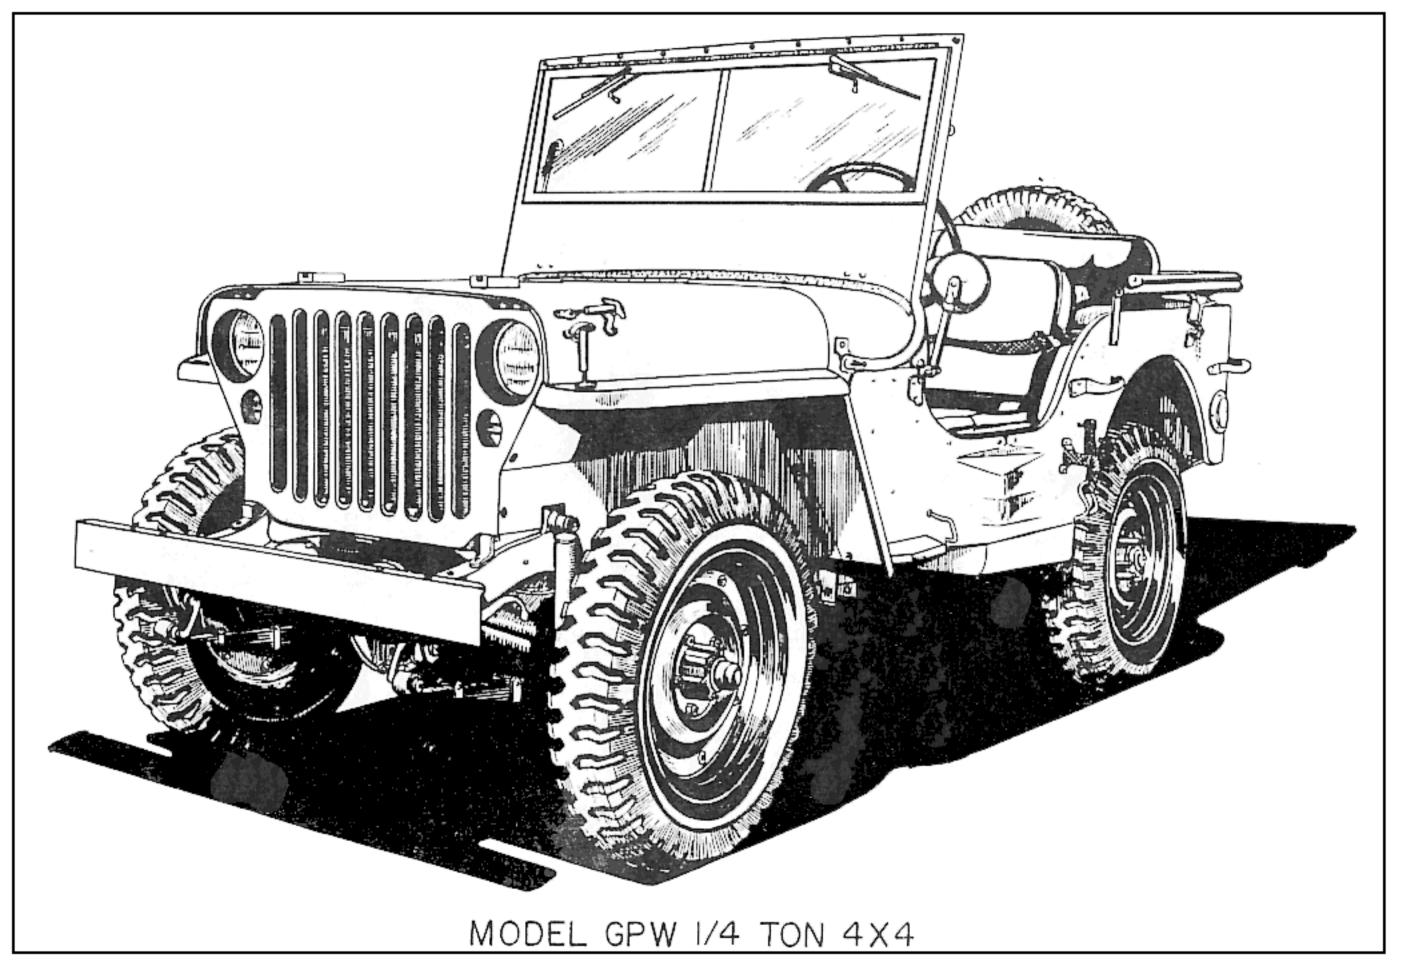

FORD MOTOR COMPANY

DEARBORN, MICH.

AMERICAN WHOLESALE BRANCHES

Alexandria, Va. Atlanta Buffalo Charlotte, N. C.

Chester, Pa. Chicago

Denver Des Moines Edgewater, N. J. Fargo Houston Cincinnati Indianapolis Cleveland

Dallas

Dearborn, Mich.

Jacksonville Kansas City, Mo. Louisville Memphis Milwaukee New Orleans Norfolk

Oklahoma City

Omaha Pittsburgh Richmond, Calif. St. Louis Salt Lake Clty Somerville, Mass. Twin City (St. Paul, Minn.)

Instructions for Ordering Parts

I—Always give Part Number and Name of each part ordered.

2—Specify whether shipments are to be made by freight, express or parcel post.

Telegraph Code

We list below a brief General Code covering miscellaneous instructions relative to the shipment of parts.

Angra—Express at once—

Booba-Ship fast freight-

Anile—Express direct to—

Beaga-Post today sure.

Brewa-Advise how and when Shipping.

Ford Motor Company

- Manufacturers List Price Not subject to regular discount.
- Not subject to regular discount.
- See Forms 3634-5-6 or 7 for Net Price.
- Indicates parts used on Standard as well as Government vehicles.

NAME

The nomenclature plate illustrated below is located on the instrument panel.

NOMENCLATURE	TRUCK 1/4 TON 4X4
SUPPLY ARM OR SERVICE	
MAINTAINING VEHICLE	QUARTERMASTER CORPS
MAKE AND MODEL	FORD-GPW
SERIAL NUMBER	
GROSS WEIGHT	L85
MAXIMUM PAYLOAD	800 L85
MAXIMUM TRAILEDLOAD _	1000 ÉBS
DATE OF DELIVERY	
RECOMMENDED BY MANUF	ACTURER
OCTANE RATING OF GAS	SOLINE 68 MIN
SAE GRADE OF OIL FO	R SUMMER USE 30 S A E
SAE GRADE OF OIL FO	R WINTER USE 10W SAE
PUBLICATIONS APPL	YING TO THIS VEHICLE
PARTS LIST T/M	
MAINTENANCE	MANUAL T/M 10- 1349
<u> </u>	

CHASSIS

The vehicle serial number prefixed by the letters "GPW" is located on the top flange of the frame side member just back of front bumper.

ENGINE

The motor serial number prefixed by the letters "GPW" is located on the front upper corner of right side of cylinder block.

REGISTRATION NO.

The registration number is stenciled on the body.

FINISH OF STANDARD PARTS

The "S" suffix on numbers covering Standard Parts represents the finish of the part as shown by the following list:

and the state of the part of an	own by the following list:
Numbers with suffix S	Plain
Numbers with suffix S-2	Raven finish
Numbers with suffix S-3	Black Japan
Numbers with suffix S-4	Raven finish and black paint
Numbers with suffix S-5	Copper plate
Numbers with suffix S-6	Nicket plate
Numbers with suffix S-7	Cadmium plate
Numbers with suffix S-8	Zinc place
Numbers with suffix S-9	Blued steel (obsolete)
Numbers with suffix S-10	Tinned
Numbers with suffix S-11	Terne coated (obsolete)
Numbers with suffix S-12	Lacquer to match trim
Numbers with suffix S-13	Chrome plated
Numbers with suffix S-14	Nickel plate—Butler finish
Numbers with suffix S-15	Oxidized
Numbers with suffix S-16	Lead coated
Numbers with suffix S-17.	Raven finish and brown paint, head only (obsolete)
Numbers with suffix S-18	Case hardened
Numbers with suffix S-19	Brass plate
Numbers with suffix S-20	Cement coated
Numbers with suffix S-21	Lacquer for identification
Numbers with suffix S-22	Chrome plate-Butler finish
Numbers with suffix S-13	Rustless steel-head polished
Sumbers with suffix S-24	Hot tin coated

FORD MOTOR COMPANY

BASIC PART NUMBER GROUPING

Basic		Basic	
Part Number	Group	Part Number	Group
1000-1250	Wheels, Hubs & Rims	9904-9974	Carburetor
1351-1499	Spare Wheel Carrier	10000-10449	Generator
1500-1723	Tires	10500-10649	Cutout
2006-2449	Brakes (Service)	10650-10848	Battery
2450-2553	Brake (Controls)	10849-10899	Instrument Cluster & Ammeter
2594-2872	Brakes (Emergency)	11000-11516	Starter Motor
3000-3451	Front Axle	11648-11688	Lighting Switch
3500-3743	Steering Gear	1200-12327	Ignition Coil, Distributor,
4000-4799	Rear Axle		Condenser
4800-4999	Coupling Shaft	12405-12425	Spark Plug
5000-5149	Frame & Brackets	13002-13399	Head, Fender & Cowl Lamps
5150-5224	Battery Brackets & Parts	13400-13799	Lighting Stop, Tail &
5255-5299	Muffler & Exhaust Pipe		Dome Lights
5300-5515	Front Springs	13800-13899	Horn
5550-5818	Rear Springs	14054-14621	Wiring
6000-6928	Engine	16000-16149	Front Fender
7000-7449	Transmission	16150-16449	Rear Fender
7500-7646	Clutch	16450-16524	Running Board
	Radiator	16525-16599	Running Board Shields
8500-8599	Water Pump Assy	16600-16799	Hood
8600-8633	Fan	17003-17088	Tools
9002-9269	Fuel Tank	17250-17499	Speedometer
9270-9420	Fuel Pump	17500-17674	Windshield Wiper
9421-9499	Manifolds, Clamps, etc.	17750-17999	Bumpers
9500-9699	Carburetor	18000-18199	Shock Absorber
9700-9828	Acc.Spark & Throttle	18400-18600	Miscellaneous Accessories
	Control Rods	18650-18675	Oil Filter



0100	ENGINE	Da	ıge
	0100	Engine Assembly	21
	01	Cylinder Block & Head	22
	02	Crankshaft, Bearings, Caps & Seals	28
	03	Pistons, Rings, & Piston Pins	25
	04	Connecting Rods & Bearings	25
	05	Valves, Springs, Guides Tappets, Etc., Lifts, Rocker Arm & Shaft	28
	06	Camshaft, Timing, Bearings, Etc	25
	07	Oil Pump, Oil Pan, Gauge, Oil Filter & Oil Tank 29,30	.65
	80	Manifold	44
	09	Flywheel, Ring Gear, Etc.	28
	10	Mountings	22
0200	CLUTCH		33
0200	0201	Clutch Disc	35
	02	Cover, Pressure Plate & Springs	35
	03	Release Lever, Bearings, Forks, etc.	33
	04	Pedal & Spring	34
	05	Pilot Bearing	35
	00	Thor Doaring	00
0300	FUEL SYS	STEM	40
	0301	Carburetor, Air Cleaner44,	
	02	Fuel Pump, Fuel Pump Tube, Hose, Fuel Filter, Etc 41,	,43
	03	Accelerator Throttle & Choke	47
	04	Fuel Tank & Lines	40
0400	EXHAUST		
	0401	Muffler	19
	02	Pipe & Tail Pipe	19
0500	0001 710		
0500	COOLING	Delicher Chall & Core Dillor Core & Caille	38
	0501	Radiator Shell & Core, Filler Cap & Grille	38
	02	Thermostat & Thermometer	40
	03	Water Pump, Fan, Belt	
	05	Engine Water Fittings & Hose	39
0600	ELECTRIC	CAL .	
	0601	Generator & Regulator	49
	02	Starting Motor	52
	03	Distributor & Condenser	54
	04	Ignition Coil & Wiring Sets & Ignition Switch	53
	05	Instruments	,52
	06	Light Switches & Cables Wiring Harness	60
	07	Headlamps	56

0600	ELECTRIC	CAL (Cont'd) Tail & Auxiliary Lamp	Page 58
	09	· · · · · · · · · · · · · · · · · · ·	60
	10	Horn Starting Cables & Connections	
	11	110-AC-220-AC or DC Service Connection	
	11	110-AC-220-AC OF DC Service Connection	0.5
0700	TRANSMIS		
	0700	Assembly	
	01	Case	
	03	Main Drive Pinion & Bearings	30
	04	Main Shaft, Gears, Countershaft & Reverse Idler Gears & Countershaft	30,32
	05	Speedometer Gears	64
	06	Shift Forks, Levers & Gearshift Vacuum Booster	33
0800	TRANSFE	R CASE	
	0800	Assembly	36
	01	Case	
	02	Drive Gear, Shaft, (Sliding & Low) Bearings	37
	04	Idler Gear & Shaft	
	05	Declutch Shaft	37
	06	Shift Shaft & Fork & Shift Lever	37
	07	Speedometer Gears	64
0900	PROPELI	LER SHAFT AND UNIVERSAL JOINT	
	0901	Propeller Shaft Assembly, Tubes & Flanges	
	02	Universal Joints 10	& 32
1000	FRONT A	XLE	
	1000	Front Axle Assembly	7
	01	Axle Housing	_
	02	Differential Case & Carrier Assembly & Bearings	
	03	Drive Gear & Pinion Bearings	11
	05	Universal Drive & Drive Flange, Axle Shaft &	
		Universal Joint	8 & 9
	06	Steering Knuckle, Flange, & Steering Arm (Front Wheel Drive only)	. 9
	07	King Pins, Spindle, Etc. (Axle I Beam Type)	8
1100	DB 4 D 4 W	* D	
1100	REAR AX		15
	1100	Rear Axle Assembly	•
	01	Axle Housing Assembly	
	02	Axle Drive Shafts	•
	03	Differential Case & Carrier Assembly Bearings	-
	04	Drive Gear & Pinion & Bearings	.10,10

1200	BRAKES	Page 1
	1201	Hand Brake & Parts 5
	02	Shoes & Lining, Service Brake
	03	Brake Shoe Support, Guide Springs & Adjusting Pins 2
	04	Pedal & Spring 5
	05	Hydraulic Master Cylinder 4
	07	Hydraulic Wheel Cylinders
	80	Brake Dust Shield 1
	09	Hydraulic Brake Lines, Pipes & Hoses, Tubes & Clips
		<u></u> -
1300	WHEELS,	HUBS & DRUMS (FRONT & REAR)
	1301	Wheel Assembly, Bearings, Retainers, Etc
	02	Hubs & Drums, Wheel Studs & Nuts
1400	STEERING	G 12
	1401	Drag Link
	02	Tie Rod
	03	Gear Assembly
	04	Wheel Assembly
1500	FRAME &	BRACKETS 17
	1502	Pintle Hooks
	03	Spring Brackets, Hangers & Horns
	05	Spare Wheel Carrier 1
	06	Frame 17
1600	SPRINGS	& SHOCK ABSORBERS
	1601	Front & Rear Springs
	02	Shackles & Spring Seat
	03	Shock Absorbers & Stabilizers
1700		ENDERS, RUNNING BOARDS, APRONS SHEET METAL)
	1701 04	Fenders

1800	BODY		67
	1801 02 04 05	Floor Mats & Seals Floor Boards & Covers	64,67 69 69
	00	Handle, Locks, Etc., Door (Complete) Door & Window Fittings	71
	06	Tool Box	71
	07	Body Parts	72
2100	BUMPERS	& GUARDS	
	2101	Bumpers	64
	03	Radiator Guard	39
2200	MISCELLA	NEOUS BODY & CHASSIS & ACCESSORIES	
	2201	Rear View Mirror	64
	02	Identification & Caution Plates	74
	03	Speedometers & Parts	64
230 0	GENERAL	USE, STANDARDIZED PARTS	
	2303	Skid Chains	65
	04	Nuts, Bolts, Screws, Washers, & Rivets(Other	
	05	than Special)	,
	06	Clevis Pins (Other than Special)	
	10	Tarpaulins, Bows, Corners, Covers, & End Curtains	63 74
		,,,,,,,	• •
2500	BEARINGS		79
	2501 02	Ball Bearings	79 79

		ALPHABETICAL INDEX			
Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
A			Bearing-crankshoft-center upper-standard	0102	28
			Bearing-crankshaft-center upper-,010 undersize	0102	28
Absorber-shock-front	1603	65	Bearing-crankshaft-center upper020 undersize	0.102	28
Absorber-shock-rear	1603	65	Bearing-crankshaft-center upper-,030 undersize	0102	28
Adaptor-Instrument lamp	0606	60	Bearing-cranksheft-front lower-standard	0102	58
Adapter-oil filter tube	0107	65	Bearing-crankshaft-front lower010 undersize	0102	28
Adaptor-suppressor	0611	65	Bearing-crankshaft-front lower020 undersize Bearing-crankshaft-front lower030 undersize	0102	58
Ammoter	0601	52 60	Bearing-crankshaft-front upper-standerd	0103	58
Anti-squeek-frt fender eplash apron to frame	1701	62	Bearing-crankshaft-front upper010 undersize	0146 0145	28 28
Anti-squeak-frt.fender to cowl side panel-upr. Anti-squeak-frt.fender to cowl side panel-lwr.	1701 1701	62 62	Bearing-crankshaft-front upper020 undersize	0105	20 28
Anti-squeak-fuel tank hold down strap-3.25"	0304	10	Booring-crankshaft-front upper030 undersize	0102	28
Anti-equeak-fuel tank hold down strap-24.88"	0304	40	Bearing-crankshaft-rear lower-standard	0102	58
Anti-squeak-fuel tank-6" long	0304	40	Bearing-crankshaft-rear lower010 undersize	0102	28
Anti-equeak-fuel tank-7-1/4" long	0304	40	Bearing-crankshaft-rear lower030 undersize	0102	28
Anti-equeak-fuel tenk-9-1/2" long	0304	40	Bearing-crankshaft-roar lower020 undersize	0102	28
Anti-aqueak-fuel tank-18" long	0304	40	Bearing-crankshaft-rear upper-standard	0102	28
Apron-front fender eplash-RH	1701	62	Bearing-crankshaft-rear upper-,010 undersize	01	28
Apron-front fender splesh-LH	1701	62	Bearing-crankshaft-reer upper020 undersize	0102	28
Arm-advance control	0603	54	Bearing-crankshaft-rear upper-,030 undersize	0102	28
Arm & screw-carburetor throttle shaft	0301	46	Bearing-heat control valve shaft	0108	44
Arm-breaker	0603	55	Bearing-intermediate	0605	53
Arm-brush	0601	49	Bearing-steering arm Bearing-steering column upper	1006	. 9
Arm-pump-& collar	0301	46	Bearing-steering gear ball	1403	12
Arm-rear view mirror adjusting-short	2201	64	Bearing-transfer case inter, sheft roller	1403 0806	13
Arm-rocker-fuel pump	0302	43	Bearing-transfer case output shaft front	0806	37 37
Arm-steering Arm-steering gear	1006 1403	9	Bearing-transmission main drive gear ball	0704	30
Arm-steering pivot-RH	1907	15 8	Bearing-trans, main shaft ball	0704	32
Arm-steering pivot-IH	1007	ė	Belt-comshaft drive chain link	0106	25
Arm-windshield swing	1801	67	Belt-fan & generator drive	0503	40
Arm-windshield wiper outer	1801	64	Blade-windshield wiper	1801	64
Arm-windshield wiper inner	1801	64	Block-adjusting-throttle rod	0303	49
Armature sasy	0601	49	Block-cylinder	0101	- 22
Armature assy	0602	52	Block-Junction-2 post	0606	61
Axle-front	1000	7	Block-junction-6 post	0606	61
Axle-rear	1100	15	Body assy	1800	67
В			Body flange-carburator Body-fuel pump	0301	14.14
. ~			Body-horn switch	0302 1404	43
Bag-tool	2306	63	Body-oil pump	0107	15 29
Baffle-crankcase ventilator	0107	30	Bolt-lamp bracket	0607	56
Baffle-transmission main shaft bearing oil	0704	32	Bolt & washer-1/4-20 x 5/8 hex head	1807	72
Beil-fuel-pump gas strainer	0302	43	Bolt & washer-5/8 hex head	1507	73
Ball check-intake-carburetor	0301	46	Bolt-battery bracket	1500	18
Bell-front exte shaft	1005	9	Bolt-buttery clamp	1500	18
Bell-geer shift lever fulcrum	0706	33	Bolt-battery terminal	0606	60
Band-hand brake & lining Ball-steel-front axle shaft	1201	6	Belt-bedy-No. 1	1800	67
Ball-steel-shift roll poppet	1005 0706	9 33	Bolt-Body-No. 2 & No. 3	1800	67
Ball-trans.case shifter shaft poppet	0805	38	Bolt-Body-No. 5 & No. 4	1800	67
Ball-universal joint	1005	10	Bolt-body No. 5 JeepDraw	1800	67
Bend-head	0601	51	Bolt-body No. 6	1800	67
Band-heed	0602	52	Bolt-bond strap to frame Bolt-bottom cover to case	0611	66
Bar-master cylinder-tie	1205	4	Bolt-brake drum	0800	36
Base-distributor	0603	54	Bolt-brake master cylinder outlet	1201	5
Bettery-15 plate	0601	52	Bolt-brush guard frame to bracket	1205 0505	4
Bearing-absorbent bronze	0604	53	Bolt-bumper impact bar to bracket	2101	39 64
Bearing-ball	0601	49	Bolt-carriage-plate to int.front cross mbr.	1500	18
Beering-clutch pilot	O205	35	Bolt-cover	0107	65
Bearing-clutch release	0505	35	Bolt-cylinder head	0101	22
Bearing-connecting rod-standard	0104	25	Bolt-divided rim	1301	1
Bearing-connecting rod010 undersize	0104	25	Bolt-element & wing-eir cleaner	0301	46
Bearing-connecting rod020 undersize Bearing-connecting rod030 undersize	0104	25	Bolt-emergency brake bracket to dosh	1201	6
Bearing-crankshaft-center lower-standard	0104	25	Bolt-end plate	1403	13
Bearing-crankshaft-center lower-standard Bearing-crankshaft-center lower-,010 undersize	0102	28	Bolt-exhmust pipe extension to skid plate	01/05	19
Boaring-crankshaft-conter lower020 undersize	0105	28 28	Bolt-erhaust pipe shield	0617	66
Bearing-crankshaft-center lower030 undersize	0102	58 58	Bolt-eye-master cylinder	1204	5 .
			Bolt-flywheel	0109	\$8

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Bolt-front sxle differential	1002	11	Bond strap-gas tube to dash	0611	65
Bolt-front cross member	1500	17	Bond strap-gear mounting	0611	66
Bolt-frt.fender apron-L-to top of frame	1701	42	Bond strap-ground assy-exhaust pipe	0611	65
Bolt-frt.fender brace to frame	1701	62	Bond strap-hand brake to heat indicator	0611	65
Bolt-front fender splack apron to frame	1701	62	Bond strap-hood to brush guard	0611	65
Bolt-front fender to battery bracket	1701	60	Bond strap-ignition coil to cyl. block	0611	66
Bolt-front fender to brush guard	1701	60	Bond-strap red.stud to flange cross mbr.tube	0611	66
Bolt-front spring clamp	1601	20	Bond strap-rear engine supt frame cr.mbr.stud	0611	66
Bolt-fuel tank holddown-bracket	0304	40	Bond strap-throttle & choke to dash	0611	65
Bolt-fuel tank shield to rear floor	0304	40	Boot-brake master cylinder	1205	4
Bolt-gear shifter housing	0706	33	Boot-brake wheel cylinder-front	1207	3
Bolt-generator sup ort insulator	0601	51	Boot-brake wheel cylinder-rear	1207	4 74
Bolt-headlamp support hinge to brush guard	0607	56	Bow top assy complete	2310 2310	74
Bolt-headlamp support hold down	0607 1704	-56	Bow-top front	•	,
Bolt-hood catch bracket to hood	1704	63 63	Bowl-fuel pump-metal	0302	43 41
Bolt-hood catch-to front fender	-	5	Bowl & center stud-gs to line struiner	0302	46
Bolt-her-brake cylinder	1203 1209	5	Brace-air cleaner support bracket	0301	
Bolt-her head-clip to flywheel housing Bolt-insulator to engine support brkt.	0101	2	Brake-front-RH	1202 1202	1
Bolt-insulator to support strap	0402	5.	Brake-front-LH	1701	62
Bolt-pivot bracket to covi flange	1801	5.7	Brace-front fender-HH	1701	62
Bolt-radiator mounting	0501	38	Brace-front fender-LH	1701	62
Bolt-rear axle differential cover	1103	15	Brace-front fender for voltage regulator	0601	51
Bolt-rear bearing cap to case	0804	37	Brace-generator	0601	
Bolt-rear brake to flange	1102	16	Brace-generator-short Brace-inst.panel to dash	1807	51 73
Bolt-rear spring	1601	21	/	1502	18
Bolt-eafety strap eye	1907	73	Brace-pintle hook Brake-hand	1201	5
Bolt-shield to frame	0301	1	Brake-rear-RE	1202	4
Bolt-skid plate to frame	1500	1.4	Brake-rear-IH JeepDraw	1202	14
Bolt-spare wheel support bracket	1505	-:	Bracket-accelerator cross shaft	0303	47
Bolt-spindle	1007	6	Bracket-air cleaner support-RH	0301	47
Bolt-spindle connecting rod clamp	1402	10	Bracket-air cleaner support-IH	0301	47
Bolt-spring shackle	1601	21	Bracket-& oil filter	0107	65
Bolt-steering gear housing cover	1403	13	Bracket-body side panel fuel tank holddown	0304	40
Bolt-steering knuckle bracket stop	1301	1	Bracket-choke lever-carburetor	0501	46
Bond strap-transfer case to body floor stud		66	Bracket-clutch	0202	35
Bolt-tie-front spring	1601	21	Bracket-clutch release equalizer shaft frame	0200	33
Bolt-tie-rear spring	1601	21	Bracket-engine crank	1807	72
Bolt-trens.case dowel	0804	37	Bracket-engine crank hold down	1807	72
Bolt-trans, case front brg, cap to case	0805	37	Bracket-engine mountiry-rear	0110	22
Bolt-trans, case shifter shaft poppet plug	0805	38	Bracket-engine support-M	0110	22
Bolt-trans.case support	0805	38	Bracket-engine support-LH	0110	22
Bolt-trans, main drive gear bearing ret.	0704	32	Bracket-fire extinguisher mounting	2306	64
Bolt-"U"-universal joint	0901 & 0902	10 16	Bracket-front axle to brake pipe tee	1209	5
Bolt-"U"-universal joint	0611	66	Bracket-front brake hose-RH	1209	3
Bolt-welded-strap	1302	+	Bracket-front brake hose-LH	1209	.3
Bolt-wheel hub	1302	1	Bracket-front shock absorber-RH	1603	65 68
Bolt-wheel hub-LH Bolt-wheel hub-RH	1302	î .	Bracket-front shock absorber-LH	1603	65 40
Bolt-12 cross member bracket	1500	17	Bracket-fuel tank holddown Bracket-hand brake ratchet tube	0304 1201	6
Bolt-#16 bond strap	0611	66	Bracket-hand reil front-RH	1807	73
Bolt-3/8-16 x 5/8 Hex head	2310	74	Bracket-hand rail front-LH	1807	73
Bolt-3/8-16 x 1.18 special shoulder	1804	71	Bracket-headlamp support-RH	0607	57
Bolt-3/8-16 x 1-1/2 hex shoulder	1801	67	Bracket-headlamp support-IH	0607	57
Bolt-1/4-20 x 1/2	1804	71	Bracket-hood catch	1704	63
Bolt-1/4-20 x 3/4 hex head	1807	72	Bracket-horn	0609	60
Bolt-1/4-20 x 1-7/16 hex head	1801	67	Bracket-ignition coil	0604	53
Bolt-5/16-18 x 1/2 Hex head	1807	73	Bracket-intermediate-cross member	1500	18
Bolt-5/16-18 x 5/8 Flat head	1807	73	Bracket-master cylinder mounting	1500	18
Bolt-5/16-18 x 5/8 hex head	1805	71	Bracket-mounting-front brake hose	1207	3
Bolt-5/16-18 x 5/8 hex head	1807	72	Bracket-muffler support	0402	19
Bolt-5/16-18 x 5/8 hex head	1807	73	Bracket-oil filter mounting	0107	65
Bolt-5/16-18 x 11/16 hex head	1804	71	Bracket-passenger seat pivot	1804	69
Bolt-5/16-18x1" welding	1807	72	Bracket-pivot-front	1503	21
Bond strap-cowl to hood	0611	66	Bracket-radiator	1500	17
Bond strep-cylinder head to dash	., 0611	65	Bracket-radiator gward	1500	17
Bond strep-engine front plate to frame	0611	66	Bracket-rear seat pivot	1804	69

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Bracket-rear shock absorber	1603	65	Cap-crankshaft bearing-front	0102	28
Bracket-retracting spring	1500	18	Cap-crankshaft bearing-center	0172	28
Bracket-seat back frame retaining	1804	69	Cap-distributor	0603	54
Bracket-seat rear stop	1804	69	Cap-drain	1807	72
Bracket-shovel	1807	73	Cap-front hub greese	1302	1
Bracket-spare wheel support	1505	1	Cap-fuel tank	0304	40
Bracket-spring shackle	1503	50	Cap-gear shift housing	0706	33
Bracket-starter drive end	0602	52	Cap-gas tank well drain	0304	40
Bracket-support-oil filler tube	0107	30	Cap-master cylinder filler	1205	4
Bracket-ewing arm	1801	67	Cap-radiator	0501	. 38 28
Bracket-tail light mounting	1807	72	Cap-rear main bearing	0102	
Brecket-top bow pivot	1807 1857	73	Cap-spark plug insulator	0603 1006	55 9
Bracket-windshield pivot Breaker-circuit-5 amps	0603	67 55	Cap-steering spindle pin Cap-transfer case output shaft front brg.	0805	38
Breaker-circuit-15 Amps	0603	55	Cap-universal joint bearing	0704	32
Breaker-circuit-30 amps	0603	55	Carburetor assy	0301	1414
Breather-trunsfer case	0804	37	Case-front-differential gear	1002	11
Brush-generator	. 0601	49	Case-rear axle differential gear	1103	15
Brush-grounded	0602	- 52	Case-transfer-assy	0800	36
Brush-horn wire contact	0609	. 60	Case-transmission	0701	/30
Brush-main	0601	49	Casing-speedometer	2203	64
Brush-starting motor	0602	52	Catch-hood-to front fender	1704	63
Bulb-headlamp	2607	56	Catch-windshield clamp	1801	67
Bulb-bleckout marker lamp	0607	58	Catch-windshield hold down	1801	67
Bulb-blackout marker lamp	0608	58	Chain-tire-6.00 x 16 heavy duty	2303	65
Bulb-instrument lamp	0606	62	Chain-top bow thumb acrew	2310	74
Bumper-axle	1602	21	Clamp-axe front	1807	73
Bumper bar-front	2101	64	Clamp-axe-rear	1907	73
Bumper-hood top windshield	1704	63	Check-pump discharge-carburetor	0301	46
Bumperette-rear	2101	64	Clamp-air cleaner tube	0301	47
Bushing-camshaft-front	0106	25	Clamp-carburetor air horn	0301	46 46
Bushing-carburetor tube clamp	0301	47	Clamp-carburetor tube Clamp-engine crank JeepDraw	1807	72
Bushing-generator armature terminal	0601	51	Clamp-front axle brake tube	1209	5
Bushing-generator brace locking	0601	51	Clemp-filter	0107	65
Bushing-insulating Bushing-insulating	0601 0602	149 52	Clamp-fuel pump valve	0108	44
Bushing-shock absorber mounting pin	1603	65	Clemp-fuel tank	0304	40
Bushing-speedometer drive pinion	2203	64	Clemp-hand brake & conduit to tee line	1209	. 5
Bushing-spring	1602	21	Clamp-hand brake conduit	1209	5
Bushing-spring sheckle-RH thread	1601	21	Clamp-hose	0301	47
Bushing-spring shackle-IH thread	1601	21	Clamp-muffler inlet pipe to muffler	0408	19
Bushing-starter motor	0602	52	Clamp-muffler support	orus	19
Bushing-steering column support clamp	1404	15	Clamp-apindle connecting rod	1402	10
Bushing-steering-sector shaft-long	1403	13	Clamp-spring-front-long	1601	20
Bushing-steering sector shaft-short	1403	13	Clamp-spring-front-short	1601	50
Bushing-transfer case output shaft cl.pilot	0805	38	Clamp-spring-rear-long	1601	21
Bushing-trans, countershaft gear	0704	32	Clamp-spring-rear-short	1601	21
Bushing-trans, main shaft & inter, gear	0704	32	Clamp-steering column support	1403 0402	12
Bushing-trans, reverse idler gear	0704	32	Clamp-tail pipe Clamp-windshield	1801	19 67
Button-horn switch	1404	15	Cleaner-air-oil type	0301	65
. С			Clevis-clutch release fork cable	0204	34
			Clevie pin-brake support quadrant pin	1201	6
Cable-battery to starter switch positive	0606	60	Clevis pin-cable to relay crank	1201	6
Cable-engine stay	0110	22	Clinch mut-voltage	1701	63
Cable-hoadlamp ground	0606	61	Clip	0607	57
Cable-spark plug #1	0603	55	Clip-accelerator retracting spring	0303	47
Cable-spark plug #2	0603	55 55	Clip-accelerator retracting apring	0303	49
Cable-spark plug #3	0603	55	Clip-breke pipe	1209	3
Cable-spark plug #4 Cable-starting switch to starting motor	0603 0606	55 61	Clip-brake pipe	1209	5
Cage-front universal joint	1005	9	Clip-brake pipe to side rail	1209	5
	_		Clip-breke tube	1209	5
Cam-brake anchor pin Cam-hand brake band	1203 1201	2 6	Clip-breaker arm spring	0603	55
Camsheft	0106	25	Clip-front spring Clip-front spring-RH side	1601 1601	21
Cap & bushing-trans.case output shaft	0805	37	Clip-front apring-re side Clip-fuel line	0302	21
Cap-cover-commutator and	0601	49	Clip-hand brake cable spring lock	1201	43 6
		-	early-ming profe coops alt till rock	1201	C

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Clip-hand brake cable support	1209	5	Cover-filter	0107	65
Clip-oil filter tube	0107	65	Cover-filter group	0611	66
Clip-oil gauge tube to dash	0606	61	Cover-front axle differential	1002	
Clip-rear spring	1601	21	Cover-fuel gauge	0302	11 43
Clip-wire 3/16	0606	62	Cover-fuel pump top	0302	43
Clip-wire 1/4	0606	61	Cover-gasoline strainer	0304	40
Clip-wire 5/16	0606	61	Cover-gear shift lever housing	1802	69
Clip-wire-battery cable to dash	0606	61	Cover-headlamp	0607	56
Clip-wiring-fuel line-oil filter tube	060€	62	Cover-oil pump	0107	30
Clutch control lever cable	0204	34	Cover-rear sxle differential	1103	15
Clutch pedal pad	0204	31	Cover-shock absorber-RH	1807	72
Clutch-release equalizer shaft bracket	0200	33	Cover-shock absorber-LH	1807	72
Oock-drain-cylinder water jacket	0501	38	Cover-side crash ped-RH	1804	69
Coil-field	0601	51	Cover-side crash pad-LH	1804	69
Coil-field-R	0601	51	Cover-steering gear housing end	1403	13
Coil-field-L	0601	51	Cover-terminal slot	0603	55
Coil-field & brush-lower R	0602	52	Cover-timing hole	0704	30
Coil-field & brush-lower L	0602	52	Cover-transfer case-bottom	0800	36
Coil-field-upper R	0602	52	Cover-transfer case-rear	0800	36
Coil-field-upper L	0602	52	Cover-transmission	1807	72
Coil-ignition	0604	53	Cover-transmission case inspection	0500	34
Coil-ignition-& bracket	0604	53	Cover-valve chamber	01/15	29
Coller-dist. sheft	0603	55	Cover-windshield	1801	67
Condenser	0603	55	Crank-hand brake relay	1201	6
Cone & roller-trans.case output shaft	0802	37	Crank-etarting	2306	63
Cone & roller-wheel bearing	1302	1	Crenkcase-ventilator	0107	30
Connection-accelerator hinge	0303	47	Crankshaft	0102	28
Connection-fuel flexible Connector-2 wire clip-15 amp	0302 0606	43	Cross member-center	1500	17
Connector-3 wire clip-15 amp	0606	61	Cross member-intermediate	1500	17
Connector-field coil	· 0602	61	Cross member-front	1500	17
Connector-fuel line	0302	52 43	Cross member-resr	1500	17
Connector-rear brake line	1207	3	Cup-air cleaner	0301	47
Connector terminal & insulator	0606	61	Cup-brake wheel-cylinder-rear	1207	4 .
Contact-horn button	1404	15	Cup-brake wheel-front	1207	3
Control-carburetor choke	0303	47	Cup-clutch pressure spring	0505	35
Control-carburetor throttle	0503	49	Cup-driving pinion-front Cup-driving pinion front bearing	1104	16
Cotter-axle sheft nut	1202	1	Cup-front axle differential hearing	1003	11
Cotter-oil float to support	0107	29	Cup-front axle driving pinion front bearing	1002	11
Cotter pin	1603	65	Cup-front exle spindle bearing	1006	11 9
Cotter pin-accelerator cross shaft	0303	47	Cup-gear shifter shaft oil retainer	0704	32
Cotter pin-accelerator cross shaft lever	0303	49	Cup-master cylinder check valve	1205	ےر با
Cotter pin-accelerator treadle hinge	0303	49	Cup-master cylinder primary	1205	4
Cotter pin-bell crank shaft	1006	9	Cup-master cylinder secondary	1205	4
Cotter pin-brake cam	1201	6	Cup-rear exle differential bearing	1103	15
Cotter pin-brake support quadrant pin	1201	6	Cup-rear axle driving pinion front	1104	16
Cotter pin-cable to relay crank	1201	6	Cup-retaining-transfer case insulator	1500	18
Cotter pin-clutch control spring	02O4	34	Cup-steering geer worm bearing	1403	13
Cotter pin-drive pinion	1104	16	Cup-transfer case output shaft	0802	37
Cotter pin-eye bolt to pedal	150/1	5	Cup-wheel bearing	1302	1
Cotter pin-front axle drive pinion	1003	11	Curtain-side-LH	2310	74
Cotter pin-generator-3/32 x 1	0601	49	Curtain-side-RH	2310	74
Cotter pin-headlamp support hold down bolt	0607	56	Cylinder-essy	0101	22
Cotter pin-pedel rod	0204	34	Cylinder-brake master	1205	l _k
Cotter pin-pedals to shaft	1204	5	Cylinder-front brake	1207	3
Cotter pin-pedals to shaft	0204	34	Cylinder-rear brake JeepDraw	1207	4
Cotter pin-shackle bolt	1601	21	Cylinder-rear brake	1209	5
Cotter pin-steering connecting rod	1401	10			
Cotter pin-throttle rod adj.bracket	0303	49			
Cotter pin-transmission case	1201	6			
Cotter pin-universal flance	0804 0800	37			

44

Cotter pin-universal flange

Countershaft-transmission

Cover-engine front

Cover & pin-carburetor bowl

Cover-brake cylinder inspection

Cotter pin-yoke end to control lever

Name	Gov't Group	Page No.	Name	Gov't Group	Pag No.
			Fitting-greese-shackle bolt	1601	21
D			Foot rest-accelerator	0303	47
Deck-top	2310	74	Fork-transfer case under drive shifting	0806	37
Deflector-rediator top air	0501	38	Fork-transfer case front axle shift	0806 0200	37 33
Deflector-radiator side sir-RH	0501	38	Fork-clutch release Fork-low & reverse gear shift	0706	33
Deflector-redistor side sir-LH	0501	38	Fork-high & inter_gear shift	0706	33
Diaphragm-fuel pump-pull rod	0302	43	Frame	1500	17
Disc-oil pump rotor	0107	30	Frame-windshield	1801	67
Disc-metering rod Disc-clutch	0301	47	Frame-windshield lower	1801	69
	œ01	35	Frame-windshield upper	1801	69
Distributor-ignition Door-blackout tail & stop lamp	0603	54	Frame-battery hold down	1500	18
Door-blackout tail & service lamp	0608	58	Frame-pessenger seat	1804	69
Door assy	0608	58	Frame-driver's seat	1804	69
Door assy	0607 0607	57	Frame-rear seat	1804	69
Dowel-flywheel crankshaft	0109	57 28	Frame-rear seat cushion	1804	69
Dowel-crankshaft bushing	0102	28	Fuel pump filtering screen	0302	43
Drive-Bendix	0602	52	Fulcrum-clutch release lever	0500	33
Drum-hand brake	1201	5			
			G		
Eccentric-brake adjusting	1203	2	a to the transfer to the	3000	
Elbow-oil filter	0107	65	Casket-brake hose	1209	2 14 la
Element-oil filter	0107	65	Gasket-carburetor body flange	0301 0301	44
Elbow-water outlet	0505	39	Gesket-carburetor bowl cover Gesket-carburetor insulator	0108	44
Elbov-fuel tank line connector	0302	43	Gesket-carburetor metering rod jet & plug	0301	46
End-spindle connecting rod & drag link-LH	1402	10	Gasket-carburetor needle	0301	46
End-spindle connecting rod-RH	1402	10	Gasket-carburetor nozzle	0301	47
Engine-assy-includes clutch, flywheel housing- less transmission & starter	0100	55	Gasket-carburetor strainer plug	0301	46
Engine-less all electrical units, carburetor,			Gesket-copper pump cover screw	0107	30
fan, belt, air clur., fuel pump, clutch & trans.	0100	22	Gesket-crankshaft oil slinger	0102	28
Extinguisher-fire-with holder	2306	67	Gesket-cylinder block-front	0101	22
_	2,00	63	Gasket-cylinder head	0101	55
F			Gasket-door	0607	57
Fan-assy	0507	1.0	Gesket-end cap cover	0601	49
Fan-assy-shroud	0503 0501	40 38	Geaket-filter cover JeepDraw	0107	65 65
Facing-clutch disc	0201	35	Gasket-filter cover bolt Gasket-float support	0107 0107	29
Facing-clutch disc	0505	35		1002	
Fastener-socket	2310	74	Gasket-front axle differential housing Gasket-front cover	0106	28 21
Fastener-eyelet	2310	74	Gesket-front-pinion oil seal	1003	11
Fastener-male	2310	74	Gasket-fuel pump	0302	44
Fastener-cinch type stud	1801	67	Gasket-fuel pump bowl	0302	43
Fastener-washer	1801	67	Gesket-fuel pump valve	0302	43
Fastener-eyelet	1801	67	Gesket-fuel tank cap	0304	40
Fastener-cap	1801	67	Gasket-fuel tank gauge	0302	43
Festener-post Fender-front-complete-RH	1801	67	Gasket-fuel tank well drein cap	0304	40
Fender-front-complete-LH	1701	62	Gasket-gasoline strainer	0302	43
Ferrule-universal joint spider	1701	62	Geeket-gasoline strainer bowl	0302	41
Flange & sealer-trans, case univ. joint-front	0802	32 37	Casket-gasoline strainer cover cap screw Casket-gear shift housing	0302 0706	43 33
Flange-front hub-driving	1005	9	Gesket-intake to exhaust manifold	0108	22 44
Flange & sealer-trans.case univ.joint rear	1104	17	Gasket-lower oil cup	0301	46
Flange-universal joint axle end	1104	17	Gasket-manifold	0108	44
Flange-exhaust pipe	0402	19	Gasket-master cylinder filler	1205	14
Flange & sealer-transfer case univ. joint rear	0902	38	Gasket-master cylinder outlet-large	1205	1,
Flange-front univ. joint-axle end	0902	32	Gasket-master cylinder outlet-small	1205	1,
Flange-front universal joint-axle end	1003	11	Gasket-muffler inlet pipe to exhaust manifold	0108	44
Float -oil pump	0107	29	Gnoket-oil pan	0107	30
Float & lever-carburetor Flywheel	0301	46	Gasket-oil pan drain plug	0107	30
Filler-front fender brace	0109	28	Gasket-oil pan drain plug	0603	55
Filler-front bumper bar	1701	62	Gueket-oil pump body to cylinder block	0107 0107	30
Filler-front bumper ber	2101	64 64	Gasket-oil pump cover Casket-oil pump oil relief apring rat.	0107	30 30
Fitting-brake master cylinder outlet	1205	t _i	Gacket-pivot oil seal retainer	1301	1
Filtor-fuel	0302	41	Gasket-pump cover	0107	50
Fitting-grease-pivot pin	0805	38	Geoket-pump shaft	0107	39
		2-		_	

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Casket-radiator cap	0501	38	Guide-valve stem-exhaust	0105	28
Gasket-reer axle differential housing	1103	15	Guide-valve stem-intake	0105	28
Gasket-rear axle pinion oil seal	1104	16	Gun-lubricating-push type	2306	64
Gesket-rear axle shaft	1103	15	Gusset-front bumper-lower-RH	2101	64
Gasket set-carburetor	0301	44	Gusset-front bumper-lower-IH	2101	64
Gasket set-front axle	1000	7	Gusset-front bumper-upper-RH	2101	64
Gasket set-motor	0100	21	Gusset-front bumper-upper-LH	2101	64
Gasket set-oil pen	0107	30	• • • • • • •	4201	04
Gasket set-rear exle	1100	15			
Gasket set-trensmission	0700	30			
Gasket set-valve	0100	55			
Gesket-spark plug	0603	55			
Gasket-speedometer lens	2203	64	_		
Gasket-steering gear housing cover	1403	13	H		
Gasket-transfer case	0800	36	Hammer	2306	6.
Gasket-transfer case	0804	37	Handle-body outside-front	2306 1805	65
Gasket-transfer case bottom cover	0800	36	Handle-body cutside-rear corner	1805	71 71
Gasket-transfer case cover-rear	0800	36	Handle-hand breke	1201	6
Casket-transfer case oil seal	0804	37	Handle-spark plug wrench	2306	63
Gaaket-transmission case	0701	30	Head-cylinder	0101	22
Qasket-transmission case	c704	30	Head-drive end-esey	0601	51
Gasket-trans, case front brg.cap	0805	37	Head-driving	0602	53
Casket-trans, geer shift housing cap	0706	33	Heedlamp-sssy-RH		
Gaaket-upper body	0301	46	Heedlamp-assy-LH	0607 0607	56
Casket-valve chamber cover screv	0105	29	Hinge-accelerator treadle-female	0303	56 47
Gasket-valve spring cover	0105	29	Hinge-glove compartment	1307	73
Gasket-ventilator to valve spring	0107	30	Hinge-headlamp support	0607	56
Gasket-water outlet elbow	0505	39	Hinge-hood	1704	63
Gasket-water pump to cylinder block	0503	39	Titana tanà amin'ny fivondronana	1806	71
Gauge-fuel	0302	43	Holder-brush	0608	52
Gauge-fuel tenk	0302	43	Holder-oil can JeepDraw	2306	63
Gauge-oil pressure	0302	43	Hook-chassis pintle	1502	18
Geer & pinion-driving-front axle	1002	11	Horn-sir	0301	44
Gear & pinion-driving-rear axle Gear-front-differential	1103	15 11	Horn assy-6 volt	06/09	60
Gear-oil pump driven	1002 0107	29	Horn-carburetor sir cleaner	0301	47
Gear-rear axle differential	1102	16	Hose-brake-front	1209	3
Gear-ring-flywheel	0109	28	Hose-brake-rear	1209	3
Gear-speedometer driven	2203	64	Hose-clump	0505	39
Gear-steering	1403	12	Hose-flexible-cleaner tube	0301	47
Gear-transfer case-intermediate	0804	37	Hose-radiator upper	0505	39
Geer-transfer case main shaft	0802	37	Hose-radiator water outlet	0505	39
Gear-trans.case clutch	0804	37	Housing assy-RH	0607	58
Gear-trans.case output shaft rear sliding	0805	37	Housing assy-LH	0607	58
Gear-transmission countershaft	0704	32	Housing-flywheel	0109	28
Gear-trans.high & inter, sliding	0704	32	Housing-front sxle	1001	8
Gear-trans, low & reverse sliding	0704	32	Housing-gear shift	0706	33
Gear-transmission main drive	0704	30	Housing-rear axle	1101	15
Gear-trans, reverse idler	0704	32	Housing-steering gear	1403	13
Gear-transfer case output shaft	0805	37	Housing-sub	0607	56
Generator assy-complete	0601	49	Housing-sub assy	0608	58
Generator-support	0601	51	Hub & drum-RH Hub & drum-IH	1302	1
Glass-windshield	1801	69	Hub-clutch release bearing	1502 0201	1
Grommet-dist, wiring	0604	53	Hub-trans, inter, & high clutch	0704	35 32
Grommet-oil filter bracket	0107	65	nav-cialis, invoi, & night ciacch	0704	25
Grommet-pedal sheft	1204	5	I		
Grommet-rear lamp to body Grommet-rubber	0608	58	T11		
Grommet-rubber-split	0608	58	Impeller-water pump	0503	39
Ground strap-voltage regulator generator	0302 0611	43	Indicator-best Indicator-oil filler	0601	52
Grommet-transfer shift lever	1802	65 60	Insulator-oil liller Insulator-air horn to throttle body	0107	30 46
Guard-brush		69	Insulator-dash-RH	0301 18 07	73
Guard-flat oil	0505 0601	39	Insulator-dash-LH	1807	73
Guard-front brake hose	1209	51 3	Insulator-engine support	0110	22
Guard-fuel tank stone-front	0304	40	Insulator-engine support-front	0110	22
Guard-fuel tank stone-rear	0304	40	Insulator-engine support-rear	0110	22
Guerd-fuel tank stone-L	0304	40	Insulator-field connection	0601	51
Ouide-generator brace adjusting	0601	51	Insulator-field connection	0602	52

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Insulator-generator armsture terminal	0601	51	Leaf #1-rear spring	1601	21
Insulator-generator field terminal	0601	51	Leaf #2-rear spring	1601	21
Insulator-generator support	0601	51	Leaf #3-rear spring	1601	21
Insulator-horn wire terminal	1404	15	Leaf #4-reer spring	1601	21
Inaulator-muffler support	CH02	50	Leaf #5-rear spring	1601	21
Insulator-starter brush holder	୯୯୯୯	52	Leaf #6-rear apring	1601	21
Inaulator-terminal post bottom	0601	49	Leaf #7-rear spring	1601	21
Insulator-terminal post bottom	0601	51	Leaf #8-rear spring	1601	21
Insulator-terminal post top	0601	51	Leaf #9-rear spring	1601	21
Insulator-transfer case support	0805	38	Lever-clutch release	0505	35
Interlock-transfer case shifter shaft	0805	38	Lever-gear shifter	0706	33
J			Lever-heat control velve counter weight	0108	44
			Lever-pump operating-carburetor	0301	46
Jack-screw type	230€	63	Lever & shaft-choke-carburetor	0301	46
Jet & gasket-metering rod-carburetor	0301	47	Lever-transfer case front wheel shift	0806	37
Jet-carburetor idle well	0301	46	Lever-transfer case under drive shift. Lid-tool compartment-& hinge	0805	38
Jet-carburetor pump	0301	47	Liner-brush guard	1806	71
Jet-low speed-carburetor	0301	46	Lining-brake-forward	0505	39
Joint-front wheel universel	1005	9	_	1202	2
Joint-universal-front wheel & axle shaft-RH		9	Lining-brake-reverse Lining-hend brake	1202	5
Joint-universal-front wheel & axle shaft-LH	1005	9	Link-accelerator connector	1201	.5
K			JeepDraw JeepDraw	0303	47
			Link-choker-carburetor	1205	4
Key-control lever	0108	44	Link-connecting-carburetor pump	0301	46 46
Key-generator-#5 Woodruff	0601	49	Link-fuel pump rocker arm	0301	
Key-ignition lock	1404	15	Link-hand brake relay crank bearing cap	0302 1201	43 6
Key-#6 Woodruff	0602	52	Link-hand brake to transmission	1201	6
Key-#9 Woodruff clutch pedal	c204	34	Link-steering drag	1401	10
Key-#9 Woodruff-pulley	0102	28	Lock & cylinder-ignition	1404	15
Key-#15 Woodruff-sprocket	0102	28	Lock-spare wheel	1505	ĩ
Kit-carburetor repair	0301	44	Lock-tool compartment lid	1806	71
Kit-distributor breaker point service	0603	54	Lock-valve apring retainer-lover	0105	53
Kit-front wheel cylinder repair	1207	5	Lockwasher	0605	53
Kit-fuel pump repeir	0302	43-	Lockwasher-accelerator cross shaft bracket	0303	47
Kit-master cylinder repair	1205	4	Lockwasher-air cleaner support bracket	0301	46
Kit-rear wheel cylinder repair	1207	14	Lockwasher-air horn	0301	46
Kit-universal joint spider Knob & inner arm	0902 1801	32 64	Lockwacher-armature terminal	0601	51
Knuckle & spider-front drive shaft	0901 & 0902	10	Lockwosher-oxle shaft	1302	1
Knuckle & spider-rear drive shaft	1102	16	Lockwasher-bettery bracket	1500	18
Knuckle-eteering-RH	1006	9	Lockwacher-bearing cap	0107	30
Knuckle-steering-LH	1006	9	Lockvasher-bell housing to transmission	0602	52
Knuckle-universel joint	1104	17	Lockwasher-blackout marker lamp	0607	57
Knuckle-universal joint	0902	32	Lockwasher-blackout merker lamp bolt	0607	57
		-	Lockwasher-blackout switch terminal screw	0602	53
L			Lockwasher-body flange	0301	44
Lamp-blackout marker-RH	0607	57	Lockwesher-bond strap cowl to hood	0611	66
Lamp-blackout marker-LH	0607	57	Lockwasher-bond strap to brush guard Lockwasher-bond strap to engine support	0611 0606	66
Lamp-blackout tail & service	0608	58	Lockwasher-bond strap to front engine plate	0606	60 60
Lamp-blackout tail & stop	0608	58	Lockwasher-bottom cover to case	0800	
Latch-glove compt.	1807	73	Lockwasher-bowl cover	0301	36 եե
Load assy	0601	49	Lockwasher-brace to generator	0601	51
Leaf #1-front R spring	1601	20	Lockwasher-bracket to support	1201	6
Leaf #1-front L spring	1601	20	Lockwasher-bracket to support	1404	15
Leaf #2-front R spring	1601	20	Lockwasher-bracket to trans, case	0110	22
Leaf #2-front L apring	1601	20	Lockwasher-brake adjusting stud	1203	2
Leaf #3-front R spring	1601	20	Lockweaher-brake anchor pin	1205	5
Leaf #3-front L spring	1601	50	Lockwasher-brake backing plate	1202	1
Leaf #4-front R spring	1601	50	Lockwasher-brake band cap screw	1201	6
Leaf #4-front L spring	1601	20	Lockwasher-brake cylinder	1203	2
Leaf #5-front R spring	1601	20	Lockwasher-brake drum	1201	5
Leaf #5-front L spring	1601	20	Lockwasher-brake tube clip & wiring clip	1209	5
Leaf #6-front R spring	1601	50	Lockvesher-brush guard frame to bracket	0505	59
Leaf #6-front L spring	1601	50	Lackwasher-brush to column	0609	60
Leef #7-front R spring	1601	20	Lockwasher-camshaft sprocket cap screw	0106	25
Leaf #7-front L spring	1601	20	Lockwesher-carb, choke & throttle control	0505	47
Leaf #8-front spring	1601	20	Lockwesher-circuit breaker to fender splasher	0601	52

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Lockwasher-circuit breaker to bracket	0603	55	*	aroup	110.
Lockwasher-clips	0606	62	Lockwesher-ignition dist, to cylinder block	0604	53
Lockwasher-clip to dash	0302	43	Lockwasher-instrument penel light switch Lockwasher-insulator rear	0606	60
Lockwasher-clip to flywheel housing	1209	5		0101	25
Lockwasher-clutch adjusting screw	0505	35	Lockwasher-insulator to engine supt.brkt. Lockwasher-insulator to front engine plate	0101	25
Lockwasher-clutch control	0200	33	Lockwasher-insulator to support strap	0101	25
Lockwasher-clutch pedal clamp bolt	0204	34	Lockwesher-inter, shaft lock plate	0402	20
Lockwasher-coil bracket	0604	53	Lockwasher-junction block to dash	0805 0606	37
Lockwasher-conduit clamp to air cleaner brkt. Lockwasher-control bracket to frame	1209	5	Lockwasher-master cylinder tie ber to brkt.		61
Lockwasher-cover to bell housing	0200 0200	33	Lockwasher-mester cylinder to bracket	1500 1500	18 18
Lockwasher-differential bearing cap	1002	34 11	Lockwasher-muffler support clemp	0402	19
Lockwasher-differential bearing cap screw	1103	15	Lockwasher-oil can bracket to dash	2306	63
Lockwasher-dimmer switch to floor	0606	60	Lockwasher-oil float support	0107	30
Lockwasher-distributor-46	0603	54	Lockwasher-oil pan to cylinder block	0501	38
Lockwasher-distributor-#10	0603	54	Lockwasher-outlet elbow cap acrew	0505	39
Lockwasher-emergency brake bracket	1201	6	Lockwasher-pedal shank	1204	5
Lockwasher-emergency brake bracket to dash	1201	6	Lockwasher-pedal shank to pedal	n204	34
Lockwesher-end plate	1403	13	Lockwasher-piston pin lock screv	6103	25
Lockwasher-engine stay cable	0110	55	Lockwasher-pivot bracket to cowl flange Lockwasher-pivot oil seal ret.	1801	67
Lockwesher-exh manifold to intake manifold	0108	la ža	Lockwesher-plate & cover	1301	1
Lockvasher-exhaust pipe shield Lockvasher-exhaust pipe shield	1500	18	Lockweeher-plate to block	0106	28
	0611	66	Lockwasher-pump to cylinder block	0101	55
Lockwasher-exhaust pipe extension to skid plate Lockwasher-exhaust pipe to muffler clamp		19	Lockwesher-pump to cylinder block	0107	30
Lockwasher-extinguisher mtg.bracket to body	0402 2306	19 64	Lockwasher-radiator brace rod	0503	39
Lockwasher-extinguisher to mounting bracket	2306	64	Lockwasher-rear axle differential cover	0501 1103	38 15
Lockwasher-fen	0503	40	Lockwesher-reer brake to flange	1202	4
Lockwasher-flange clamp bolt	0402	19	Lockwasher-rear cover screw	0800	36
Lockwasher-flange stud	0301	44	Lockwesher-reflector to body	8030	58
Lockwasher-flywheel dowel	0109	28	Lockwasher-reflector to body side panel	0608	58
Lockwesher-filter to dash	0302	43	Lockwasher-shield to frame	6301	47
Local design to	0107	65	Lockwasher-spere wheel support brkt.	1505	1
Lockwasher-filter to fender	0611	66	Lockwesher-spindle connecting rod clemp	1402	10
Lockwasher-filter bracket to dash	0611	66	Lockwasher-sterter switch cable battery	060€	53
Lockwasher-front axle differential Lockwasher-front bumper bar	1002	11	Lockvasher-starter switch cable to switch Lockvasher-starter switch to floor	0608	53
Lockwasher-front bumper bar to wood filler	2101	€1	Lockweeher-starter-5/16	0602	53
Lockwasher-front cover	2101	64	Lockwasher-starter-#10	0602	52
Lockwasher-frt.fender spron-L-to top of frame	0101 1701	55	Lockwasher-starting motor-3/8	0608 0608	52
Lockwasher-front fender brace to frame	1701	62 62	Lockwesher-steering arm to knuckle	1005	52
Lockwasher-front fender splash apron to frame	1701	62	Lockwasher-steering arm to knuckle	1007	9
Lockwasher-front fender to bettery bracket	1701	62	Lockwasher-steering column clamp bolt	1403	9 12
Lockwasher-front fender to brush guard	1701	62	Lockwasher-steering gear housing cover	1403	15
Lockwasher-front fender to cowl step	1701	62	Lockwasher-steering gear to frame	1403	13
Lockwasher-front spring clip	1601	21	Lockwasher-steering sector shaft nut	1403	13
Lockwasher-fuel gauge wire to tank unit	0302	43	Lockwasher-strap to dash stud	0611	66
Lockwesher-fuel pump to cylinder block	0302	44	Lockwasher-support bolt	0805	38
Lockwasher-fuel tenk holddown-bracket	0304	40	Lockwasher-support to crankcase	0602	53
Lockwasher-fuel tank hold down clamp	0304	40	Lockwasher-support to starting motor	0602	53
Lockwasher-fuel tank shield to rear floor Lockwasher-geer shifter housing	0304	40	Lockwasher-support to cylinder block Lockwasher-teil lamp	0601	51
Lockwasher-generator brace pivot screw	0706 0601	33	Lockwasher-tee to axle tube	0608	58
Lockwasher-gen, reg. filter field wire screw	0611	51 66	Lockweaher-terminal to circuit breaker	1207	3
Lockwasher-generator support insulator bolt	0601	51	Lockwesher-terminal to horn	0603 0609	55
Lockwasher-generator-1/4	0601	49	Lockwasher-tie bar & shield to master cylinder	1500	60 18
Lockwanner-generator-#6	0601	49	Lockwasher-timing hole cover screw	0704	30
Lockwaher-generator-#8	0601	49	Lockwasher-top cover to body	0302	43
Lockwesher-guide to brace	0601	51	Lockwasher-transfer case	0200	33
Lockwasher-headlamp harmess clip	0606	61	Lockwasher-transfer case to trans. case	0804	37
Lockwasher-hdlamp.stud to hdlamp hinge brkt.	0607	57	Lockwasher-trans, main bearing retainer	0704	32
Lockwasher-headlamp supt, hinge to brush guard	0607	56	Lockwasher-trans, to engine plate	0804	37
Lockwasher-hood catch bracket to hood Lockwasher-hood catch-to front fender	1704	63	Lockwasher-treadle-to toe board	0303	49
Lockwasher-hood bings assy-to cowl top	1704	63	Lockwasher-tube to dash	0606	61
Lockwasher-hood top to windshield bumper	1704 1704	63		01 & 0902	10
Lockwasher-horn bracket to dash	0609	63 60	Lockwasher-universal joint "U" bolt Lockwasher-windshield wiper knob	1102	16
Lockwasher-horn to bracket	0609	60	Lockwasher-wiring harmess	1801 0606	64 61
				4000	91

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Lockwasher-wiring to housing ground headlamp	0607	56	Nut-clamp lever to shaft	0108	44
Lockwasher-5/16	1805	71	Mut-clip to desh	0302	43
Lockwesher-5/16	1807	72	Nut-clutch edjusting screw lock	0505	35
Lockweeher-5/16	1507	73	Nut-clutch control	0200	33
Lockwasher-5/16-rear view mirror to cowl	2201	64	Nut-clutch pedal clamp bolt	02.04	34
Lockwacher-3/8	1800	67	Nut-coil bracket	0604	53
Lockwasher-3/8	1804	71	Nut-conduit clamp to sir cleaner bracket	1209	5
Lockwasher-1/4-air deflector to hood	0501	38	Nut-connecting rod cap bolt Nut-cylinder head stud	0104	25
Lockvasher-1/4	1801	67	Nut-drive pinion	0101	55
Lockwasher-1/4 Lockwasher-1/4	1801 1804	69 69	Nut-emergency brake bracket to dash	1104	16
· _	1804	71	Nut-emergency brake brkt.to ratchet tube brkt.	1201	6
Lockwasher-#2 cross member bracket	1500	17	Mut-engine stay cable	1201 0110	6
Lockwesher-No. 8	1801	67	Nut-exhaust pipe extension to skid plate	0110	22 19
Lockwasher-No. 10	1804	71	Nut-exhaust pipe shield	0611	66
Lockwashor-No.10	1807	72	Nut-exhaust pipe to muffler clamp	0402	19
Lockwasher #12-rear view mirror to cowl	2201	64	Nut-extinguisher mtg. bracket to body	2306	64
Loop-footmen	1807	72	Nut-extinguisher to mounting bracket	2306	64
Loop-footmen	1807	73	Nut-eye bolt	1204	5
Loop-footman	2310	74	Nut-filter to dash	0302	43
Loop-windshield hold down	1801	69	Nut-filter to fender	0611	66
Lubricator-bell crank arm	1401	10	Nut-flange clamp bolt	0402	19
Lubricator fitting	1209	3	Nut-flange to exhaust manifold	0108	44
Lubricator fitting-bell crank	1006	9	Nut-flywheel dowel	0109	28
Lubricator fitting-brake pedal	1204	5	Nut-front axle drive pinion	1003	11
ж			Nut-front bumper bar	2101	64
3 1			Nut-front bumper bar to wood filler	2101	64
Menifold-exhaust ^	0108	la la	Mut-front cover	0101	22
Manifold-intake	0108	يليا	Nut-front engine support	0110	22
Manifold-intake & exhaust	0108	يليا	Mut-front fender to brush guard	1701	62
Member-front cross-assy	1807	72	Nut-front fender to cowl	1701	62
Mamber-rear cross-sasy	1807	72	Nut-front fender to cowl step	1701	62
Mirror-rear view JeepDraw	2201	64	Nut-front shock sbsorber bracket-RH Nut-front spring clemp	1603	65
Motor-starting	0602	52	Nut-front spring clip	1601	50
Mould-water pump	0503	39	Nut-front-wheel bearing	1601	21
Muffler	0401	19	Nut-fuel tank hold down clamp	1002	11
N			Nut-fuel tank shield to rear floor	0304 0304	40 40
N 12	0301	46	Neck-fuel tank well drain hole	1807	72
Needle-spring & sest-corburator	0301	47	Nut-gas strainer thumb	0302	41
Nozzle-carburetor Nut-accelerator cross shaft bracket	0303	47	Nut-generator brace pivot acrew	0601	51
Nut-accelerator foot rest lock	0303	47	Nut-gen, reg. filter unit field wire	0611	66
Nut-accelerator root rest lock Nut-accelerator retracting spring clip	0303	47	Nut-generator support insulator bolt Nut-generator-1/2-20 Castellated	0601	51
Nut-adj. yoke lock	0204	34	West conservation of the transfer	0601	49
Nut-air cleaner support bracket	0301	46	Nut-generator-#10-32 hex	0601	49
Nut-ermature terminal	0601	51	Nut-generator-#10-32 square	0601	49
Nut-axle tube clamp acrew	1209	5	Nut-guide to brace	0601	49
Nut-battery terminal	0606	60	Nut-hand brake adjusting	0601	51
Nut-bell grank chaft	1006	9	Nut-headlamp harness clip	1201 9606	6.
Nut-blackout marker lamp bolt	0607	57	Nut-headlamp stud to headlamp hinge brkt.	0607	61
Nut-bond strap to brush guard	0611	66	Nut-headlamp support hinge to brush guard	0607	56 56
Nut-bond strap to engine support	0606	60	Nut-headlamp to support	0607	
Nut-bond strap to frame	0611	66	Nut-hex-breke adjusting stud	1203	56 2
Nut-bond strap to front engine plate	0606	60	Nut-hex-brake anchor pin	1203	2
Nut-brace to generator	0601	51	Nut-hex-clips	0606	62
Nut-bracket to support	1201	6	Nut-hex-control bracket to frame	0200	33
Nut-bracket to support	1404	15	Nut-hex-transmission case nut	1201	6
Nut-brake band cap screw	1201	6	Mut-hood catch-to front fender	1704	63
Nut-brake drum	1201	5	Nut-hood catch bracket to hood	1704	63
Nut-brake pipe	1209	3	Nut-hood hinge assy-to cowl top	1704	63
Nut-brake tube clip & wiring clip	1209	5	Nut-hood top to windshield bumper	1704	63
Nut-brush guard frame to bracket	0505	39	Mut-horn bracket to deah	0609	60
Mut-carb, choke & throttle control	0303	47	Mut-insulator rear	0101	25
Nut-carburetor to air cleaner tube clamp	0301	47	Nut-insulator to engine support bracket	0101	25
Nut-carburetor to inlet manifold	0108	1414	Mut-insulator to front engine plate	0101	25
Nut-carburetor tube clamp	0301	46	Mut-insulator to support strap	0402	20
Nut-circuit breaker to bracket	0603	55	Mut-insulator to support strap-body sill	0402	50

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
But-junction blocks to dash	0606	61	Nut #2 cross member bracket	-	
Mut-menifold stud	0108	44	Nut-No.10 blind	1500 1801	17
Nut-master cylinder mounting bracket	1500	18	Nut-No.10 speed	1807	69 73
Mut-master cylinder tie ber to bracket	1500	18	Nut-No.10-24 hex	1804	71
Mut-metering rod pin	0301	47	Nut-No.10-24 her	1807	72
Mut-muffler support clamp	0100	19	Nut-No. 10-24	1807	73
Nut-oil can bracket to dash	2306	63	Nut-No. 10-24 her	1807	73
Rut-oil filter mounting bracket	0107	65	Nut-#13-14 bond strap to front cross mbr.	1500	17
Mut-oil pan to cylinder block	0501	38	Nut-#16 bond atrap Nut-1/4-20	0611	66
Nut-pivot bracket to cowl flange Nut-plate & cover	1801 0106	67 28	Nut-1/4-20-mir deflector to hood	1804	71
Mut-plate to int front cross member			Nut-5/16 square	0501	38
Mut-pump to cylinder block	1500 0107	18 30	Nut-5/16-18 Hex	1804 1800	71
Mut-radiator brace rod	0501	38	Nut-5/16-18 hex	1805	67 71
Nut-radiator mounting bolts	0501	38	Nut-5/16-18 hex	1807	73
Mut-radiator to support bracket	0501	38	Nut-5/16-18 square	1804	71
Mut-ratchet tube bracket support	1201	6	Nut-5/16-18 square	1807	72
Mut-rear axle wheel bearing	1102	16	Mut-5/16-18 stamped	1800	67
Mut-rear brake to flange	1102	16	Mut-5/16-18 ving JeepDraw JeepDraw	1807	72
Nut-rear spring	1601	51	Nut-3/8-16 clinch	1807	73
But-rear view mirror to covi	5501	64	Nut-3/8-16 hex	1800	67
Nut-rear wheel broke to flange	1202	4	Nut-3/8-16 hex	1800	67
Mut-reflector to body Mut-reflector to body side panel	0608 0608	58 58	Nut-3/8-16 stamped	1804 1800	71
Mut-retainer-fuel tank shield to rear floor			•	1000	67
Nut-shackle bolt	0304 1601	40 21	0		
Mut-shield to frame	0301	47	Oil can-1/2 Pt.	2306	-
Mut-spare wheel	1505	1	Oiler-press in type	2306 0601	63
Nut-spare wheel lock	1505	1.	Outrigger-body-rear	1500	51 17
Mut-spare wheel support bracket	1505	1	P	-500	-1
Mut-spindle connecting rod	1401	10	P		
Nut-spindle connecting rod clamp	1402	10	Pad-brake pedal	1204	5
Mut-spring tie bolt	1601	51	Pad-radiator support	0501	38
Rut-square	1907	73	Pad-rear seat back	1804	69
Mut-starter switch cable battery Mut-starter switch cable to switch	0602 0602	53	Pad-rear seat cushion	1804	69
Nut-starter switch to floor	0602	53 53	Pad-sest back Pad-sest cushion	18c4	69
Nut-starter-10-32 square	0605	52	Pad-side creak	180h	69
Mut-starter-5/16-24 hex	0602	52	Pad-side cresh-RH	1804	69
Mut-starting cronk	0102	28	Pad-side crash-LH	1804	69
Nut-strap to cylinder head stud nut	0611	66	Pan-front floor	1804 1807	69
Mut-strap to dash stud	0611	66	Pen-reer-floor	1807	72 73
Mut-steering arm to knuckle	1005	9	Pan-oil	0107	30
Nut-steering arm to knuckle	1007	9	Panel-body side RH	1807	73
Nut-steering column clamp bolt	1403	12	Panel-body side LH	1807	73
Nut-steering goer to frame Nut-steering knuckle bracket stop	1403	13	Panel-cowl side-RH Panel-cowl side-LH	1807	73
Nut-steering sector shaft	1301 1403	1 13	Panel-cowl top	1807	73
But-steering wheel	1404	15	Panel-dash	1807	73
Mut-support bolt	0805	38	Panel-glove compartment door	1807 1877	1
Mut-support to starting motor	0602	53	Panel-hood top	1704	73
Mut-tail lamp	0608	58	Panel-instrument	1807	63 73
Mut-terminal to horn	0609	60	Panel-rear	1807	72
Nut-trans, to engine plate	0804	37	Panel-side crash-RH	1804	71
Mut-treadle to toe board Mut-tube to deah	0505 0606	49	Penel-side cresh-IH	1804	71
Mut-universal flange	0606	61 37	Penel-wheelhouse inner-RH	1807	73
Mut-universal joint knuckle-front axle	1005	8	Panel-wheelhouse inner-LR Fanel-wheelhouse top RH	1907	73
But-universal joint "U" bolt	0901 4 0902	10	Panel-wheelhouse top-LR	1807	73
Mut-universal joint "U" bolt	1102	16	Panel-vindahield lover	1807	73
Nut-valve tappet adj.screw lock	0105	29	Part-breaker plate	1801	69
Mut-whool hub-RH	1301	1	Pedal-accelerator-less hinge	0604 0303	53 ka
Wat-wheel hub-IH	1501	1	Pedal-brake	1204	47
But-windshield wiper knob	1801	64	Podal-clutch	0204	5 34
But-wing-front fender to battery bracket But-wing-headlamp support hold down bolt	1701	62	Piece-pole	0601	49
Nut-wiring harness	0607	56	Piece-pole	0602	52
	0606	61	Pillar-cowl RH	1807	73

Name .	Gov't Group	Page No.	Name	Gov't Group	Page No.
Pillar-covl LH	1807	73	Plate-commutator end	0602	
Pilot-front-universal joint	1005	10	Plate-dimmer switch	_	52
Pin-accelerator treadle hinge	0303	49	Plate-engine front	0603 0110	55
Pin-brake anchor	1203	2	Plate-gear shift information	55.05	22
Pin-brake & clutch pedal pad	1204	5	Plate-goor shift lever guide	0706	74
Pin-carburetor float lever	0301	46	Plate-glove compt.door striker	1807	33
Pin-carburator matering rod	0301	47	Plate-hood hinge tapping	1807	73 73
Pin-clevis-brake cam pin	1201	6	Plate-machine gun mounting	1500	
Pin-clevis-headlamp support hold down bolt	0607	56	Plate-muffler support insulator	0402	18
Pin-clevis-relay crank	1201	6	Plate-nomenclature	55.05	20
Pin-clevis-yoke end to control lever	0204	34	Plate-rear engine	0701	74
Pin-clutch pedal pad	0204	34	Plate-reinforcement-frame-rear	1500	30 18
Pin-clutch release lever pivot	0202	35	Plate-shovel strap tapping	1807	73
Pin-cotter-trans,mein shaft	0704	32	Plate-speed information	5505	74
Pin-crankshaft bearing cap drain plug	0102	28	Plate-spring clip	1601	21
Pin-front axle shaft	1005	9	Plate-tapping for axe clamp	1807	73
Pin-front-differential pinion shaft lock	1002	11	Plate-trans.case inter.gear shaft lock	0805	37
Pin-front-universal joint	1005	10	Plate-trans.ctrehaft & reverse idler shaft lock	0704	32
Pin-fuel pump rocker arm	0302	43	- inter-a high clutch but about	0704	22
Pin-grooved-front axle shaft	1005	9	- meo-crains, anit	0706	33
Pin-hinge	0603	54	Plate-tool compertment lid-striker	1806	ñ
Pin-intake needle	0301	46	Plate-under frame skid	1500	18
Pin-oil pump spiral gear	0107	30	Plate-windshield clamp catch mounting	1801	69
Pin-piston-standard	0103	25	Plate & shaft-spring clip-R-front	1601	21
Pin-piston-, : 1 oversize	0103	25	Plate & shaft-spring clip-L frt.& R rear Plate & shaft-spring clip-L rear	1601	21
Pin-piston002 oversize Pin-piston003 oversize	0103	25	Pliers	1601	21
Pin-rear axle differential pinion shaft lock	0103	25		2306	65
Pin-shift fork guide	1102	16	Plug & gasket-carb.low speed jet idle well	0301	46
Pin-spindle bolt locking	0706	33	Plug & gasket-carburetor pump jet & nozzle Plug & gasket-carburetor strainer passage	0301	47
Pin-starting crank nut	1007 0102	28 28	Plug-countersunk-trans, case	0301	47
Pin-steering orm shaft retaining			Plug-cylinder block oil hole	0800	36
Pin-tapered-oil pump shaft	1006 0107	9 30	Plug-differential housing oil drain	0501	38
Pin-trensfer case shift lever pivot	0805	38	Plug-drag link bell-large	1103	15
Pin-trans, case to shift plate	0706	33	Plug-drag link ball-email	1401	10
Pin-trans.countershaft washer	0704	32	Plug-drain /	1401	. 10
Pinion-front sale differential	1002	11	Plug-drein	0107	30
Pinion-oil pump	0107	29	Plug-end of oil hole	0304	40
Pinion-reer axle differential	1103	15	Plug-expansion-cylinder block JeepDraw	0501	38
Pipe-brake-front wheel cyl.to axle hose	1200		Plug-expansion-cylinder block	0101	22
Pipe-brake-tee to front brake hose-R	1209	5	Plug-expension-rear campbaft bearing	0602	52
Pipe-brake-tee to rear brake-RH	1209	5	riug-expansion-steering geer bounter	0106	25
Pipe-brake-tee to rear brake-L	1209	5	ring-filler-for rear axle	1403 1103	13
Pipe-drein-crankshaft bearing cap rear	0102	28	Plug-front axle differential cover vent.		15
Pipe-master cyl, to front hose	1209	5	and Gastine Strainer Cover	1002 0304	11 40
Pipe-master cyl. to rear hose	1209	5	Plug-gasoline strainer drain	0302	43
Pipe-muffler inlet	01/05	19	Plug-idle port rivet	0301	46
Pipe-tee to front brake hose-L	1209	5	Plate-mester cylinder-piston stop	1205	14
Piston-brake master cylinder	1205	4	Plug-nozzle retainer	0501	46
Piston-brake wheel-front	1207	3	Plug-oil filter drain	01.07	65
Piston-brake wheel-reer Piston-standard	1207	h	Plug-oil pump cover	0107	29
	0103	25	Plug-pipe-ext, head-steering knuckle brkt.	1301	í
Piston010 oversize	0103	25	Plug-pipe-front axle differential drain	1002	ū
Piston-, 020 oversize	0103	25	Plug-pipe-front axle differential filler Plug-pipe-trans, case	1002	11
Piston-,050 oversize Piston-ring-set-standard	0103	25	Plug-rear axle differential cover vent.	0706	33
Piston ring-set-:010 oversize	0103	25	Plug-reducing nine bush	1103	15
Piston ring-set000 oversize	0103	25	Plug-reducing pipe bush, -gas, strur, cover plug Plug-rivet	0304	40
Piston ring-set030 oversize	0103	25	Plug-rivet	0301	46
Pivot-top bow	0103 2310	25 7h	Plug-steering gear housing	0301	46
Plate-brake anchor pin		74	Plug-transfer case filler	1403	13
Plate-broke housing	1205 1208	2	Plug-1/4-floor pen drein	0800	36
Plate-breaker	0603	1 54	Plunger-camehaft-thrust	1807	72
Plate-cam & stop	0603	55	Plunger-contact spring	0106	25
Plate-clutch pressure	0505	35	Plunger-goor shifter shaft lock	0604	53
Plate-combat wheel instruction	1301	1	Plunger-oil relief	0706	33
Plate-commutator end	0601	49	Plunger & rod-carburetor pump	0107	50
			yang yang	0301	47

Name	Gov't Group	Page No.	Name	Gov't Group	Page
Point-breaker	0603	55	Ring-piston compression-upper050 oversize	_	No.
Post-terminel	0601	51	Ring-piston oil control010 oversize	0103	25
Post-terminal	0602	52	Ring-piston oil control020 oversize	0103	25
Puller-wheel hub	2306	63	Ring-piston oil control030 oversize	0103	25
Pulley-drive	0601	51	Ring-piston-oil regulator-standard	0103	25
Pulley-fan & water pump	0503	39	Ring-sealing	0103	25
Pulley-fan drive	0102	28	Ring-shift lever grommet	0607	57
Pump-fuel	0302	43	Ring-shift lever housing cover	1807	72
Pump-oil	0107	29	Ring-steering column floor seal	1807	72
Pump-oil-shaft	0107	29	Ring-steering column-snap	1807	72
Pump-water	0503	39	Ring-steering worm bearing retaining	1403	12
Pump-water-repair kit	0503	39	Ring-tire beed lock	1403	13
		**	Ring-top bow thumb screw chain	1301	1
Q			Ring-trans, main drive gear bearing-enap	2310 0704	74
R			Ring-trans, main shaft bearing retainer snap Ring-transmission main shaft snap	0704	32 32
			Ring-transmission pilot bearing	6764	32
Race-front-universal joint inner	1005	10	Ring-trans, synchronizer blocking	0704	32
Radiator-assy	0501	38	Ring-univ. joint spider bearing ret snap	0704	32
Reflector assy	0608	58	Riser-front to rear floor pen	3902	32
Regulator-& circuit breaker-voltage	0601	52	Rivet-9/64 x 3/16 ovel heed	1807 2202	73
Reinforcement-clamp catch assy	1801	69	Rivet-3/16x1/2 round head		74
Reinforcement-clamp catch-RH	1801	69	Rivet-1/4x3/8 round head	1807	72
Reinforcement-pintle hook	1502	18	Rivet-1/4 x 3/9 round head	1804	69
Rest-rear floor foot	1807	72	Rivet-5/16-1" round head	1807	73
Retainer-bearing	0601	49	Rivet-3/8 x 1/2 round head	2310	74
Retainer-bolt	0607	56	Rivet-#3 cross member JeepDraw	1804	69
Retainer-crankshaft seel	0106	25	Rivet-#4 cross member	1500	17
Retainer-drag link & tie rod grease	1401	10	Rivet-bolt apacer to side rail	1500	17
Reteiner-drive pinion grease Reteiner-felt washer	1104	17	Rivet-bracket to side rail	1500	18
Retainer-felt washer	0601	51	Rivet-bracket to side reil	0110	22
	0601	51	Rivet-bracket to side rail	1500	17
Retainer-front axle shaft-grease-inner Retainer-front axle shaft-grease-outer	1005	8	Rivet-bracket to side rail	1503	21
Retainer-front drive pinion	1005	8	Rivet-bracket to side rail-RH	1603	65
Retainer-front universal joint shaft	1003	11	Rivet-bracket to side rail-IH	1603	65
Retainer-generator grease	1005 0601	9	Rivet-brake lining	1603	65
Retainer-master cylinder check valve cup	1205	51 4	Rivet-brush guard hood liner	1202	2
Retainer-nut	1807	73	Rivet-clips to shield	0505	39
Retainer-nut-front fender to brush guard	1701	62	Rivet-clutch facing	1500	18
Retainer-nut-front fender to cowl	1701	62	Rivet-distributor drive	0201	35
Retainer-nut-hood hinge assy-to cowl top	1704	63	Rivet-flat head-brake hose bracket	0603	54
Reteiner-oil pump oil relief spring	0107	30	Rivet-front cross member radiator brkt.	1207	3
Retainer-pivot oil seal	1301	1	Rivet-front spring clamp	1500 1601	17
Retainer-rear axle shaft grease inner	1102	16	Rivet-gear shift housing		20
Retainer-rear seat pivot tube	1804	71	Rivet-hand brake tube bracket support	0706 1201	33
Retainer-spring	0301	46	Rivet-hand brake lining	1201	6
Retainer-spring shackle grease scal	1601	21	Rivet-master cylinder mounting bracket	1500	6 18
Retainer-thermostat	0502	40	Rivet-outrigger to side rail	1500	18
Retainer-trans.case output sheft-oil	0805	37	Rivet-pintle hook brace	1502	18
Retainer-trans, main drive gear-bearing	0704	52	Rivet-plug flange to oil pan	0107	30
Retainer-valve spring-lower	0105	29	Rivet-radiator grille guard bracket	1500	17
Retainer-water pump seal spring inner	0503	40	Rivet-rear opring	1601	21
Retainer-water pump seal spring outer	0503	40	Rivet-retracting spring bracket	1500	18
Retainer-wheel grease	1302	1	Rivet-spring shackle	1503	50
Retainer-5/16 mut	1807	72	Rivet-spring shackle	1503	21
Retainer-5/16 mut	1864	71	Rivet-starter-1/8x1/4 oval head tubular	0602	52
Ring-chain cover packing retaining	0106	25	Rivet-upper gusset to side rail	2101	64
Ring-compression-lower020 oversize	0103	25	Rod-drag link	1401	10
Ring & insulator-horn switch commutator	1404	15	Rod-hand brake band adj.	1201	6
Ring-master cylinder piston snap	1205	4	Rod-carburetor throttle connecting	0301	46
Ring-output shaft rear bearing-enap	0805	38	Rod-connecting-#1 & #3 cylinders	0104	25
Ring-piston compression-lower-standard	0103	25	Rod-connecting-#2 & #4 cylinders	0104	25
Ring-piston compression-lower- 010 oversize	0103	25	Rod-clutch release pedal	0204	34
Ring-piston compression-lower030 oversize	0103	25	Rod-metering-carburetor	0301	47
Ring-piston compression-upper-standard	0103	25	Rod-radiator brace	0501	38
Ring-piston compression-upper010 oversize	0103	25	Rod-spindle connecting-RH	1402	10
Ring-piston compression-upper020 oversize	0103	25	Rod-throttle	0303	47

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Rod-tie-LH	1402	10	Screw-clamp to air cleaner bracket	1209	
Roller & come assy-from sale epindle brg.	1006	9	Screw-clip to body floor	0606	5 61
Roller & cone-driving pinion front	1104	16	Screw-clip to body floor-cross member	0606	62
Roller & cone-driving pinion front	1104	16	Screw-clip to cross sill	0302	43
Roller & cone-driving pinion-front brgs.	1003	12	Screw-clip to dash	0300	43
Roller & cone-driving pinion front brg.	1003	11	Screw-condenser terminal to breaker plate	0603	55
Roller & cone-front axle differential Foller & cone-rear axle differential brg.	1002	11	Screw-condenser to breaker plate	0605	55
Roller-trans, mein shaft pilot beering	1193 0704	15	Screw-cover to bell housing	0500	34.
Rotor	0603	32 55	Screw-clutch adjusting Screw-clutch pedal clamp	0202	35
S		7.7	Screw-clutch pressure plate to flywheel	0611 050#	34 66
Screv-No. 8-32 x 13/16	- 0	4-	Screw-differential	1002	11
Screw-No.10 x 1/2	1801 1801	69 60	Screw-differential bearing cap Screw-dimmor switch floor seal	1105	15
3crev-No. 10-32 x 15/16	1801	69 69	Screw-dimmer switch to floor	0606 0606	60
Screw-1/4-20 x 1/2-air deflector to heed	0501	3 8	Screw-distributor-#8-32x3/16 Fill.heed	0603	60 54
Screw-1/4-20 x 3/4 flat head	1801	50 69	Screw-distributor-#10-32x1/4 Fill.heed	0603	54 54
Screw-1/4-20 x 1/2 Flat head machine	1907	73	Screw-distributor-#10-32x5/16 Fill.head	0605	5
Screw-No.10-24 x 1/2" flat hend machine	1807	72	Screw-door assy to brkt-blackout marker lamp	0607	58
Screw-No.10-24 x 1/2 flat head machine	1507	73	Screw-exhaust pipe extension to skid plate	0402	19
Screw-No.10-24 x 5/8 flat head machine	1804	71	Serew-exhaust pipe to muffler clamp	0405	19
Screw-No.10 x 5/8 flat head obset metal	2310	74	Screw-extinguisher mtg. brecket to body	2306	64
Screw-No. 10-24 x 3/8 headless come point set Screw-No.10x1/2 ovel head sheet metal	1801	67	Screw-extinguisher to mounting bracket	2306	ø.
S-A seay	1804	71	Screw-fan to pulley Screw-filter bracket to dash	0505	40
Screw-1/4-20 x 3/4 round head mechine	0602 1804	52 69	Screw-filter to dash	0611 0107	66
Screw-No.10-24 x 3/4 round bend machine	1807	73	Screw-filter to deeb	0302	65 43
Screw-No.10x1/2 round head sheet metal	1807	72	Screw-filter to fender	0611	66
Screw-No.10x5/8 round head sheet metal	1807	72	Screw-flange clamp	0402	19
Screv-No. 10 x 1/2 self tapping	1801	69	Screw-flange to exhaust menifold	0108	la da
Screw-eir cleaner aupport bracket	0301	46	Screw-frame	0601	49
Screw-eir cleaner to brocket Screw-exle tube clemp	0301	46	Serev-front exle driving geer	1002	11
Screw-bearing cap	1209	5	Screw-front cover-3/4 Screw-front cover-1"	0101	22
Screw-bearing retainer	0102 0601	28 49	Screw-front cover to body	0101	22
Screw-bell housing to transmission	0602	52	Screw-front fender to cowl JeepDraw	0107 1701	30 62
Screw-blackout switch	0602	53	Screw-front fender to cowl step	1701	62
Screw-bond strap cowl to bood	0611	66	Screw-fuel gauge wire to tank unit	0302	45
Screw-bond strap to brush guard	0611	66	Screw-fuel pump to cylinder block	0302	A.A.
Screw-bond strap to front engine plate	0606	60	Screw-fuel tank hold down clamp	0304	40
Screw-bond strap to generator	0601	49	Screv-gasoline strainer cover cap	0302	41
Screw-bond strap to voltage regulator Screw-brace to generator	0601	51	Screw-geer shift fork lock Screw-generator-#6-32x9/16 flat head	0706	53
Screw-bracket to support	0601 1201	51	Screw-generator-#10-32x5/16 fillister head	0601	49
Screw-bracket to support	1404	6 15	Screv-generator-#8-32x1/4 round head	0601 0601	49
Screw-bracket to trans,case-5/8	0110	55	Screw-generator-#10-32x5/16 round head	0601	49 49
Screw-bracket to trans.case-5/4	0110	55	Screw-generator-\$10-32x3/8 round head	0601	49
Screw-brake backing place	1005	Q.	Screw-generator-#10-32x1-1/4 round head	0601.	19
Screw-brake band brkt.	1201	5	Screw-generator brace pivot	0601	51
Screw-brake tube clip & wiring clip Screw-brake wheel cyl, bleeder-front	1209	5	Screw-gen, regulator filter unit field wire	0611	66
Screw-brake wheel cylinder-bleeder-rear	1207	3	Screw-guide to brece	0601	51
Screw-brush to column	1207 0609	ц Сп	Screw-hand brake band anchor clip adj. Screw-handle to tube	1201.	5
Screw-carburetor mir horn	0301	60 46	Screw-head apring	1201. 0602.	6
Serev-carburetor body flange	0301	44	Screw-heedlamp door constricting	0607	55 57
Screw-carburetor bowl cover	0301	44	Screw-headlamp ground cable	0606	61
Screw-carburator choke valve	0301	46	Screw-headlamp harness clip	0006	61
Screw-cerburetor idle adjustment	0301	46	Screw-hex head-brake backing plate	1202	1
Screw-corburetor throttle lever adjusting	0301	46	Screw-hex head-control bracket to frame	0200	33
Screw-carburetor throatle valve Screw-carburetor to air cleaner tube clamp-1"	0301	46	Screw-hex-insulator to supt strap-body sill	0402	50
Screw-carb.to sir cleaner tube clamp-1"	0301	47	Screw-her heed-erh.manifold to int.manifold	0108	44
Screw-carburator tube clamp	0301 0301	47 46	Screw-hox bond-trans. Screw-hood hinge desy-to cowl top	0804	37
Screw-choke control wire clamp	0301	46	Screw-hood top to windshield bumper	1704 1704	63 68
Screw-circuit breaker to bracket	0603	55	Screw-horn bracket to deah	0605	65 60
Screw-circuit broaker to fender eplach	0601	52	Screw-horn to bracket	0609	60
Screw-clamp catch to instrument panel	1801	67	Screw-ignition dist, to cylinder block	060h	53

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Screw-inter, shaft lock plate	0805	37	Screw-windshield pivot thumb		
Screw-junction block to fender spleaher	0606	61	Screw-windshield swing arm thumb	1601 1901	69
Screw-junction blocks to desh	0606	61	Screw-windshield swing arm to bracket	1801	69 69
Screw-master cylinder tie bur to brkt.	1500	18	Screw-wiring harness	0606	61
Screw-master cylinder to bracket	1500	18	Screw-wiring to housing ground headlemp	0607	56
Screw-muffler support clamp Screw-oil can brocket to dash	0402 2806	19	Screw & lockwasher-carburetor apper body	0301	44
Screy-oil float support	2306 0107	63 30	Screw & spring washer-choke valve	0301	46
Screw-oil pan to cylinder block	0501	38	Screw & washer-No.10-24 x 3/8 round hd.mach.	1806	71
Serev-oil pan to front engine cover	0501	38	Screw & washer assy-No.10-24x3/8 R.H.Machine	1807	73
Screw-outlet elbow cap	0505	39	Screw & wesher-gruge to tank	0305	43
Screw-pedal shank	1204	5	Screw & washer-terminals to junction blocks Screw driver	0606	61
Screw-pedal shank to pedal	(5.07)	34	Seal-accelerator treadle red floor	2306	63
Screw-pinion bousing	0602	52	Seal-brake cylinder inspection	18/2 18/2	69
Screw-piston pin lock	0103	25	Seal-crankahoft bearing cap-roar	0107	69 3 0
Screw-pivot oil seal retainer	1501	1	Seel-crankshaft-front end	0107	30
Screw-plate to block Screw-pole piece	0101	22	Seal-crankahaft-rear end	0107	30
Screw-pole piece	0601 0602	49 52	Soal-dimmer switch floor	0606	60
Screw-pressure plate to flywheel	0505	52 *5	Seel-distributor-spark plug wire	0603	54
Screv-pump to cylinder block	0503	35 39	Soul-drag link dust	1401	10
Screw-rear sale driving gear to diff, case	1102	16	Seel-drive gear bearing	070h	52
Screw-rear exle-front sile	1209	5	Seal-front axle pivot	1006	g.
Screw-rear bearing cap to cose	o8c4	37	Sonl-fuel line hole floor	1802	69
Screw-rear brake to flange	1202	ių.	Seel-gea tank stone mand P	0108	կե
Screw-rear cover acrew	0800	36	Seal-gas tank stone guard-R Mac/Macodow.com Seal-gas tank stone guard-I.	03 <i>0</i> #	40
Screw-rear view mirror to cowl	2201	64	Seel-ges tank stone guard-front	0364 6765	40
Screw-reflector to body	0608	58	Soal-gas tank atone guard-rear	0304 0304	ቅር ቅር
Screw-relay crank to trans, bearing cap	1201	6	Seal-generator oil	0601	51
Screw-round head-clamp lever to shaft Screw-round head clips	010 8 0606	44 62	Seal-generator oil-inner	0601	51
Screw-round head-reflector to body side pul.	n608	58	Seal-oil-pivot	1301	1
Screv-shaft spring	0602	53	Seal-radiator side air deflector	0501	38
Screw-shield to frame	0501	47	Seal-redistor top air deflector	0501	38
Screw-sprocket to camehaft	0106	25	Seal-spindle connecting rod dust	1401	10
Screw-starter-#10-32x3/8 fillister head	0603	52	Seel-spring shackle greese	1601	\$1
Screw-starter-#10-32x1-1/2 round head	0602	52	Seal-starter switch floor	n602	53
Screw-starter switch to floor	0603	53	Seal-steering arm bearing Seal-steering column floor	1606	.9
Screw-starting motor to rear engine plate	0602	52	Soal-steering sector shaft oil	1802 1403	69
Screw-steering column clamp bolt Screw-steering gear to frame	1403 1404	12	Seal-transfer case shift rod oil	0805	15
Screw-steering sector shaft adj.	1404	15 15	Seal-transmission cover	1802	38 69
Serew-Support to erunkesse	0602	53	Seal-tail light socket-blackout	0606	61
Screw-support to cylinder block	0601	51	Seal-tool compartment lid	1606	71
Screw-support to starting motor	0602	53	Seel-universal joint greese	0704	35
Screw-switch to instrument panel	0606	60	Soul-universal joint knuckle dust cap	7902	32
Screw-teil lamp-door	0608	58	Sout-bull-drag link	1401	10
Screw-tail pipe clamp	0408	7.0	Seat-ball stud apring	1401	10
Screw-tee to axle tube	1207	3	Seat-drag link apring Seat-driver's	1401	10
Screw-terminal to circuit breaker Screw-throttle shaft arm clamp	0603	55	Seat-front passenger	1804	71
Screw-throttle wire stop	0501 0602	46	Sent-gus stroiner bovl	1804	71
Screw-tie ber & shield to master cylinder	1500	53 18	Sent-gear shift lever spring	0302 0706	43
Screw-timing hole cover	0704	30	Seat-menter cylinder check valve	1205	55 4
Screw-top bow thumb	2510	74	Seat-rear	1804	71
Screw-top cover to body	0302	43	Set-starter brush	6602	52
Screw-trans, case shaft fork	0805	38	Set-weight opring	0604	53
Screw-trans, case shift lever pivot pin	6805	38	Shackle-apring-R throud	1602	21
Screw-trans, case to trans, case	o8e4	37	Shackle-apring-L throad	160?	21
Screw-trans, to engine plate	0804	37	Sheft-accelerator cross	0303	47
Screw-treadle to toe board Screw-tube support bracket	0303	49 65	Shaft-clutch release equalizer Shaft-differential-front axle	0200	33
Screw-tube to desh	0107 06 0 6	65 61	Shaft-drive	1002	11 56
Screw-universal joint shaft	1005	9	Sheft-drive-& governor	0603 0603	55 55
Screw-valve clamp	0108	44	Short-front sile-RE	1005	8
Serew-valve spring cover-front	0105	29	Shaft-front sile-LH	1005	8
Screw-valve spring cover-rear	0105	59	Shaft-front drive	0901 & 0902	10
Screw-valve toppet adjusting	0105	29	Shaft-goar abifter high & intermediate	0706	33

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Shaft-geer shifter low & reverse	0706	33	Shoe & lining-brake-reverse	1202	2
Shaft-heat control valve	0108	44	Sill-floor pen rear cross	1907	73
Shuft-peda1	1204	5	Sleeve-compression	0602	53
Shoft-rear male differential pinion	1103	15	Sleeve-rubber	0606	61
Shaft-rear aile RE Shaft-rear aile IH	1102	16	Sleeve-speedcmeter	2203	64
Shaft-rear drive	11,53	16	Sleeve-attering column bearing upper	1403	12
Shaft-reverse idlar gear	1102	16	Sleeve-trans, inter, & high clutch hub	0704	32
Shaft-speedometer	0804	37	Slinger-crankshaft oil	0102	28
Shaft-steering arm	2205	64	Slinger-driving pinion Slinger-front sale driving pinion shaft oil	1104	16
Shaft-steering sector	1006 1403	9	Slinger-trans, case-dust	1002 0804	11 37
Shaft-transmission main	0704	13 32	Shap ring-front universal joint shaft ret.	1005	9
Shaft-trans, reverse idler	0704	32	Socket-lemp-instrument & cable	0606	60
Sheft-trens, case clutch	o8n4	37	Spacer-bearing thrust	0605	52
Shaft-transfer case front axle shifter	0805	38	Spacer-crankshaft-sprocket	0102	58
Shaft-transfer case undordrive chifter	0805	38	Spacer-drive pinion bearing	1104	17
Sheft & bushing-trans, case output sheft	0805	37	Spacer-front bumper guaget	2101	64
Shaft & lever-throttle-carburetor	0501	46	Spacer-front-drive pinion bearing	1003	11
Shaft & vorm-steering	1403	13	Spacer-eteoring geer	1500	18
Sheath-axe	1807	74	Spacer-trans, countershaft geer bearing	0704	32
Shield-air cleaner	0361	47	Spacer-transmission main shaft bearing	0704	32
Shield-drag link dust seel	1401	10	Spark plug	0603	55
Shield-drive pinion thrust Shield-front-drive pinion thrust	1104	16	Speedometer assy	2203	64
Shield-instrument light	1003	11	Spring-accelerator	0305	49
Shield-master cylinder	0606	60	Spring-scelarator cross shaft	0303	47
Shield-radiator shell to cross member	1500	13	Spring-accelerator treadle hinge	0503	49
Shield-eest to rear floor gas tank	0501 1907	38 73	Spring-anti-rattle Spring-ball stud seat	0603	55
Shield-steering arm bearing dust	1006	9	Spring-brake-retainer	1401	10
Shield-transfer case dust	0805	38	Control Name of the Control of the C	1203 0603	2 55
Shim-exle differential bearing .030	1103	15	Spring-brush JeepDraw	0601	49
Shim-drive pinion front-,003	1104	16	Spring-brush MacGeophys.com	0602	92
Shim-drive pinion front005	1104	16	Spring-commanaft thrust plunger	0106	25
Shim-drive pinion front010	2104	16	Spring-carburstor choke pull back	0501	46
Shim-drive pinion-front bearing003	1003	ш	Spring-carburetor connecting link	0301	46
Shim-drive pinion front bearing005	1003	ц	Spring-carburator connecting rod	0301	46
Shim-drive pinion front bearing010	1005	11	Spring-carburator idla adjustment screw	0301	46
Shim-drive pinion rear003 Shim-drive pinion rear005	1104	16	Spring-corburator matering rod	0301	47
Shim-drive pinion reer010	1104	16	Spring-carburetor pin	0301	46
Shim-drive pinion reer-,030	1104	16	Spring-carburator plunger	0301	47
Shim-drive pinion reer bearing-,003	1104	16	Spring-carburetor pump	0501	47
Shim-drive pinion rear bearing005	1003 1003	11 11	Spring-carburetor pump arm Spring-clutch pressure	0501	46 .
Shim-drive pinion rear bearing-, Clo	1003	11	Spring-clutch pressure plate return	0505	35
Shim-drive pinion rear bearing-, 030	1903	11	Spring-clutch rolease	05.0∤ 05.05	35 34
Shim-engine support insulator	0101	55	Spring-clutch release bearing	0201	35
Shim-front-differential bearing .003	1002	11	Spring-contact	0604	53
Shim-front-differential hearing .005	1002	11	Spring-distributor cap	0603	54
Shim-front-differential bearing .010	1002	11	Spring-dist, shaft friction	0604	53
Shim-front-differential bearing .030	1002	11	Spring-drag link ball	1401	10
Shim-oil pump oil relief spring	0107	30	Spring-drive	0602	53
Shim-rear axle differential bearing .003	1103	15	Spring-filter cover bolt	0107	65
Shim-rear axle differential bearing .005 Shim-rear axle differential bearing .010	1103	15	Spring-frt brake wheel cyl.piston return	1207	3
Shim-steering gear housing cover	1103	15	Spring-front-RH	1601	20
Shim-steering geer housing end cover	1405	13	Spring-front-IH	1601	50
Shim-steering gear mounting	1405 1403	13	Spindle-front wheel bearing	1007	.8
Shim-steering pivot arm .003	1007	13	Spring-fuel pump disphragm Spring-fuel pump rocker arm	0302	43
Shim-steering pivot arm .005	1007	9 9	Spring-gracline strainer	0502 0502	45 41
Shim-steering pivot arm .010	1007	9	Spring-gear shift lever	0706	
Shim-steering pivot arm .030	1007	9	Spring-geer shifter sheft	0706	55 55
Shim-transfer case output shaft reer cap .003	0805	38	Spring-generator brace	0601	51
Shim-transfer case output shaft rear cap .010	0805	38	Spring-hand brake band support	1201	6
Shim-transfer case output shaft rear cap .051	0805	38	Spring-hand brake ratchet tube	1201	6
Shim-universal joint adjusting .010	1005	9	Spring-hand brake release	1201	6
Shim-universal joint edjusting .050 Shoe & lining-brake-forward	1005	9	Spring-hand brake retracting	1201	6
- Truthe-Maro-101Agld	1202	2	Spring-heat control valve	0108	44

Name	Go∀'t Group	Page No.	Name	Gov't Group	Page No.
Spring-horn button	1404	15	Stud-steering arm-lover	1007	9
Spring-intake needle	0301	47	Stud-ateering arm-upper	1005	9
Spring-lock ring	0603	55	Stud-steering arm-upper	1007	9
Spring-oil relief plunger	0107	30	Stud-teil lemp-mounting	0608	58
Spring-pedal retracting	0204	34	Support-frame to dash panel	1500	18
Spring-rear	1601	21	Support-front floor pan muffler	1807	73
Spring-rear brake wheel cylinder pieton	1207	t _a	Support-fuel tank holddown	0304	40
Spring-rear seat	1804	71	Support-hand brake ratchet tube bracket	1201	6
Spring-shift plate	0706	33	Support-headlamp-RH	0607	57
Spring-steering column bearing-upper	1403	13	Support-headlamp-LH	0607	57
Spring-take up	c6 c 2	53	Support-horn button wire contact	1404	15
Spring-transfer once chifter lever	0805	38	Support-oil float	0107	59
Spring-transfer case shifter shaft	0805	38	Support starting motor	0602 1404	52 15
Spring-valve	0105	29	Support-steering column-inst, panel	0611	15 65
Spring-valve taptet clearance	0105	29	Suppressor-radio Switch-blackout	0605	
Spring-water pump seal	0503	10	Switch-foot dimmer	0606	53 60
Spring-trans.high & inter.clutch hub	0704	32	Switch-instrument panel light	0606	60
Spring & retainer-brake master cyl, -return	1205	1.	Switch-starter	0602	53
Sprocket-communit	0106	25 28	Switch-stoplight	0606	60
Sprocket-crankshaft	0102 1807	74	Switch-wire horn	0606	60
Step-cowl side-RH Step-cowl side -LH	1307	74	Synchronizer assy	0704	32
	1807	72	•		,
Strainer-back-inner Strainer-back-lower	1807	72			
Strainer-back-lover Strainer-back-outer JeepDraw	1807	72			
Strainer-back-upper	1807	72			
	0501	46	T		
Strainer-check-carburetor pump Strainer-gasoline	0304	40	Tag-axle joint identification	1005	9
Strainer-side panel assy	1997	74	Tag-front axle ratio	1001	8
Strainer-side panel to whoshhouse	1907	74	Tag-reer exle ratio	1101	15
Strap-adjustable eafety	1804	71	Tonk-fuel	0304	40
Strep-exe	1807	74	Tappet-valve .004 oversize	0105	28
Strap-battery ground	0606	60	Toppet-valve-standard	0105	28
Strap-battery to front fender	1500	18	Terminal	0601	51
Strep-engine ground	0606	60	Terminal	0601	51
Strap-front-differential dr.geer screw lock		11	Terminal battery cable	0606	61
Strap-fuel tank holddown	0304	40	Terminal-battery positive clamp	0606	61
Strap-gesoline tenk hold down	0304	40	Terminal-eyelet	0606	61
Strap-rear axle diff, drive gear screw lock	1102	16	Terminal-generator ground	0601	51
Strap-shovel front	1807	74 74	Terminal-H.T. vire	0604	53
Strap-shovel reer	1807 2310	74	Terminal-starting motor	0602	52
Strap-top hold down	2310	74	Terminal-wire-coil to distributor	0606	61
Strap-top rear	2310	74	Thermostet	0502	40
Strap-top roll Strap-universal joint "U" bolt lock	0901 & 0902	10	Throttle rod Transmission	0303 0700	49
Strap-universal joint to "U" bolt lock	1102	16	Tray-battery	1601	30 21
Strip-front exle pivot cil seal pressure	1006	9	Tray-battory	1500	18
Strip-glove compt.door weather	1907	73	Treadle-accelerator-complete	0303	47
Strip-windshield frame to cowl weather	1801	69	Trim-front seat back	1804	71
Strip-windshield retaining	1801	69	Trim-rear soat back	1804	71
Strip-windshield weather	1801	69	Trim-front seat cushion	1804	71
Stop-heat control valve	0108	44	Trim-rear seat cushion	1804	71
Stop-throttle wire	0602	53	Trunnion-gear shift lever	0706	33
Stud-accelerator cross shaft bracket	0303	47	Tube & bracket-sir cleaner to carburetor	0301	47
Stud-camehaft thrust plunger	0106	25	Tube, cable & conduit-hand brake retchet	1201	6
Stud-clutch release equalizer shaft ball	05.00	53	Tube & cable-hand brake	1201	6
Stud-cylinder head	0101	55	Tube-flexible connection to fuel pump	0302	43
Stud-engine front cover	0101	22	Tube-fuel filter to flexible connection	0302	43
Stud-engine front plate	0101	55	Tube-fuel pump to corburetor	0302	43
Stud-exhaust manifold	0101	22	Tube-fuel tank to fuel filter	0302	43
Stud-exhaust manifold to exhaust pipe	0108	44	Tube-oil filler	0107	30
Stud-ignition coil	0101	53	Tube-oil filter inlec	0107	65
Stud-intake manifold to carb.	0108	44	Tube-oil filter outlet	0107	65
Stud-manifold-1-11/16 Stud-manifold-1-15/16	0101	22	Tube-oil gauge	0302	43
Stud-manifold-1-19/16 Stud-oil pump	0101	55	Tube-steering column	1403	12
Stud-steering arm-lover	1005	9	Tube-tie rod-IH Tube-tie rod-RH	1402	10
Gend-passes and assessed		,9	1400-216 Idu-tu	1402	10

Name	Gov't Group	Page No.	Name	Gov't Group	Page
U			Washer-eye bolt	1507 G100b	No.
			Washer-exhaust pipe extension to skid plate	C# 05	5 19
Union-oil gauge tube	0305	43	Wesher-exhaust pipe shield	0611	66
Unit-filter-gen.ground to armature circuit Unit-filter-generator regulator	0611	66	Washer-exhaust pipe shield	1500	18
Unit-lower tail lamp	0611 0606	66 60	Washer-exhaust pipe to muffler clemp Washer-fan pulley shield	3705	19
Unit-upper service	0606	60	Washer-felt	0501	38
Unit-upper stop lamp	0606	60	Washer-felt	0601 0601	49
v			Washer-filter to dash	0107	51 65
·			Washer-filter to desh	0302	43
Valve-choke-carburetor	0501	46	Washer-front differential gear thrust	1002	11
Valve-exhiunt	0105	58	Washer-front-differential pinion thrust	1002	11
Valve-exhaust control	0108	14.14	Washer-front-drive pinion flat	1003	11
Velve-fuel pump Velve-intake	0302	43	Veaher-fit, fender apron-L-to top of frame Washer-front fender brace to frame	1701	62
Valve-throttle-certuretor	0105 0301	28 46	Washer-front fender splesh apron to frame	1701 1701	62
	0,01	40	Washer-front fender to brush guard	1701	62 62
w			Washer-front fender to cowl step	1701	62
Vesber ^	0603	54	Washer-front-universal joint thrust	0901 & 0902	10
Washer-No. 14 ext.tooth lock	1807	73	Washer-fuel pump disphrage spring seet	0108	1,1,
Washer-1/4 flat	1807	73	Washer-fuel pump rocker arm pin	0302	45
Wesher-5/16 flat	1804	71	Wesher-fuel tank shield to reer floor	0304	40
Washer-5/16 flat JeepDraw	1807	72	Washer-generator-1/4 plain Washer-generator-∮10 plain	0601	49
Washer-5/16 flat	1907	73	Washer-generator-ylo plain Washer-generator armature terminal	0601	49
Washer-5/8 flat	1800	67	Washer-generator brish holder	0601 0601	51 49
Washer-3/8 flat Washer-No.10 hollow countersunk	2310 1804	74 71	Washer-generator shaft to bearing	0601	49
Washer-3/9 Lock	1807	73	Washer-generator support-insulator	0601	51
Washer-3/9 lock	2310	74	Washer-guide to brace	0601	51
Wauher-No. 10 lock	1807	73	Washer-headlemp stud to headlemp hinge brkt.	. 0607	56
Washer39 x 1.12 O.H spring	2310	74	Washer-headlamp support hold down bolt	0607	56
Washer-5/16 plain	1805	71	Washer-headlamp to support	0607	56
Wesher-1/2 plain	0601	51	Washer-hood hinge assy to cowl top	1704	63
Washer-5/16-18 opecial	1800	67	Washer-hood top to Windshield bumper	1704 1704	63 63
Washer55 x .7 special flat Washer-5/16 special flat	1801 2310	67 74	Washer-horn bracket to dash	0609	60
Washer-3/8 special flat	1800	67	Washer-ignition dist.to cylinder block	0604	53
Wesher-accelerator cross shaft	0303	47	Wesher-insulating	0601	. 51
Washer-accelerator cross shaft lever	0303	49	Wesher-Insulating	0602	52
- Washer-air cleaner support bracket	0501	46	Washer-insulator rear	0101	25
Washer-mir cleaner to bracket	0301	46	Washer-insulator to engine support brkt. Washer-manifold clamp	0101	22
Wesher-battery strap to frame	0606	60	Washer-meater cylinder to bracket	0108 1500	եե 18
Washer-Bond Washer-bond strap cowl to hood	0601 0611	51 66	Washer-metering rod pin	0301	47
Washer-bond strap to brush guard	0611	66	Wesher-pedal shaft	050#	34
Washer-bond strap to coil	0611	66	Washer-pedal ohaft	1204	5
Washer-bond strap to engine support	0606	60	Washer-plate to int.front cross member	1500	18
Washer-bond strap to front engine plate	0606	60	Washer-radiator mounting bolts	0501	38
Washer-bond strap to voltage regulator	0601	51	Washer-radiator to support bracket	0501	38
Washer-bracket to support	1201	6	Washer-rear bearing cap to trans, case Washer-rear differential pinion thrust	0804	37
Washer-brush guard frame to bracket Washer-commands thrust	0505 0106	59 25	Washer-rear view mirror to covi	1103 2201	15 64
Washer-clips	0606	62	Washer-shaft thrust-lower	0603	55
Washer-clip to bond strap	0606	62	Washer-shaft thrust-upper	0603	55
Washer-clip to bond strap	0611	66	Washer-shield to frame	0301	47
Washer-clutch release equalizer shaft	CS 0.0	34	Washer-shock shearber shaft	1603	65
Wesher-clutch release equalizer shaft dust	0200	33	Washer-starter-5/16 plain	0602	52
Washer-clutch release equalizer shaft felt	020A	34	Vecher-starter terminal	0602 1006	52
Wesher-coil bracket	0604	53	Vasher-steering arm-lover Vasher-steering arm-upper	1006	9
Washer-conduit clamp to air cleaner bracket Washer-control valve	1209 0108	5 144	Washer-steering gear housing	1403	9 13
Washer-control valve	0102	28	Washer-steering gear to frame	1405	13
Washer-differential goar thrust	1125	15	Washer-strap to desh	0611	66
Washer-distributor-#6 plain	0603	54	Washer-support to crankesse	0602	53
Wesher-distributor-#8 plain	0603	54	Weaher-support to starting motor	0602	53
Washer-drive pinion	1104	16	Weaher-swing arm-special 5/16 flat	1801	67
Washer-engine stay cable	0110	22	Washer-tail pipe clamp screw	0402	10

Name	Gov't Group	Page No.	Name	Gov't Group	Page No.
Washer-throttle rod adjustment bracket	0303	47	Wire-blackout stop light & tail light	0608	58
Washer-thrust	0602	52	Wire-filter battery smmeter-to junction block	0606	61
Washer-transfer case	0804	37	Wire-gas gauge	0606	61
Washer-trans, case front bearing cap to case	0805	38	Wire-gas gauge circuit breaker	0606	61
Washer-transfer case inter sheft thrust	4080	37	Wire-ignition coil-primary	0606	60
Washer-transcase output shaft-thrust	0805	37	Wire-ignition coil secondary	0603	55
Washer-trans, case support mounting	0805	38	Wire-junction block to coil	0606	61
Washer-trans, countershaft gear thrust	0704	32	Wire-junction block to horn	0606	61
Washer-trans, countershaft gear thrust-frt.	0704	32	Wire-L side body	0606	61
Washer-trans, countersheft gear thrust-rear	0704	32	Wire-light switch to ammeter	0606	61
Wesher-universal flange	0802	37	Wire-regulator battery arm to filter	0606	61
Washer-universal joint knuckle-front axle	1005	8	Wire-voltage regulator to junction block	0606	61
Washer-voltage regulator	0601	52	Wire-water pump bearing retaining	0502	40
Washer-water pump seal	0503	4C	Wiring-chassis L side	0606	61
Washer-wheel bearing lock	1502	1	Wiring-filter	0606	61
Washer-wheel bearing nut lock	1302	1	Wiring-generator to voltage regulator	0606	60
Washer-windshield swing arm bracket cup	1801	69	Wiring-headlamp connector	0606	61
Washer-windshield swing arm rubber	1801	69	Wiring-lighting switch	0606	60
Washer-windshield swing arm spring	1801	69	Wrench-adjustable-11"	2306	63
Washer-windshield wiper knob	1801	64	Wrench-crescent-adj8"	2306	63
Water pump-bearing & sheft	0503	39	Wrench-double and 3/8-7/16 opening	2306	63
Water pump-body	0503	39	Wrench-double end 1/2-19/32 opening	2306	63
Water pump seal	0503	39	Wrench-double end-9/16-11/16 opening	2306	63
Weatherstrip-accelerator connector link	0303	49	Wrench-double end 5/8-25/32 opening	2306	63
Weight easy	0603	55	Wrench-double end 3/4-7/8 opening	2306	65
Well-floor pen fuel tank	1907	73	Wrench-drain plug	2306	63
Wheel	1301	1	Wrench-hydraulic brake bleeder screw	2306	63
Wheel-combat inner half	1301	1	Wrench-sccket head screw	2306	63
Wheel-combat-outer half	1301	1	Wrench-socket-wheel nut	2306	63
Wheel-steering	1404	15	Wrench-spark plug-socket	2306	63
Wick-cam sleeve felt	0603	54	Wrench-wheel bearing nut	2306	63
Windshield assy	1801	69	ХYZ		
Windshield-frame & glass	1801	69			
leen Drow	1801	64	Yoke-coupling shaft flange center	0902	32
Wire assy-RH Mp.//sepdow.com	0607	57	Yoke-coupling shaft flange center	1104	17
Wire assy-LH	0607	57			

PARTS PRICE LIST




FORD PART NUMBER	LIST PRICE	PART NAME No.//jeepdow.com	WILLYS PART NUMBER	REQUIRE
1300	_	Wheel		
P 1012	.04	Nut-wheel hub-RE	A 476	52
GP 1013	-04	Nut-wheel hub-IH	1 475	
CPW 1015	5.25	Wheel agey		10
SPW 1016	3.25	Wheel-combat inner half	à 5467	5
GPW 1025-C	1,90	Ring-tire boad lock	A 5468	5
PW 1027	3.25	Wheel-combat-outer half	A 5488	5
FW 1029	.08	Bolt-divided rim	A 5469 A 5470	
CPW 1045	. Oli	Plate-combat wheel instruction	A 5472	40
GP 1088	1,50	011 meal-pivot assy		10
GP 1089	.50	Retainer assy-pivot oil seal	A 813	4
OP 1092	.05		A 814	14
GF 1092	100	355483-S 5/16-24 Hex hd.acrew-pivot oil seal ret.to	A 920	2
	-	steering knuckle	A 872	16
				L.,
			52510	16
		steering knuckle		
		355526-8 3/8-24 Hex hd.bolt-steering knuckle brkt.atop	v 951	2
		33911-S2 3/8-24 Hex check nut-steering knuckle brkt.stop	A 873	5
		353064-S 1/2 Pipe plug-ext.head-steering knuckle brkt.	5140	5
		Hub and Drum		
GP 1102	8.50	Hub & drum assy-RH	A 1689	5
GP 1103	8,50	Hub t drum assy-IH	A 1690	2
GP 1107	.05	Bolt-wheel hub-RH	A 474	10
GP 1108	.05	Bolt-wheel hub-LH	A 473	10
GP 1110	.10	Bolt-wheel hub-front & rear	A 760	24
		34807-82 Lockwasher-3/8-axle shaft to wheel hub	5010	24
GP 1124	.05	Washer-wheel bearing nut lock-2 for frt. 2 for rear wheel	A 867	4
GP 1139	.30		A 869	2
GP 1177	. 55		A 864	1 4
GP 1201	++3.05	Cone & roller assy-front & rear wheel bearing assy-inner & outer	52942	8
V. 12.VI	77	(Timken 18590) (Bower BT-18590)		+
GP 1202	++1.95		52943	8
V. 12.52	1	(Bower BT-18520)		
GP 1218	.05	Washer-wheel bearing lock-2 front-2 rear wheels	A 865	l _k
		1505 Spare Wheel Carrier		
GPW 1433	2.00		A 2359	1
		20406-S7 5/16-18 x 1-1/8 Hex hd.bolt	6660	2
		20326-S7 5/16-18 x 5/8 Hex hd.bolt	51485	5
		33797-S2 5/16-18 Hex nut	6167	4
		34806-S2 5/16 Lockwasher	51840	14
		For spare wheel support bracket to back panel		1
	.04	GP-1012 1/2-20 Hex nut-spare wheel to carrier stud	A 476	5
		356038-S7 Lock nut-spare wheel lock nut to carrier stud	A 1318	1
	1.00	GPW-18312 Lock-spare wheel-assy	A 1719	1
1200		1202 Service Brake—Front		,
GPW 2010	7.50	Brake accy-front-RE	A 1497	1
		34807-S2 Lockwasher-3/8-brake backing plate to steering	501.0	12
		knuckle		
		355552-S 3/8 x 24 x 3/4 Hex.hd.ecrev-brake backing plate	A 877	12
		to steering knuckle		
GPW 2011	7.50		A 1496	1
		72071-S Axle shaft nut cotter	5397	2
		1990 Dunlan III in d. Dinks		
		1208 Brake Housing Plate		

Ford Motor Gompany

PARTS PRICE LIST

FORD PART NAME WILLYS NUMBER REQUIRED

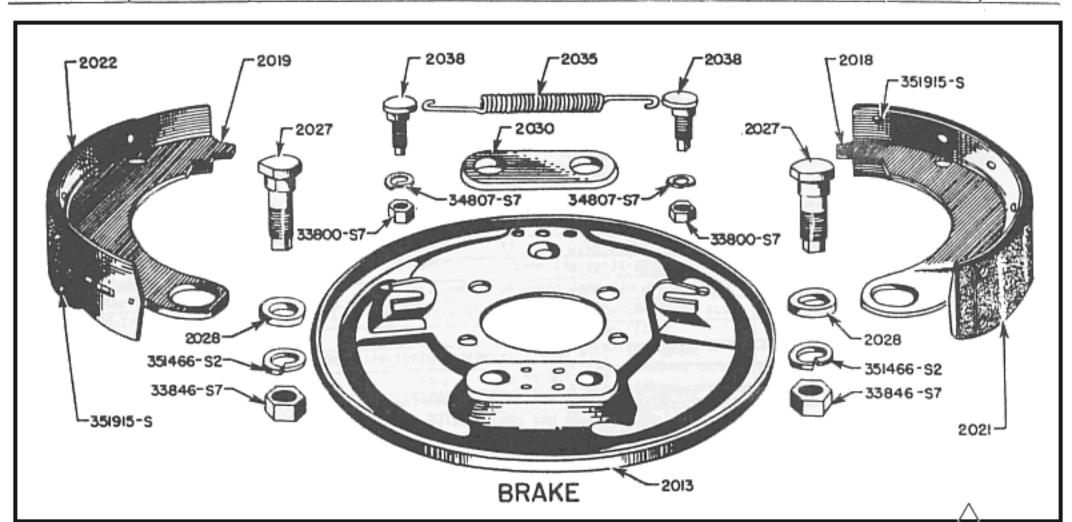

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

A III

8

8

8

A 754

A 755

5010

			Shoe and Lining	Jeep!	Draw
GP	2018	1.10	Shoe & lining assy-brake-forward	639995	14
GP	2019	1,10	Shoe & lining assy-brake-reverse	639996	4
GP	2021	.6	Lining-brake shoe-forward	639997	14
GΡ	2022	1.0	Lining-brake shoe-reverse	639998	4
			351915-S 9/16 x 9/32 Tubular rivet-brake lining to shoe-	374586-s	80
			40 front-40 rear		
					+
_					-
					-
			Brake Shoe Support		
91	2027	Δ .1	5 Pin-brake anchor	637899	- 8
GP	2028	,1	O Cam-brake anchor pin	637900	- 8
	70				1 -
91,	1 2000	Δ .1	2 Plate-brake anchor pin	637901	1-4
91.	A 2030	Δ .1	2 Plate-brake anchor pin 33846-S2 1/2-20 Hex nut-brake anchor pin-4 frt4 rear	637901	1
91.	A 2000				14
91.	A 2030		33846-S2 1/2-20 Hex nut-brake anchor pin-4 frt4 rear	637924	14
	2035		33846-S2 1/2-20 Hex nut-brake anchor pin-4 frt4 rear 351466-S24 1/2 Lockwasher- brake anchor pin-4 frt4 rear 4 rear	637924	14
			33846-S2 1/2-20 Hex nut-brake anchor pin-4 frt4 rear 351466-S24 1/2 Lockwasher- brake anchor pin-4 frt4 rear 4 rear	637924 637923	8
			33846-S2 1/2-20 Hex nut-brake anchor pin-4 frt4 rear 351466-S24 1/2 Lockwasher- brake anchor pin-4 frt4 rear 4 rear 9 Spring brake shoe retainer	637924 637923 637905	8

3/8-24 Hex nut-brake adjusting stud nut

3/8 Lockwasher-brake adjusting stud nut

.30

GP 2038

Eccentric-brake adjusting

33800-S7

34807-S2


Ford Notor Company PARTS PRICE LIST

FORD PART NUMBER

LIST PRICE

PART NAME

WILLYS PART NUMBER NUMBER REQUIRED

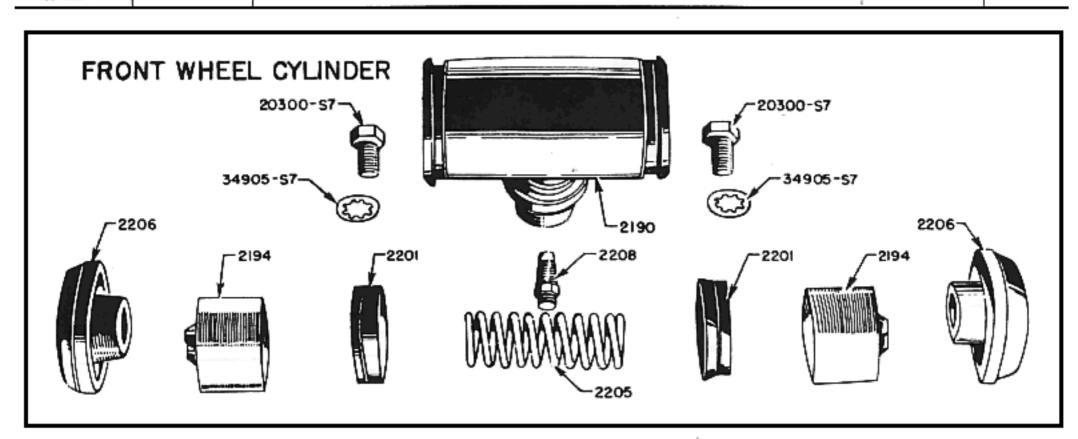


Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

		1207 Front Wheel Cylinder		
	.65	GPW 18371 Kit-front wheel cylinder repair-consists of	115962	1 2
		4 91A-2201, 4 GP-2206		
GPW 2061	2.65	Cylinder assy-front brake	A 1484	2
OPW 2073	.25	Mounting bracket-front brake hose	4 12 ⁰³	1
		357008-S 1/4 x 11/16 Plain flat hd pointed rivet-brake	637432	5
		hose bracket		\neg
GP 2074	.25	Connector-rear brake line to axle-also front	6374.32	5
		20384-S2 1/4-20 x 1" Hex hd.screw-tee to axle tube	6189	2
		34805-52 1/4 Lock washer-tee to axle tube	52706	5
	1.05	GPW 2190 Cylinder-front brake	A 1737	2
	.25	GP 2194 Piston assy-brake wheel-1" diafront	637577	ì,
	Δ .20	91A 2201 Cup-brake wheel cyl1" diafront	637579	I,
	.10	GP 2205 Spring-front brake wheel cyl.piston return	637580	5
	.15	GP 2206 Boot-brake wheel cylinder-front	637546	l.
	.10	GP 2208 Screw-brake wheel cylinder bleeder-front	637540	2
P 2076	.25	Fitting-brake master cylinder outlet	A 557	1
GP 2077	.25	Bolt-brake master cylinder outlet	637605	1
		JeepDraw		
		1209 Brake Hose		
GP 2078	1.15	Hose assy-brake rear-15" long	637424	1
CPW 2078	1,00	Hose assy-brake-front-11" long	A 1373	1
GPW 2079	.75	Hose assy-brake-front-6" long	A 1460	5
GFW 2081	.03	Clip-brake pipe	637439	2
GPW 2082	.06	Bracket-front brake hose-RH	A 1487	1
GPW 2084	.06		A 1486	1
GP 2087	.03	Gasket-brake-hose	637426	. 5
GPW 2096	.35	Guard assy-front brake hose	A 1457	2
		353023-S7 1/4-28 Lubricator fitting	638500	1
GP 2133	.03	Nut-brake pipe-also for front brake hose	384710	14
			1	- 1

GPW 2211-B

Brake assy-rear-IH

FORTS PRICE LIST

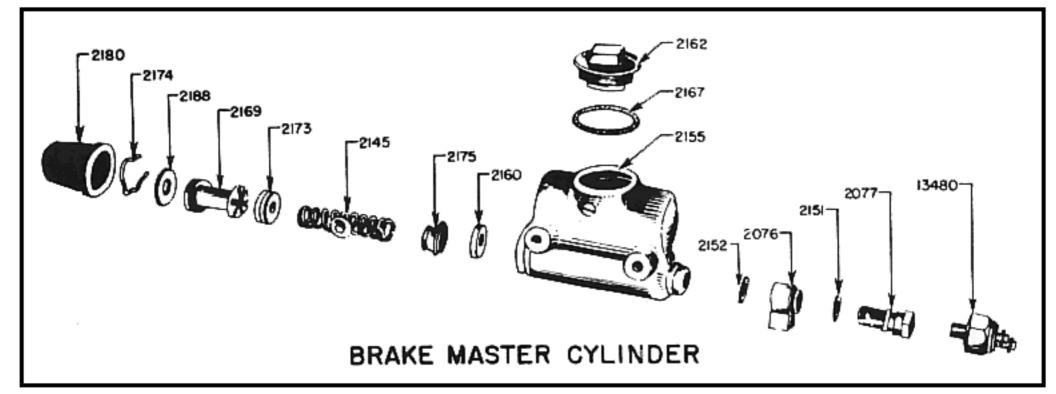

	Baste	numbers only shown on illustration. Order by Part Numbers shown in list of parts.		
		1206 Brake Master Cylinder		
	1.15	GPW 18370 Kit-brake master cylinder repair-consists of	115961	1
		1 GP-2160, 1 GP-2169, 1 GP-2173, 1 GP-2175,		-
		1 GP-2180		•
	.25	GP 2076 Fitting-brake master cylinder outlet	A 557	1
	.25	GP 2077 Bolt-brake master cylinder outlet	637605	1
GPW 21.38	.12	Bar-master cylinder-tie	A 1354	1
GP 2140	4.65	Cylinder assy-brake master	A 556	1
GP 2143-A	.30	Link assy-brake master cylinder -	637599	1
GP 2145	.20	Spring & retainer assy-brake master cylinder-return	637587	1
91A 2151	Δ .01	Gasket-master cylinder outlet-large	637606	1
91A 2152	Δ .01	Gasket-master cylinder outlet-small	637604	1
GP 2155	2.75	Cylinder-brake maeter	637582	1
GP 2160	.15	Seat-master cylinder check valve	637583	1
GP 2162	.55	Cap assy-brake master cyl.filler	637608	1
GP 2167	.05	Casket-brake master cyl.filler	637612	1
OP 2169	.65	Piston assy-brake master cyl.	637591	1
GP 2170	.15	Cup-brake master cyl.secondary	637595	1
GP 2173	.20	Cup-brake master cylprimary	637590	1
GP 2174	.05	Ring-brake master cyl.piston snap	637598	1
GP 2175	.25	Cup-assy-brake master cyl, check valve	637584	1
GP 2176	.20	Retainer brake master cyl.check valve cup	637589	1
GP 2180	.25	Boot-brake master cyl.	637602	1
GP 2183	.20	Cup-master cylcheck valve	637586	1
GP 2188	.05	Plate-brake master cylpiston stop	637597	1
		1207 Rear Wheel Cylinder JeepDrow		
	.70	GPW 18368 Kit-rear whl.cyl.repair-consists of 2 GPW-2201,2 GPW-2206	A 6133	1
GP 2192	1.25	Cylinder-rear brake	637789	5
GPW 2196	.25	Piston assy-brake wheel-rear-3/4 dia.	A 613	4
GLM 5501	.20	Cup-brake wheel-cylrear-3/4 dia.	A 6116	14
GP 2204	.10	Spring-rear brake wheel cyl.pieton-return	637545	5
GFW 2206	.15	Boot-brake wheel cylrear	A 6117	4
GP 2208	.10	Screw-brake wheel cylbleeder-rear	637540	5
		1202 Service Brake—Rear		
GPW 2210-B	7.50	Brake assy-rear-EH	A 6109	1
		355578-S 3/8-24 x 13/16 Hex hd.ecrew-rear brake assy to flange		12
		34807-S2 3/8 Lock washer-rear brake to flange	501.0	15
		55786-S2 5/8-24 Nut-rear whl, brake assy to rear brake disc flange	636575	12
CPU 2211-B	7.50	Praka Asav-rear-IH	4 6110	

A 6110

Ford Motor Company

PARTS PRICE LIST

FORD PART HUMBER	LIST PRICE	PART NAME	PART NUMBER	REQUIRE
		1209 Brake Pipe		
DN 5553	.02	Clip-brake tube	52839	1
CBA 5577	.04	Clip-brake pipe	A 1378	5
GPW 2250	.04	Clamp-front axle brake tube	A 1515	5
i		27097-52 \$10-32 x 5/8 Rd.hd.scrov-axle tube clamp screv	50060	13
		34141-S2 10-32 Sq.nut-axle tube clamp acrev nut	6273	3
		27145-52 #10-32 x 1" Rd.hd.screw-1 rear axle-2 front axle	6583	3
GPW 2261	2.65	Cylinder desy-rear brake	A 610	-2
GPV 2263	.20		A 1501	1
GPW 2264	.40		A 1377	1
GPV 2265-B	.60		A 5224	1
GPV 2266	.45		à 1376	1
GPW 2267-B GPW 2268-B	.25		A 5225	1
	.25		A 5226	1
GPV 2270-B	.06		A 5593	1
OPV 2272			A 1735	1
		20367-S2 5/16-24 x 7/8 Her hd.ecrew-clamp to air cleaner bracket	50929	5
		33798-S2 5/16-24 Hex nut-conduit clamp to air clar.brkt.		ļ.,
		34746-52 5/16 Plain washer-conduit clamp to air clar. brkt.	5910	1
		54806-S2 5/16 Lock washer-conduit clamp to air clar. brkt.	A 1533	1
GPV 2279	.10		51833 638780	2
GFW 2281	.04	-		1
OFF 2201	100	355131-57 #10-24 x 5/8 Rd.hend ocrev	78317 5064	1
		355836-S2 #10-24 Hex nut	6352	1
		For brake tube clip & wiring clip to side rail	0772	1
	1	34803-52 #10 Lock washer-brake tube clip & wiring clip to	50201	
		eide rail	52221	1
GPV 2291	.17		A 133E	
Chr 553g	.25	Brake pipe assy-front wheel cyl. to axle home	A 1488	1
Oth SSSC	.4)	20008-S 1/4-20 x 1/2 Hex hd, holt-clip to flywheel hag.		5
		34805-S 1/4 Lockwacher-clip to flywheel hag.	51.763 52706	1
	L		Se 100	1
	1	Brake Pedal		
GPW 2458	1.70	·	A 1386	1
	0-	353027-A1-S7 1/8 Lubricator fitting-brake pedal assy	392909	1
GPW 2454	.85		A 1359	1
		357501-S 3/16 x 1-1/8 Pin-brake & clutch pedal pad to shank	300'573	5
		24426-S2 5/16-18 x 1-1/4 Hex hd.screw-pedal shank to pedal 34806-6 5/16 Lock washer-pedal shank to pedal	6157	2
			51833	5
		356561-6 Pedal shaft washer	A 198	3
	-	72063-8 5/32 x 1-3/8 Cotter pin-pedals to shaft	52944	3
GEN 5/195	.17		A 1d3	1
		33802-62 3/16-20 Hex nut-eye bolt lock nut	5939	1
		356394-S2 7/16 Plain washer-eye bolt to pedal	52835	1
	 	72016-6 3/32 x 3/4 Cottor pin-eye bolt to pedal	5020	1
GPW 2473	.65	X	A 495	1
CPW 2476-A	,12	Grammet-pedal shaft	A 641	2
		1201 Hand Broke		
		Trand Drake	1	
GPW 2598	4.45	Brake assy-nano, Mp.//sepdow.com	A 1008	1
or 2614	2.50		A 1002	1
	***	355551-S 3/8-24 x 1-1/8 Hex hd.bolt-brake drum to flange	A 997	4
		and prop.shaft		
	1	33786-62 3/8-24 Hex nut-brake drum to flange & prop.shaft	636575	4
		34807-62 3/8 Lock washer-brake drum to florige & prop.shaft	5010	4
01T 2616	Δ .05		A 1020	1
GP 2520	1,20	Lining-hand brake	A 1014	1

Ford Hotor Company


PARTS PRICE LIST

PORD PART NUMBER	LIST PRICE	PART HAME	PART NUMBER	NUMBER REQUIRED
		64647-S 9/64 x 5/16 Flat hd.tubular rivet-hand brake	A 1015	14
	-	lining to band		
GPW 2630	.25	Link-hand brake to transmission	A 1005	1
		73889-67 3/8 x 7/8 Clevis pin-brake support quadrant pin	A 1006	1
		72017-6 1/8 x 3/4 Cotter pin-brake cam		1
		72009-S 3/32 x 5/8 Cotter pin-brake support quadrant pin	52967	1
071 0610	.25	Cam-hand brake band	A 1007	
GPW 2632	1-27	73928-67 1/2 x 1-3/16 Clevis pin-brake cam pin	A 1003 A 1004	2
от 2634	Δ .04			1
01T 2034	Δ ,04	Spring skelle to take 1010gae	A 1017	- 2
GPW 2635	, 12	Spring-hand brake retracting	A 5335	1
01T 2640	Δ .03	Spring-hand brake band support	A 1021	1
01T 2642	Δ .20	Rod-hand brake band adj.	A 1016	1
VAI COTE	1		- A 4040	1
GP 2648	4.25	Band -hand brake & lining assy	A 1009	1
ame adad	-	Overhann had bush sultan		
GPW 2656	•55		A 1226	1
		357553-S18 1/4 x 21/32 Clevis pin-cable to relay crank 355752-S Hand brake-relay crank screw-relay crank to	392468	1
	-		A 1227	1
		trans.bearing cap		-
		33927-67 7/16-20 Hex nut-thin-trans.case nut	52925	1
		72003-5 1/16 x 1/2 Cotter pin-cable to relay crank	5067	1
GPW 2659	.10		A 1228	5
		73904-57 5/16 Clevis pin-1-relay crank to link-1-link to	311003	2
1		cam		
		72004-6 3/32 x 1/2 Cotter pin-trans.case	5354	5
GPW 2780	2,35	Tube & cable assy-hand brake	A 1242	1
GPW 2782	.20	Bandle-hand brake	639244	1
G1 11 21 32		92047-6 #6 x 5/16 Rd.hd.drive screw-handle to tube	52743	2
	+	34706-62 5/16 Plain washer-brkt.to support	5437	2
	+	34806-S2 5/16 Lock washer-brkt.to support	51833	2
	 	33798-62 5/16-24 Hex nut-brkt.to support	5910	2
	 	JAN GE JA TO THE BOX HAD DE RELEGO BERPONT	7,710	+
GPW 2793	.04	Spring-hand brake ratchet tube	635681	1
		24347-62 5/16-24 x 3/4 Hex hd.screw-brkt.to support	51396	2
01т 2805	Δ .15		A 1018	1
011 200)		355352-S7 1/4-20 x 2-1/2 Fill.hd.screw-brake band brkt.	A 1019	1
		33795-62 1/4-20 Hex nut-brake band cap screw	5790	2
		34805-62 1/4 Lock washer-brake band cap screw	52706	1
78 2814-A	Δ .00		637427	6
-010			710013	
GPW 2848	.30	Bracket assy-hand brake ratchet tube	639010	1
CPW 2852	.50	Support-hand brake ratchet tube bracket	A 2892	1
GIN 2072		33798-S2 Nut-5/16-24 ratchet tube brkt.supt.	5910	1
		60371-S 1/4 x 9/16 Rd.hd.rivet-hand brake tube brkt.supt.	52207	
GPW 2853	1.60		A 1241	1
GI = 2077	1.00	20324-S2 1/4-20 x 5/8 Hex hd.bolt	51514	2
		33795-32 1/4-20 Hex nut	5790	5
	 	34805-52 1/4 Lockwesher	52706	2
	+	For emergency brake bracket to dash penel	72.700	+
^	+		6167	5
\longrightarrow	-	77171 112	51833	2
		34806-S2 5/16 Lockwasher For emergency brake bracket to ratchet tube bracket	51033	+
JeepDraw	7			
Mp://pepdow.com	Analog			

JeepDraw

Ford Motor Gompany, PARTS PRICE LIST


FORD PART NAME WILLYS NUMBER REQUIRED

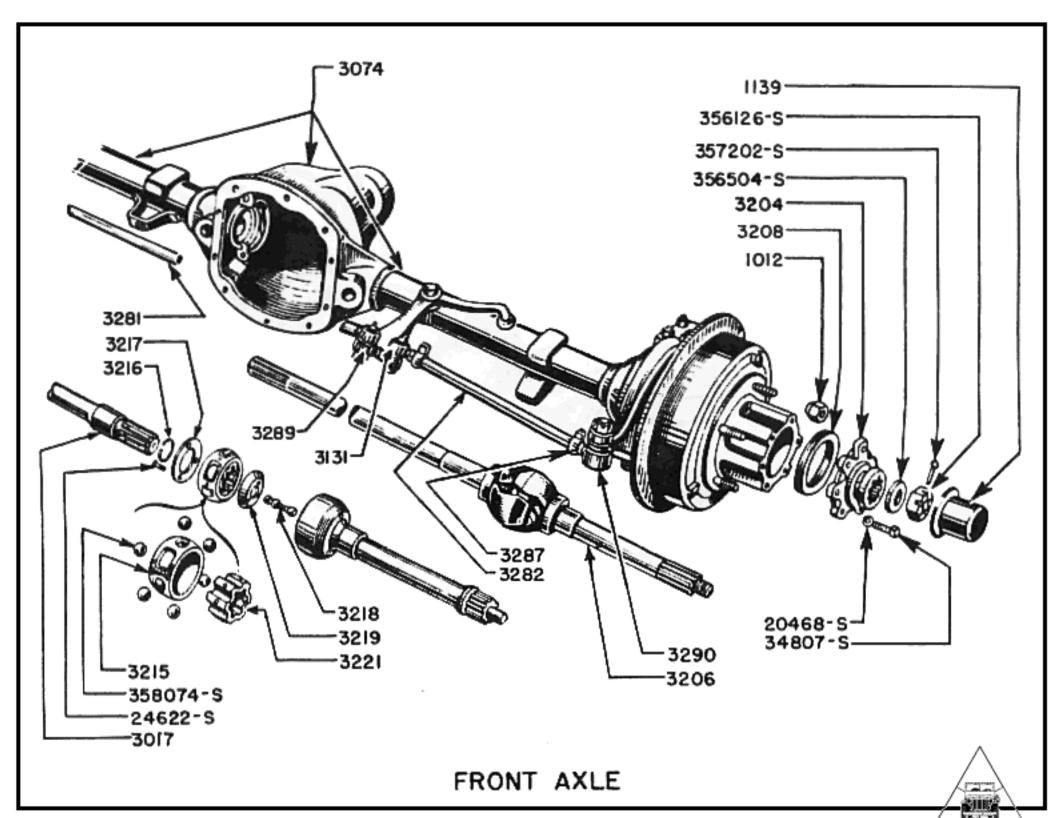

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

		Front Axle	
	4.25	GPW 18365 Front axle gasket set	A 1542
		Consists of 2 GP-1092, 2 GP-1177, 2 GP3031, 1 GPW-9567,	
		2 GP-3034, 4 GP-3135, 4 GP-3139, 2 GPV-3167,	
		1 GP-4035, 1 GP-4661, 1 GP-4676	
-			
		1	
GPW 3001-A	395.00	Front axle assy	A 6029 1

Strat Motor Company PARTS PRICE LIST

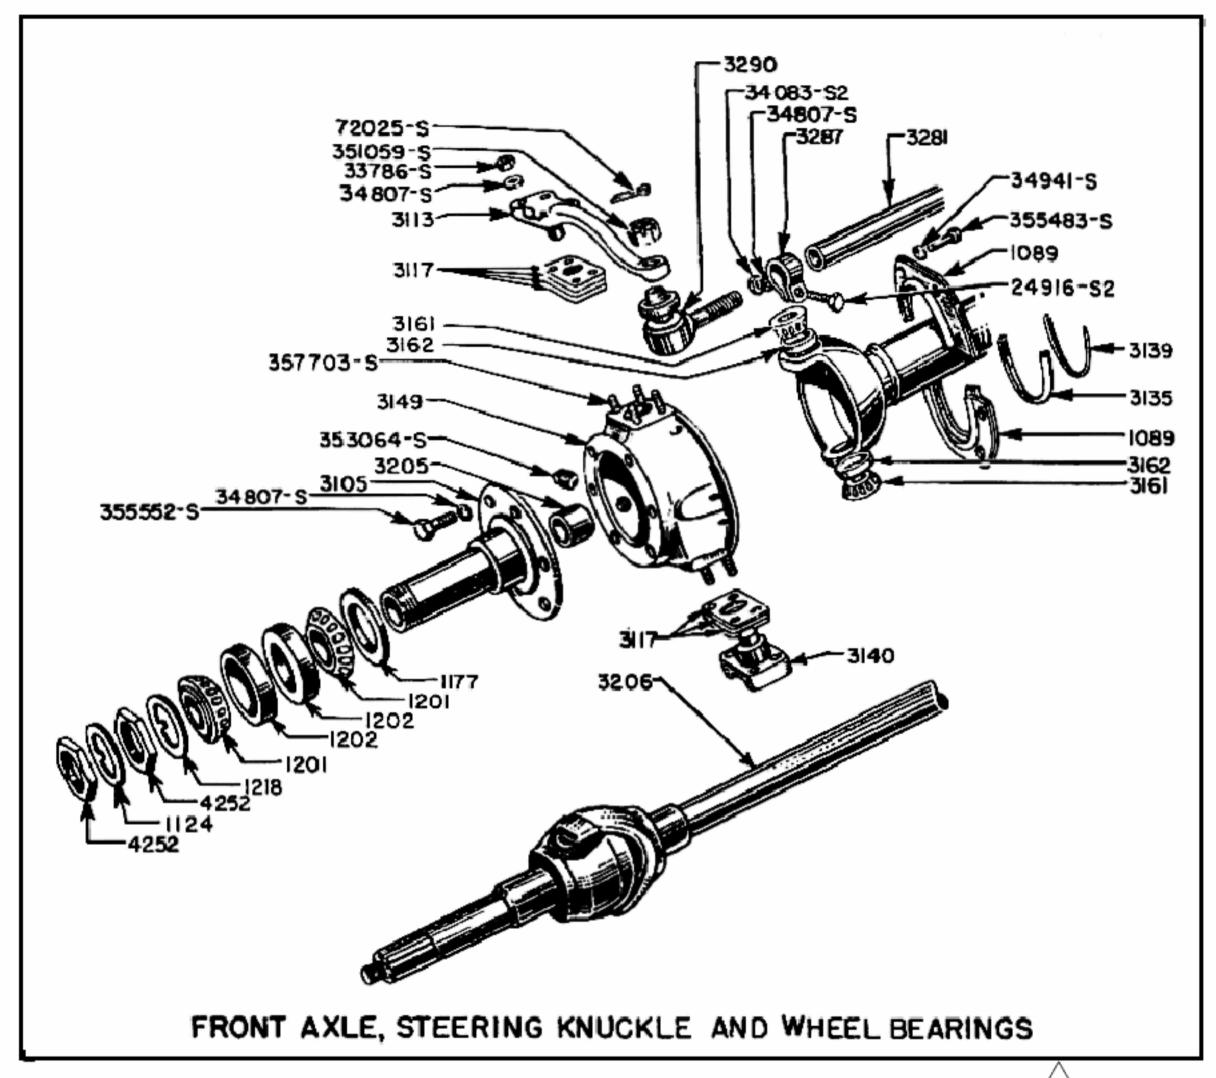


	Basic numbers only shown on illustration. Order by Part Numbers of		
	1006 Front Axle Shaft	JeepDraw Mac/yespatow.com)
CPW 3016-A	7.00 Shaft-front axle RH-Rzeppa Joint	A 1727	1
CPV 3017-A	8.00 Shaft-front axle-LH-Rzeppa Joint	A 1729	1
	356126-6 3/4-16 Hex nut-univ. joint knuckle-Fro	ont axle 636969	5
	356504-6 Washer-flat-univ.joint knuckle-front	axle 636570	2
P 3031	.30 Retainer-front axle shaft-grease-outer	A 778	2
P 5034	.35 Retainer-front atle shaft grease inner	A 779	2
	1001 Front Axle Housing	<u> </u>	
PW 3074	87.50 Housing -assy-front axle	A 1703	1
	.02 GP 4014 Tag-front axle ratio	A 783	1
	1007 Spindle		
P 3105	11.25 Spindle assy-front wheel bearing	A 851	2
PW 3112	5.10 Arm aney-stooring pivot-RE	A 1710	1
CPV 3113	5.10 Arm assy-steering pivot-LE	A 1712	1

PARTS PRICE LIST				
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REQUIRED
GP 3115	-45	Bolt-spindle .	A 824	4
GP 3117-A	.03	Shim-eteering pivot arm .003	A 830	AsReq
GP 3117-B	.03	Shim-steering pivot arm .005	A 831	AnReq
GP 3117-C	•04	Shim-steering pivot arm .010	A 832	AsReq
GP 3117-D	.04	Shim-steering pivot arm .030	A 833	AsReq
		357703-S 3/8-24 Spl.stud-eteering arm-upper	A 1714	8
		357699-6 3/8-24 Spl.stud-steering arm-lower 33786-62 3/8-24 Hex nut-steering arm to knuckle	A 834	8
		34807-82 3/8 Lock washer-steering arm to knuckle	636575 5010	16
	.02		A 825	16
GP 3122	.02		N 02)	4
GPW 3131	4.00	Steeling Min	A 1211	1
GP 3135	.10		A 819	14
GP 3139	.12		A 818	1
GP 3140	2.35	Cap assy-steering spindle pin	A 828	2
GP)140 [2.))		1 0 000	
GP 3148-A	16.75	Steering Knuckie	A 811	1
	16.75		A 812	1
GP 3149-A	**1.90		52940	4-
GP 3161	**1.30	normal a same and areas about the farmer and	52941	4
GP 3162	.65		A 855	1
GPW 3165	.10		A 856	1
GFW 3166	.06		A 858	2
GFW 3167	.06		A 859	1
GPW 3168	.06		A 860	1
GPW 3169	.05		A 861	1
GPW 3170	•••	356124-8 3/4-20 Spl.slotted her nut-bell crank shaft	A 876	1
		72062-6 1/8 x 1-3/8 Cotter pin-bell crank shaft	52527	1
GPW 3171	.55		A 857	2
		353027-67 1/8 Lubricator fitting-bell crank	392909	2
	1006	Front Wheel Universal Joint		
GP 3200	57.50		A 1716	2
GP 3204	5.2		A 868	2
-		355552-6 3/8-24 x 3/4 Hex hd.screv-brake backing plate to	A 877	14
-		steering knuckle		
GPW 3206-A	62.50	Universal joint-front wheel & exle shaft assy-Wi	A 6031	1
GPW 3207 -A	63.50	Universal joint-front wheel & axle shaft assy-IH	A 6030	1
GP 3208-A	.0	Shim-universal joint adjusting .010	A 862	AgRoq
GP 3208-B	.0	Shim-universal joint adjusting .030	A 863	AnReq
		355552-6 3/8-24 x 3/4 Hex hd.screw-brake backing plate to steering knuckle	A 877	12
anti zosli			A 1752	2
GPW 3214	5.7		A 1719	- 2
GP 3215 GP 3216	.0		A 1726	- 2
	. 41		A 1724	- 2
GP 3217		24622-8 #8-32 x 7/16 Flat hd.screw-univ. joint shaft retainer	A 1725	6
	1	357703-6 3/8-24 Spl.otud-steering arm-upper	A 1714	8
		357699-6 3/8-24 Spl.otud-steering arm-lower	A 834	- 8
		33786-62 3/8-24 Her nut-steering arm to knuckle	636575	16
	201	34807-62 3/8 Lock washer-steering arm to knuckle	5010	16
		357423-S 3/16 Dia.pin-1 reqd.frt.axle shaft RH-1 reqd.LH		2
		357426-S 3/16 Grooved pin-1 reqd.frt.axle shaft RH & 1		5
	B	reqd. LH		
		358075-S 13/16 Dia.ball-drilled-1 reqd.frt.axle shaft RH		2
		358087-S 7/8 Steel ball-4 reqd.frt.axle shaft RH & 4 reqd.		8
JeepDraw		IR		+
Mp./4repolox.com		1		

PARTS PRICE LIST

FORD PART HUMBER	UST PRICE	PART NAMÉ	WILLYS PART NUMBER	HUMBER
GP 3216	2.75	Pin-front wheel universal joint	A 1723	2
GP 3219	2.25	Pilot-front wheel universal joint	A 1722	2
		552-74-3 11/16 Steel ball-universal joint	A 1771	12
GP 3221	11.75	Raco-front whool universal joint inner	A 1720	5
1400		1402 Spindle Connecting Rod		
GPW 3279	3.90	Tie rod wasy-lA	A 1705	1
GPW 5260	3,80	Rod anny-epindle connecting-RH	A 1704	1
GPV 5281	1.60	Tube -tie rod +2	A 1705	1
G74 3382	1.60	Tube-tim rod-LE	A 1709	1
51 5287	ر15 عا	Clamp-spindle commecting rod	A 1706	4
		24916-62 3/8-24 x 1-5/8 Hox hd.bolt-opindle cure, rod clump	A 1707	il.
		55786-82 3/8-N Hex nut apinale countred clamp	63/0575	4
		34807-62 3/8-Lock washer-spindle conn.roi clamp	5010	2
	1,75	End suey-spindle convecting rod-RE	A 353	2
GP 3259				

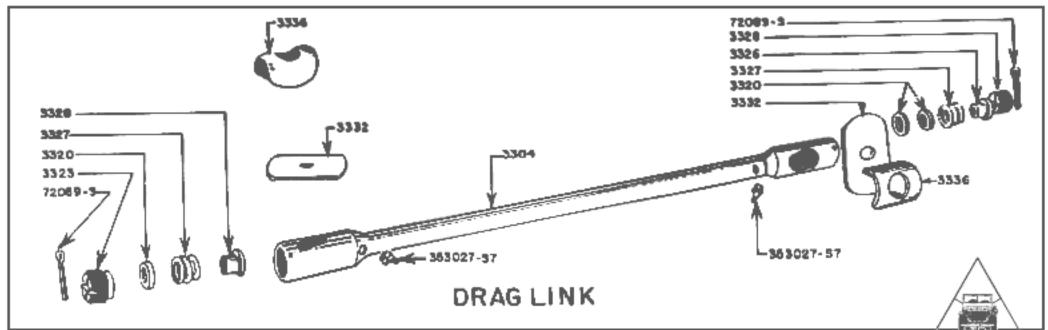

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.


JeepDraw Mp.//repolate.com

			Drag Link		
GIV 3304	1	2,00	Link many-steering drag-complete	A 619	1
GPV 3305	<u> </u>	1,36	Rod-drag link	A 621	1
			355047-67 1/8 labricator-bell crank arm	392909	2
	1		351059-67 1/2-20 Slotted how nut-spindle comm.rod	10558	4
GEW 3320		.04	Ball went drag link	630755	3
GFV 5323		.12	Plug-drag link ball-large	630756	1
78 3326	Δ_	.02	Seat ball atud spring-for drag link & spindle connecting rod appy	A 546	Ţŧ.
GFW 5526		.04	Sent-drag link opring	650753	2
78 5327	Δ	, 04	Spring-ball stud sent-for drag link & spindle consecting rol many	A 841	Ţ
GPM 3327		-O14	Spring-trag link ball	630754	2
2PV 2308		,08	Plug-drag link ball-small	650757	1
GPV 3352-A		.06	Seal-steering drug link dust	A 622	2
78 3532-A	4	.07	Seal-spindle connecting rod dust	л 843	74
75 3356	4	.02	Retainer - cteering drag link & tie red groads	A SILL	Į.
GPW 3336		.12	Shield-ntooring drag link dust seal	A 623	2
2,777			73089-6 1/8 x 1-3/4 Cotter pin-ateering com.rod	513A	2

0900	0901 & 0902	Front Driveshaft & Universal Join	nt	
GPV 3365	22,5	Enuckle & spider ency-front drive emaft	A 1526	1
G7W 3370	9.2	Shaft easy-front drive	A 1428	1
	Δ .1	Oly 4529 "U" bolt-mivermal joint	A 490	3
		33784-62 5/16-24 Hox nut-universal joint "" boit	A 491	6
		34806-82 5/16 Lockyanher universal joint "U" bolt	51833	6
	.0	GP 4533 Strap-universal joint to "U" boil lock		- 3
GP 3374	.3	Washer-front wheel universal joint thrust	A 7P0	2


FORTS PRICE LIST

		PARIS PRICE LIST		
FORD PART HUMBER	LIST PRICE	PART MAME	WILLYS PART HUMBER	NUMBER REQUIRED
		Differential		
	1.95	GP 4015 Cover-front axle differential		1
	.20	GP 4022 Plug-front axle differential cover vent.	A 870	1
	.10	GP 4035 Casket-front axle differential housing	A 782	1
		353051-S 3/4 Pipe plug-front axle differential filler	636538	1
		558048-S 3/4 Pipe plug-front axle differential drain	636577	1
		20046-S2 5/16-18 Hex hd.bolt-front axle differential	51523	10
		34941-S 5/16 Ext. tooth lockwasher-frt.axle differential	52510	10
	5.50	GP 4206 Case -front axle differential gear	A 793	1
	34.00	GPW 4207 Case assy-front axle differential gear	A 788	1
	19.00	GPW 4209 Driving goar & pinion accy-front axlo-matched	A 789	1
	.80	GP 4211 Shaft-differential pinion-front axle	A 798	1
	1.25	OFW 4215 Pinion-front axls differential	A 796	2
	**5.12	GP 4221 Roller & cone assy-front axle differential brg.	52680	2
		(Timken 24780)		
	••2.44	GP 4222 Cup-front axle differential bearing (Timben	52881	2
		24721)	7,000	
		355699-6 1/2-13 x 2-1/4 Hex hd.screw-differential brg.	636527	4
		cap screw		
		34922-6 1/2 Lockwasher-differential brg.cap screw	636528	1
	.10	GP 4228 Washer-front diff.gear thrust	A 795	2
	.04	GP 422)-A Shim-front axle differential brg003	A 784	AnReg
	.04	GP \$229-B Shim-front axle differential brg005	A 785	AnRoq
	.04	GP 4229-C Shim-front axle differential bearing .010	A 786	AnRoq
	.01	GP 4229-D Shim-front axle differential bearing .030	A 787	AnReg
	,10	GP 4250 Washer-Front axle differential pinion thrust	A 797	2
	2,00	GFW 4236 Genr-front axle differential	A 794	2
	.19	OF 1211 Pin-front axle differential pinion shaft look	636350	1
	55	OP 4252 Nut-front axle wheel bearing	A 866	4
	.05	OF 4281 Strap-front axle differential dr.gear scrow look	A 792	1,
		355511-6 Screw-front axle driving goar to diff.case	A 871	8
	1.00		52877	1
	1.00	Tinken 51520	7	 -
	.06	GP 4619 Slinger-front axle driving pinion shaft oil	636566	1
		01 102) 52260 11010 ===============================		+
Annan	Part of the second	m D' '- Di		
	eepDraw //inspalore.com	1003 Pinion Bearings		
	1.50		52876	1
		front bearing (Timken 51595)		
	**1.71	GP 4628 Cup-front axle driving pinion front bearing	52879	1
		(Timber 02520)		
	••2.89	GP 4630 Roller & cone assy-frt.axle drvg.pinion frt.brg.	52878	1
		(Timken 02872)		
	.05	CP 4659-A Shim-front axle drive pinion rear brg003	A 803	ApRoq
	.05	CP 4659-B Shim-front axle drive pinion rear brg005	A 804	AnNoq
	.05	CP 4659-C Shim-front axle drive pinion rear brg 010	A 805	AnRoq
	.05	CP 4659-D Shim-front axle drive pinion rear bearing 050	A 806	AnReq
	.04	GP 4660-A Shim-front axle drive pinion-front bearing003	A 800	AsReq
	.04	CP 4660-B Shim-front axle drive pinion front bearing 005	A 801	AsReq
	.04	GP 4660-C Shim-front axle drive pinion front bearing010	A 802	peSaA
	.05		636565	1
	.06		636568	1
		356504-S Washer-front axle drive pinion flat	636570	1
			636569	1
) 00120-5 0/4-16 Hex nd.nut-iront axie drive pinion		
			636571	1
	.60	357202-S 7/64 x 1-1/2 Cotter pin-front axle drive pinion	636571 A 799	1
	.60	357202-S 7/64 x 1-1/2 Cotter pin-front axle drive pinion GP 4668 Spacer-front axle drive pinion bearing		_
	.60 .55 5.60	357202-S 7/64 x 1-1/2 Cotter pin-front axle drive pinion GP 4668 Spacer-front axle drive pinion bearing GP 4676 Retainer assy-front axle drive pinion grease	A 799	1

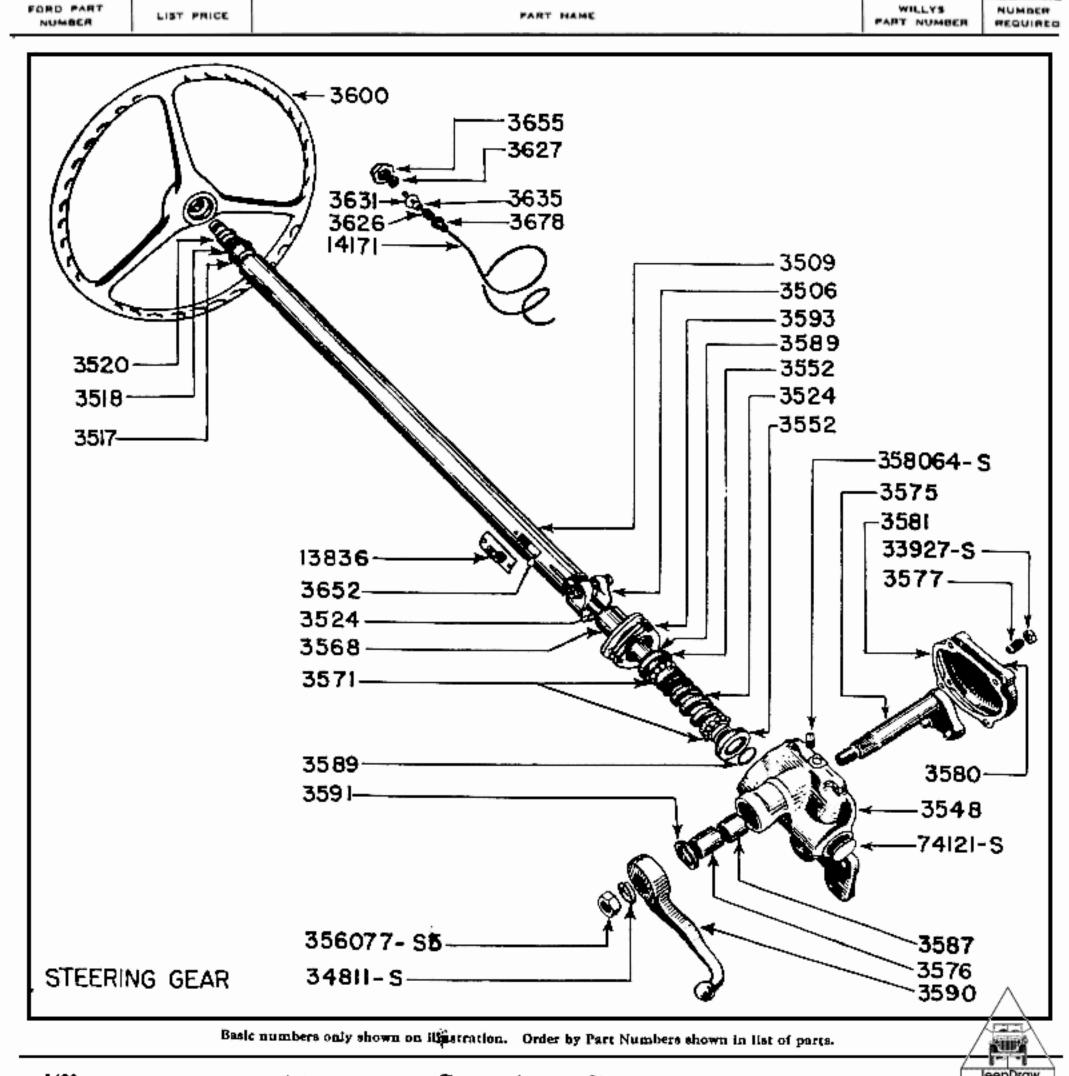

1400		Steering Gear		Mp.//seepolver.com
GPW 3504	16.25		A 1239	1
GPW 3506	.17	Clamp assy-steering column	A 635	1
		21492-62 5/16-24 r 2 Hex hd.screw-stoor.column clamp bolt	51308	1
		34806-62 5/16 Lock washer-steering column clamp bolt	51833	1
		33798-62 5/16-24 Hor nut-steering column clemp bolt	5910	1
GPW 3509	1,10	Tube assy-steering column	A 1199	1
GPW 3511	.15	Clamp-steering column support	A 1276	1
GPW 3517	.25	Bearing assy-steering column upper	639190	1
GPW 3518	.03	Sleeve-steering column bearing upper	619192	1
GPV 3520		Spring-steering column bearing-upper	639191	1
GPM 3521	.01	Ring-steering column-snap		5
			i	


PARTS PRICE LIST				
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REQUIRED
GPW 3524	6.00	Shaft & worm assy-steering	A 742	1
		356303-S 5/16 Flat washer-copper-steering gear housing	639121	5
		cover to housing		
GPW 3548	4.50		A 740	1
		358064-S 1/8 Pipe plug-steering gear housing	5085	1
CPW 3552	.35	Cup-steering gear worm bearing	639102	2
		74121-S 1-1/4 Expansion plug-steering gear housing	51091	1
GPW 3563	.01	Shim-steering gear mounting	638918	SaReq
		33802-S2 7/16-20 Hex nut-steering gear to frame	5939	3
		356439-S 1/2 x 1-1/4 x 1/8 Plain washer-over slotted hole-	638381	1
		steering gear to frame		
		34921-S 7/16 Lockwasher-steering gear to frame	52874	3
GPW 3568	. 35	Cover-steering gear housing end	A 1760	1
		355426-S 5/16-18 x 3/4 Spec.shoulder bolt-end plate to hag.	639107	3
		34846-S2 5/16 Lockwasher-heavy-end plate to housing	52045	3
GPW 3571	.01	Bearing-steering gear ball	639104	22
7-0	7.60			
GPW 3575	3.60	Shaft assy-steering sector	A 746	1
GPW 3576	.10	Bushing-steering sector shaft-long	639091	1
GPW 3577	.10	Screw-steering sector shaft adj.	639118	1
		20386-S7 5/16-18 x 1 Hex hd.bolt-steering gear housing	639120	4
		cover to housing		1
		34846-S2 5/16 Lockwasher-steering gear housing cover to hag.	52045	14
GPW 3581	.02	Gusket-steering gear housing cover	639119	1
GPW 3583	.50	Cover assy-steering gear housing	639116	1
		33927-S7 7/16-20 Hex check nut-steering sector shaft	52925	1
		adj.scr.nut		
GPW 3587	.10	Bushing-steering sector shaft-short	639090	1
		356077-S5 5/8-18 Nut-Hex-steering sector shaft	639115	1
		34811-S2 5/8-18 Lockwasher-steering sector shaft nut		1
GPW 3589	.01	Ring-steering worm bearing retaining	639103	5
GPW 3590	1.50	Arm-steering gear	A 1116	1
GE# 7,70	1.70	Mrs. second Bear		
GPW 3591	.25	Seal-steering sector shaft oil	639095	1
GPW 3593	.02	Shim-steering gear housing end cover	639108	1
GPW 3594	.02	Shim-steering gear housing cover	639109	AsReq
			630330	A eT
GPW 3595	.02	p de la companya del companya de la companya del companya de la co	639110	AeReq
				-
		JeepDraw		-
		Mb.//yespakow.com		

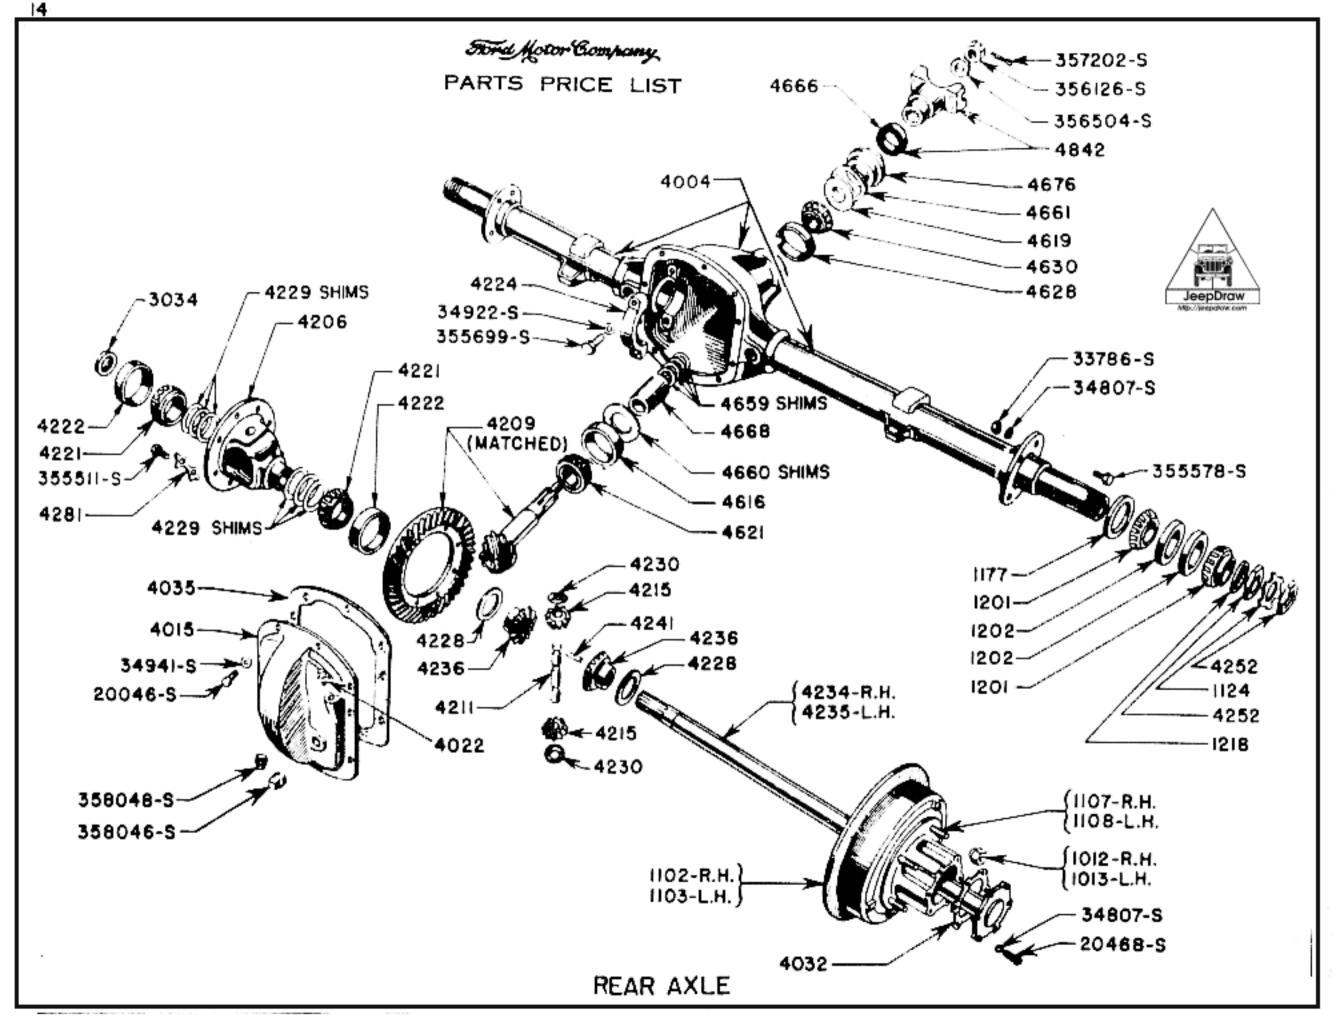

NUMBER	LIST PRICE	PART NAME	PART NUMBER	NUMBER REQUIRED
		Steering Wheel		
GFW 3600	3.10	Wheel assy-steering	A 535	1
GPW 3626	.02	Spring-hern button	638884	1
GPW 3627	.05	Button-horn switch	A 634	1
GFW 3629	.20	Hody-horn switch		1
GPW 3631	.01	Contact-horn button	A 750	1
GPV 3635	.05	Insulator-horn wire terminal	A 751	1
GPW 3646	.06	Support-horn button wire contact	638885	1
GPW 3652	.60	Ring & insulator assy-horn switch commutator	A 747	1
GPW 3655	.50	Nut assy-steering whool	A 633	1
GPW 3658	.30	Support-steering column-inut,panel	A 2859	1
GPW 3692-A	, Ola	Bushing-steering column support clamp	A 1277	1
		24347-82 5/16-25 x 3/5 Hex hd. serew-brkt. to support	51.396	2
		34806-S2 5/16 Lockwasher-brkt.to support	51833	2
		53798-92 5/16-24 Hex nut-brkt.to support	5910	2
		24955-S 7/16-20 x 3 Hex bd.screw-steering gear to frame	51.371	3
GFW 3685	Blank .05		A 2518	1
	Cut .20			
GPW 3686	1.45		A 2517	1
31. 34.4			1	+-
1100		1100 Rear Axle		
	2.60		A 1545	T
		Consists of 2 GP-1177, 2 GP-3034, 2 GP-4052, 1 GP-4035,		-
		1 CP-4661, 1 CP-4676		-
GPW 4001	145.≪		A 445	1
G14 41/07	# " / I Y			
GPW 4004	45.25	1101 Rear Axle Housing	A 888	1 1
GFW 4004 GP 4014	h5, 25	1101 Rear Axle Housing Bouning essy-rear axle Tag-rear axle ratio		
		1101 Rear Axle Housing Bouning assy-rear axle	A 888	1
		1101 Rear Axle Housing Bouning assy-rear axle Tag-rear axle ratio	A 888	1
GP 4014	. 02	1101 Rear Axle Housing Bouning essy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential JeepDraw Monthlessource.com	A 888	1 1
GP 4015	1.95	1101 Rear Axle Housing Bouning assy-rear axle Tag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential	A 888 A 783	1 1
GP #01#	. 02	1101 Rear Axle Housing Bouning assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent.	A 888 A 783	1 1 1 1
GP 4015	1.95	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent, 20046-52 5/16-18 Hex hd. bolt-rear axle diff.cover	A 888 A 783 A 870 51523	1 1 1 1 10
GP 4015 GP 4028	1.95	1101 Rear Axle Housing Bousing assy-rear axle Tag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34941-92 5/16 Ext. tooth lockwasher-rear axle diff.cover	A 888 A 783 A 870 51523 52510	1 1 1 10 10
GP 4015 GP 4022 GP 4032	1.95	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent, 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34041-92 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft	A 888 A 783 A 870 51523 52510 A 904	1 1 1 10 10 2
GP 4015 GP 4022	1.95	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-52 5/16-18 Hex hd. bolt-rear axle diff.cover 34:041-92 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle shaft Gasket-rear axle differential housing	A 888 A 783 A 870 51523 52510 A 904 A 782	1 1 1 10 10 2
GP 4015 GP 4022 GP 4032	1.95	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent, 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34:041-S2 5/16 Ext.tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle	A 888 A 783 A 870 51523 52510 A 904 A 782 636538	1 1 1 10 10 2 1
GP 4015 GP 4022 GP 4032	1.95	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34041-32 5/16 Ext.tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Casket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 558048-S 3/4 Pipe plug-rear diff.housing oil drain plug	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577	1 1 1 10 10 2
GP 4015 GP 4022 GP 4035 GP 4035		1101 Rear Axle Housing Bousing assy-rear axle Trig-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-941-S2 5/16 Ext. tooth lockwasher-rear axle diff.cover Casket-rear axle shaft Gaskot-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-filler plug for rear axle Case-rear axle differential gear	A 888 A 783 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793	1 1 1 10 10 2 1
GP 4015 GP 4022 GP 4032 GP 4035	.00	1101 Rear Axle Housing Bousing assy-rear axle Trig-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-941-S2 5/16 Ext. tooth lockwasher-rear axle diff.cover Casket-rear axle shaft Gaskot-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-filler plug for rear axle Case-rear axle differential gear	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577	1 1 1 10 10 2 1
GP 4015 GP 4022 GP 4032 GP 4035 GP 4036 GP 4206	.00	Housing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-52 5/16-18 Hex hd. bolt-rear axle diff. cover 34:041-32 5/16 Ext. tooth lockwasher-rear axle diff. cover Casket-rear axle shaft Casket-rear axle differential housing 353051-3 3/4 Pipe plug-filler plug for rear axle 358048-5 3/4 Pipe plug-filler plug for rear axle Case assy-rear axle differential gear Case assy-rear axle differential	A 888 A 783 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788	1 1 1 10 10 2 1 1 1
GP 4014 GP 4015 GP 4022 GP 4032 GP 4035 GP 4206 GP 4207	1.95 .20 .09 .10 5.50 34.00	Housing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34:041-92 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Casket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots	A 888 A 783 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788	1 1 1 10 10 2 1 1 1
GP 4014 GP 4015 GP 4022 GP 4032 GP 4032 GP 4206 GP 4207 GPW 4209 GP 4211	1.95 .20 .09 .10 .5.5 .34.0 .80	Housing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-94-92 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential pinion	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 789 A 798	1 1 1 10 10 2 1 1 1
GP 4014 GP 4015 GP 4022 GP 4032 GP 4035 GP 4206 GP 4207 GPW 4209 GP 4211 GPW 4215	1.95 .20 .09 .10 .09 .10 .10 .10 .10 .10 .10 .10 .10 .10 .10	1101 Rear Axle Housing Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-52 5/16-18 Hex hd. bolt-rear axle diff.cover 34.041-32 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential pinion Pinion-rear axle differential	A 888 A 783 A 783 A 783 A 782 A 782 A 783 A 788 A 788 A 788 A 788 A 798 A 798	1 1 1 10 10 2 1 1 1
GP 4014 GP 4015 GP 4022 GP 4032 GP 4035 GP 4206 GP 4207 GPW 4209 GP 4211 GPW 4215 GP 4221	1.95 .20 .09 .10 .5.5 .34.0 .80	Housing assy-rear axle Tug-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34.941-S2 5/16 Ext.tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 558048-S 3/4 Pipe plug-rear diff.housing cil drain plug Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential pinion Pinion-rear axle differential Roller & cone assy-rear axle differential Roller & cone assy-rear axle differential	A 888 A 783 A 783 A 783 A 782 A 782 A 783 A 788 A 788 A 788 A 798 A 798 A 798 A 796 52880	1 1 1 10 10 2 1 1 1 1
GP 4015 GP 4015 GP 4022 GP 4032 GP 4035 GP 4206 GP 4207 GPW 4209 GP 4211 GPW 4215	1.95 .20 .09 .10 .5.5 .34.0 .8 .8 .1.2	Housing assy-rear axle Tag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34:041-32 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle shaft Gasket-rear axle shaft 75:80:48-S 3/4 Pipe plug-filler plug for rear axle 55:80:48-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Poller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721)	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 788 A 789 A 796 52880 52881	1 1 1 10 10 2 1 1 1 1
GP 4015 GP 4028 GP 4032 GP 4035 GP 4035 GP 4206 GP 4207 GPW 4209 GP 4211 GPW 4215 GP 4221	1.95 .20 .09 .10 .5.5 .34.0 .8 .8 .1.2	Bousing assy-rear axle Tag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-041-32 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 5/8048-S 3/4 Pipe plug-rear diff.housing cil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Roller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721) 355699-S 1/2-13 x 2-1/4 Hex hd.screv-diff.boaring cap screv	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 789 A 798 A 796 52880 52881 636527	1 1 1 10 10 2 1 1 1 1 1
GP 4015 GP 4015 GP 4022 GP 4032 GP 4032 GP 4035 GP 4206 GP 4207 GPW 4209 GP 4211 GPW 4215 GP 4222	1.95 .20 	Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-041-S2 5/16 Ext. tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Poller & cone assy-rear axle diff.brg. (Timken 24780) Gup-rear axle diff.bearing (Timken 24721) 355699-S 1/2-13 x 2-1/4 Hex hd.serew-diff.boaring cap corev	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 788 A 789 A 796 52880 52881 636527 636528	1 1 1 10 10 2 1 1 1 1 1 2 2 2 4
GP 4015 GP 4022 GP 4032 GP 4032 GP 4035 GP 4206 GP 4207 GP 4207 GP 4211 GPW 4215 GP 4222 GP 4228	1.95 .20 .00 .00 .10 .00 .10 .10 .10 .10 .10 .1	Housing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Cover assy-rear axle differential cover vent. 20046-82 5/16-18 Hex hd. bolt-rear axle diff.cover 34041-92 5/16 Ext.tooth lockwasher-rear axle diff.cover Gasket-rear axle shaft Gasket-rear axle differential housing 353051-8 3/4 Pipe plug-filler plug for rear axle 358048-8 3/4 Pipe plug-filler plug for rear axle 368048-8 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Poller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721) 355699-8 1/2-13 x 2-1/4 Hex hd.screv-diff.boaring cap screv Wheher-rear diff.gear thrust	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 788 A 788 A 796 52880 52881 636527 636528 A 795	1 1 1 10 10 2 1 1 1 1 1 1 2 2 2 4
GP 4015 GP 4020 GP 4020 GP 4032 GP 4035 GP 4206 GP 4207 GP 4211 GP 4215 GP 4221 GP 4222	1.95 .20 	Bousing assy-rear axle Trag-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Cover assy-rear axle differential cover vent. 20046-82 5/16-18 Hex hd. bolt-rear axle diff.cover 34-041-92 5/16 Ext.tooth lockwasher-rear axle diff.cover Casket-rear axle shaft Casket-rear axle differential housing 353051-8 3/4 Pipe plug-filler plug for rear axle 353054-8 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Reller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721) 355699-S 1/2-13 x 2-1/4 Hex hd.screw-diff.boaring cap screw Uneher-rear diff.gear thrust Shim-rear axle differential boaring .003	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 789 A 798 A 798 A 796 52880 52881 636527 636528 A 795 A 784	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GP 4015 GP 4028 GP 4032 GP 4032 GP 4039 GP 4209 GP 4211 GPW 4215 GP 4222 GP 4228 GP 4229-A GP 4229-B	1.95 .20 .00 .00 .10 .10 .10 .10 .10 .10 .10 .1	Boucing assy-rear axle Trig-rear axle ratio 1103 Rear Axle Differential Cover assy-rear axle differential Plug-rear axle differential cover vent. 20046-52 5/16-18 Hex hd.bolt-rear axle diff.cover 34-941-92 5/16 Ext.tooth lockwacher-rear axle diff.cover Gasket-rear axle shaft Casket-rear axle differential housing 353051-8 3/4 Pipe plug-filler plug for rear axle 358048-8 3/4 Pipe plug-rear diff.housing cil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Reller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721) 355699-S 1/2-13 x 2-1/4 Hex hd.screv-diff.boaring cap screv Washer-rear diff.gear thrust Shim-rear axle differential boaring .003 Shim-rear axle differential boaring .003 Shim-rear axle differential boaring .005	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 788 A 789 A 796 52880 52881 636527 636528 A 795 A 784 A 785	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GP 4015 GP 4020 GP 4032 GP 4035 GP 4035 GP 4206 GP 4207 GP 4211 GP 4215 GP 4221 GP 4222	1.95 .20 	Housing assy-rear axle Trag-rear axle ratio Trag-rear axle ratio Trag-rear axle ratio Trag-rear axle differential Drug-rear axle differential cover vent, 20046-S2 5/16-18 Hex hd. bolt-rear axle diff.cover 34-041-32 5/16 Ext. tooth lockwacher-rear axle diff.cover Gasket-rear axle shaft Casket-rear axle shaft Casket-rear axle differential housing 353051-S 3/4 Pipe plug-filler plug for rear axle 358048-S 3/4 Pipe plug-filler plug for rear axle 368048-S 3/4 Pipe plug-rear diff.housing oil drain plug Case-rear axle differential gear Case assy-rear axle differential Driving gear & pinion assy-rear axle-matched cots Shaft-rear axle differential Pinion-rear axle differential Poller & cone assy-rear axle diff.brg. (Timken 24780) Cup-rear axle diff.bearing (Timken 24721) 355699-S 1/2-13 x 2-1/4 Hex hd.screw-diff.bearing cap screw Washer-rear diff.gear thrust Shim-rear axle differential bearing .003 Shim-rear axle differential bearing .005 Shim-rear axle differential bearing .005 Shim-rear axle differential bearing .005	A 888 A 783 A 870 51523 52510 A 904 A 782 636538 636577 A 793 A 788 A 789 A 798 A 798 A 796 52880 52881 636527 636528 A 795 A 784	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

FORTS PRICE LIST

FORD PART NUMBER PART NAME WILLYS NUMBER REQUIRED

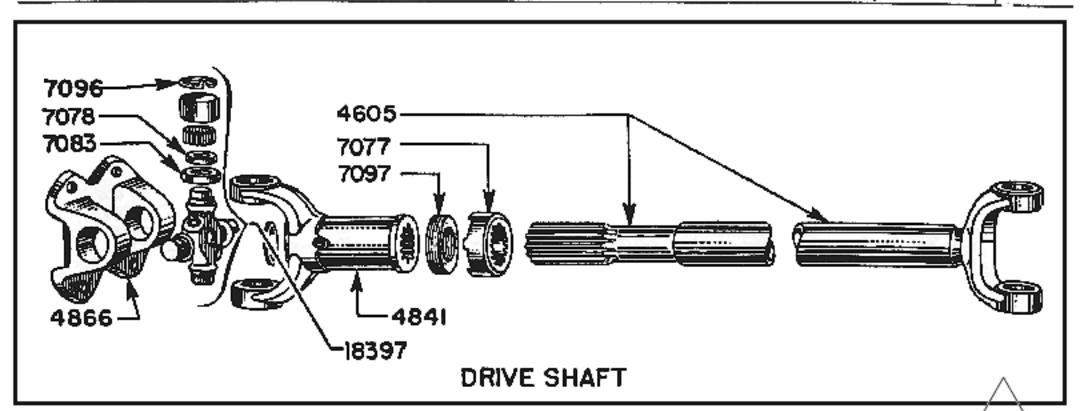

				ALALIA	
Basic :	numbers only shown on illustration. Order by Part Numbers shown in list of parts.		JeepDraw	7	
1102 .	Rear Axle Shafts and Driveshaft			AND.//seepahow.com	_
9-75		Α	901	1	_
 10.75	Shaft-rear exis LH	A	902	1	_
				•	


GPW 4234	9-75	Shaft-rear axle NE	A 901	Τī
GPW 4235	10.75	Shaft-rear exis LH	A 902	1
	.35	GP 3034 Retainer-rear axle shaft grease inner	A 779	
		355578-S 3/8-24 x 15/16 Hex hd. bolt-rear brake assy to fig.	A 903	12
		33786-82 3/8-24 Hex nut-rear broke assy-to florge	636575	12
CPW 4236	2.00	Gear-rear axle differential	A 794	7
OP PSFI	.12	Pin-rear axle diff.pinion shaft lock	636360	1
GP 4252	. 22	Nut-rear axle wheel bearing	A 666	1-1
GP 4281	.05	Strap-rear axle diff, drive gear screw lock	A 792	Į,
01Y 4529	Δ .15	U Bolt-universal joint	A 490	3
		33784-S2 5/16-24 Hex nut-universal joint "U" bolt nut	A 491	6
		34806-S2 5/16 Lockwasher-universal joint "U" bolt nut washer	51833	6
GP 4535	.05	Strap-universal joint to "U" bolt lock	2 mg/s 10 m	3
GPM 11605	25,00	Knuckle & spider assy-rear drive shaft	A 1327	1
GPV 4605	9.25	Shaft assy-rear drive	A 1429	1
		355511-S Screw-rear axle driving gear to diff.case	A 871	8

Pinion Bearings

1.00	Cup-rear axle driving pinion front bearing (Timken 31920)	52877	1
.06	Slinger-rear axle driving pinion shaft oil	636566	1
1.50	Roller & come assay-rear exte driving pinion frt. brg. (Timben 31993)	52876	Ţ
**1.71	Cup-rear axle driving pinion-front bearing (Timken 02820)	52879	1
**2.59	Roller & cone assy-driving pinion front brg. (Timken 02872)	52878	2
.05	Shim-rear axle drive pinion rear bearing .003	A 803	AsReq
.05	Shim-rear axle drive pinion rear bearing .005	A 804	AsReq
.05	Shim-rear axle drive pinion rear bearing .010	A 805	AaRoq
.05	Shim-rear axle drive pinion rear bearing .030	A 806	AaRaq
.04	Shim-rear axle drive pinion front bearing .003	A 800	AaRoq
* Ort	Shim-rear axle drive pinion front bearing .005	A 301	AaReg
, OJ.	Shim-rear axle drive pinion front bearing .010	A 802	AsReq
-05	Gasket-rear axle pinion oil seal	636565	ì
.08	Shield-rear axle drive pinion thrust	636568	1
	556504-S Washer-flat-rear axle drive pinion	636570	1
	356126-9 3/4-16 Ber hd nut-drive pinion	656569	1
	357202-S 7/64 x 1-1/2 Spl.cotter pin-rear axle drive pinion	656571	1
	.06 1.50 **1.71 **2.59 .05 .05 .05 .04 .04	.06 Slinger-rear axle driving pinion shaft oil 1.30 Roller & cone assy-rear exte driving pinion frt.brg. (Timben 31993) **1.71 Cup-rear axle driving pinion-front bearing (Timben 02820) **2.89 Roller & cone assy-driving pinion front brg. (Timben 02872) .05 Shim-rear axle drive pinion rear bearing .003 .05 Shim-rear axle drive pinion rear bearing .005 .05 Shim-rear axle drive pinion rear bearing .010 .05 Shim-rear axle drive pinion rear bearing .030 .04 Shim-rear axle drive pinion front bearing .005 .04 Shim-rear axle drive pinion front bearing .005 .04 Shim-rear axle drive pinion front bearing .005 .05 Gasket-rear axle drive pinion front bearing .010 .05 Gasket-rear axle drive pinion thrust .06 Shield-rear axle drive pinion thrust .07 Shim-rear axle drive pinion thrust .08 Shield-rear axle drive pinion thrust .09 Shield-rear axle drive pinion thrust	.06 Slinger-rear axle driving pinion shaft oil 1.50 Roller & come assy-rear exte driving pinion frt.brg. (Timben 31593) **1.71 Cup-rear axle driving pinion-front bearing (Timben 02820) **2.89 Roller & come assy-driving pinion front brg. (Timben 02872) 52878 .05 Shim-rear axle drive pinion rear bearing .003 A 803 .05 Shim-rear axle drive pinion rear bearing .005 A 804 .05 Shim-rear axle drive pinion rear bearing .010 A 805 .05 Shim-rear axle drive pinion rear bearing .030 A 806 .04 Shim-rear axle drive pinion front bearing .003 A 800 .04 Shim-rear axle drive pinion front bearing .005 A 800 .05 Shim-rear axle drive pinion front bearing .005 A 800 .04 Shim-rear axle drive pinion front bearing .005 A 800 .05 Shim-rear axle drive pinion front bearing .005 A 800 .06 Shim-rear axle drive pinion front bearing .010 A 802 .07 Shim-rear axle drive pinion front bearing .010 A 802 .08 Shield-rear axle drive pinion thrust 536565 .08 Shield-rear axle drive pinion thrust 636570 356126-S 3/4-16 Hex hd nut-drive pinion 636569

Sard Hotor Company

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REQUIRED
GP 4668	.60	Spacer-rear axle drive pinion bearing	A 799	1
GP 4676	- 55	Rotziner Assy-rear axle drive pinion grease	639265	1
GP 4842	4.15	Knuckle asay-universal joint	A 935	2
GP 4842	3.60	Flange assy-rear universal joint axle end	A 1445	1
GP 4863	3,40	Flange & sealer assy-trans, case univ. joint rear	A 1105	1
GP 4866	2,75	Toke-coupling shaft flange center	A 950	1

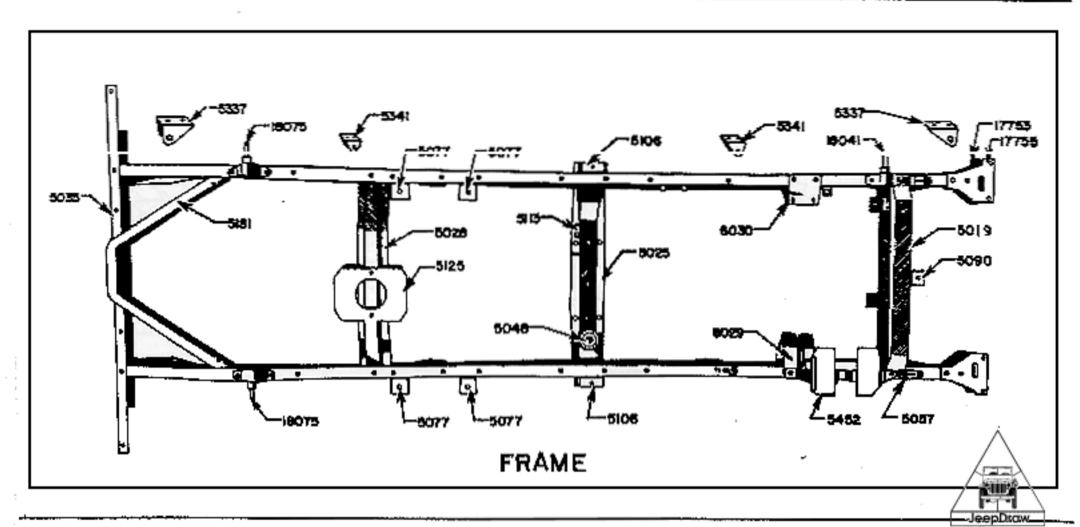

Basic numbers only shows on Illustration. Order by Part Numbers shows in list of parts.

1900		1500	Frame		
CPV 5005	60.00	Assembly-frame		A 1142	1
CFW 5019	1.25	Cross member-fr	ont-aggy		1
		355399-87	5/16-24 x 1" Weld bolt-front cross member		2
1		352104-S	5/16 x 7/8 Plain pointed rivet-front cross member		4
			radiator bracket		+-
		33798-82	5/16-24 Her nut-\$13-14 Bond strap to frt.cr.mbr.		-
GPW 5025	1.40	Cross member-in	termediate	A 406	1
		355399-87	5/16-24 x 1" Weld bolt-#2 cross member		1
		20389-57	3/8-24 x 1" Hex bolt-#2 to #2 cross member brkt.		- 6
		5 58 80-\$	3/8-24 Hex nut-62 to \$2 cross member bracket		6
		54807-62	3/8 Lockwasher-12 to 12 cross member bracket	5010	
GPV 5028	1.30	Cross member-ce	enter	A 1150	1
		357074-8	5/16 x 5/16 Crip-huck rivet-#3 cross member to		2
			side rail .		
GP# 5035	1.90	Cross member-re	er .	A 547	
		357100-8	3/8 x 15/16 Plain pointed rivet-#4 cross member		8
			to side rail		_
GPN 5057	.30	Brackst-radiate	or gward	A 1201	2
		357073-B	5/16 x 3/16 Grip-huck rivet-brkt.to side rail-IH		2
		352103-8	5/16 x 13/16 Flain pointed rivet-rad.grille guard		5
			bracket to side rail		
		552101-S	9/16 x 3/4 Plain pointed rivet-rad,grille guard		2
			bracket center to front cross member		
GPW 5072	.75	Bracket-radiate)T		2
GPV 5077	. 30	Outrigger-body-	-2'062'	A 637	- 4

FORD PART NUMBER	LIST PRICE	PART NAME	PART NUMBER	NUMBER
		357100-S 3/8 x 15/16 Plain pointed rivet-outrigger to side		8
		reil		
PW 508+	.20	Retaining cup-transfer case insulator	A 914	1
PW 5095	.25	Bracket-master cylinder mounting		1
		357008-S 1/4 x 11/16 Plain flat hd.pointed rivot-master	637432	2
		cyl.mtg.brkt.to LH eide rail		
		355066-S 5/16-24 Weld nut-master cyl.mtg.brkt.		1
99A 5090	△ .20	Support-frame to dash panel		1
PW 5097	.30	Plate-reinforcement-frame-rear	A 534	1
pw 5106	.30	Bracket-intermediate-cross member	A 415	2
				-
GPV 5113	.20	Bracket-brake pedal retracting spring	A 185	1
GP4 JIIJ		352101-5 5/16 x 3/4 Plain pointed rivet-brkt.pedal	3 107	1 1
		retracting spring brkt.to # cross member		-
	30		A 1422	+
GPW 5116	.30	Spacer-steering gear bolt 557008-S 1/4 x 11/16 Plain flat hd.pointed rivet-bolt	H 1443	2
		spacer to LH side rail		-
SFW 5118	.45	Shield-assy-master cyl.	A 647	1
				1
GPW 5125	1.00		A 1151	1
		60330-S 3/16 x 3/8 Rd.hd.rivet-clips to shield	5198	3
.,		355398-S2 5/16-18 x 3 Hex hd. screw-master cyl. to brkt.	51798	1
		34726-S2 5/16 Plain washer-master cyl.to brkt.	52274	1
		34806-S2 5/16 Lockwasher-master cyl.to brkt.	51833	1
		20046-S2 5/16-18 x 3/4 Hex hd.ecrev-tie bar & shield to	51523	1
		master cyl.		
		34806-s2 5/16 Lockwasher-tie bar & shield to master cyl.	51833	1
		355444-S 5/16-24 x 3 Hex hd.screw-master cyl.tie bar to	52836	1
		bracket		
		34806-S2 5/16 Lockwasher-master cyl.tie bar to brkt.	51833	1
		33798-s2 5/16-24 Nut-master cyl.tie bar to brkt.	5910	1
	.54		A 1253	1
	• • • • • • • • • • • • • • • • • • • •	20389-S7 3/8-24 x 1" Hex hd.bolt-skid plate to frame		1
		23395-S 3/8-16 x 7/8 Carriage bolt-plate to int. front	52945	4
		cross member		
			5544	14
			52101	1-14
		34747-32 3/8 Plain washer-plate to int.frt.cross member		
		34747-S2 3/8 Plain washer-exh.pipe shield to frame	52101	1
		34807-S2 3/8 Lockwasher-exh.pipe shield to frame	5010	1
GPW 5165	.7	Frame-battery hold down-assy	Λ 1291	1
GPW 5168	.00	Strep-bettery to front fender	Λ 1757	1
				1
GPW 5175	.0	9 Bolt-battery clamp	A 1164	2
	.6	5 CPW 5452 Tray-battery		1
		34806-52 5/16 Lockwasher-battery brkt.to frame	51833	14
		24357-S2 5/16-24 x 13/16 Hex hd.bolt-battery brkt.to frame		4
		Pintle Hook		
CPW 5181	2.10			1
3.		352101-S 3/16 x 3/4 Plain pointed rivet-pintle hook brace		16
		to side rail-RH		
CPW 5182	6.7		A 593	1
			A 552	1
CPW 5196	.1:		n 1)e	· -
		· /=>		-
	1	/ Fefer	1	

5922

54.37


A 6119

1

1

1

Bord Hotor Company PARTS PRICE LIST

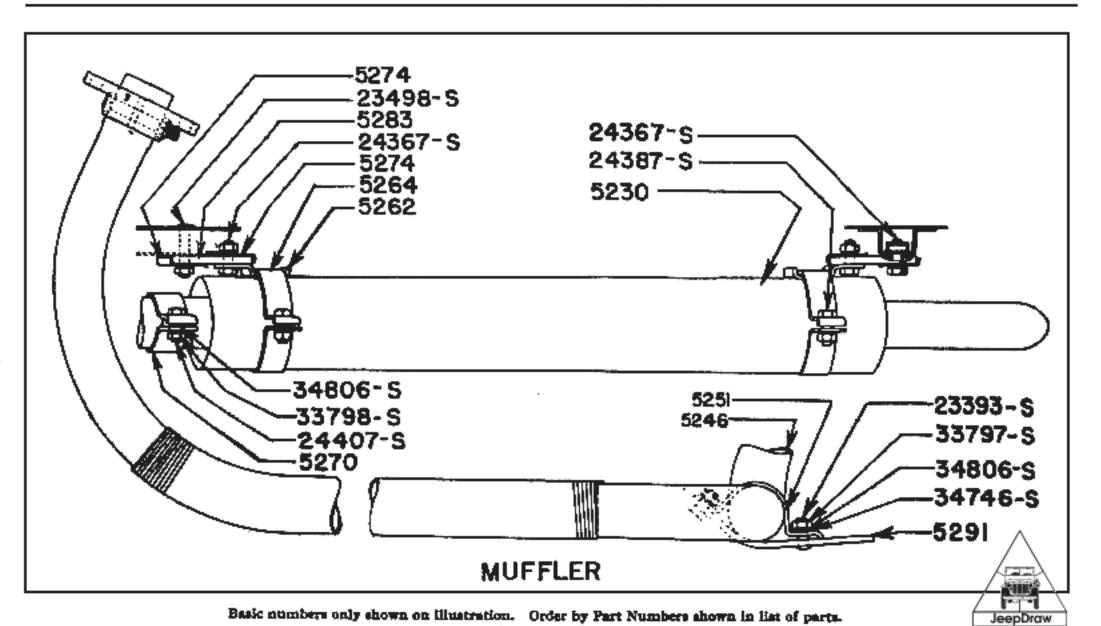

0400		0401	Muffler		
GPV 5230-B	2.60	Muffler assy		A 6118	1
		0402	Muffler Pipes		
CPW 5246	3.15	Pipe assy-muffle	or inlet	A 1296	I
GPW 5251	.12	Clamp-muffler in	nlet pipe	A 1500	1
		23393-82	5/16-18 x 7/8 M.hd.carriage bult-exh.pipe ext.	52983	1
			to skid plate		
		20046-52	5/16-18 x 3/4 Hex hd.screw-exh.pipe ext. to skid	51525	1
			plate		
		34746-32	5/16 Plain washer-exh.pips ext. to skid plate	52274	1
		34806-52	5/16 Lockwasher-exh.pipe ext. to skid plate	51833	2
		33797-82	5/16-18 Her nut-exh, pipe ext. to skid plate	6167	2
GPW 9262	.08	Bracket-muffler	support	A 657	2
		24387-87	5/16-24 x 1 Hex hd.nut-muffler support clamp	5934	5
		20521-87	5/16-24 x 2" Hex hd. screw-muffler supt.clemp	51508	2
•		34806-82	5/16 Lockwasher muffler support clamp	51853	5
		33798-92	5/16-24 Hex nut-muffler support clamp	591.0	5
CPW 5264-B	.13	Clamp-muffler s	upport	A 9753	2
GPV 5269	. 35	Flange-exhaust	pipe	630526	1
		24534-S	3/8-16 x 2-1/4 Hex hd. screw-flange clamp bolt	6486	1
		34807-S2	3/8 Lockwasher-flange clamp holt	501.0	1
		33799-87	3/8-16 Hex nut-flange clamp bolt	5544	1
GPW 5270	.00	Clamp-muffler 1	nlet pipe to muffler	636004	1
		24407-8	5/16-24 x 1-1/8 Hex hd screw-exh.pipe to muffler	5922	1
			clomp		
		34706-92	5/16 Plain washer-exh.pips to muffler clamp	54.37	1
		34806-52	5/16 Locksmaher-exh.pipe to muffler clamp	51833	1
		33798-92	5/16-24 Hex nut-exh, pipe to muffler clemp	5910	1

Screw-tail pipe clamp

Washer-tail pipe clamp screw

20407-8


34706-S2

Clemp-tail pipe

GPW 9259

PARTS PRICE LIST

FORD PART NUMBER	LIST PRICE		PART NAME	WILLYS PART NUMBER	NUMBER REQUIRE
GPW 5274	.04	Plate-muffler sup	port insulator	638058	14
		23498-S2 5	/16-18 x 1-3/4 Rd.hd.carriage bolt-ins.to supt.	52372	1
		0	trap & body eill		
		33797-S2 5	/16-18 Hex nut-ins.to supt.strap & body sill	'6167	1
			5/16-24 x 7/8 Hex bd.screw-ins.to supt.strap &	50929	3
			ody eill		
		34806-s2 5	716 Lockwasher-ins. to supt. strap & body sill	51833	l ₄
		33798-S2 9	/16-24 Hex nut-ine.to supt.strap	5910	2
GPW 5283	.08	Insulator-muffler	support	A 658	2

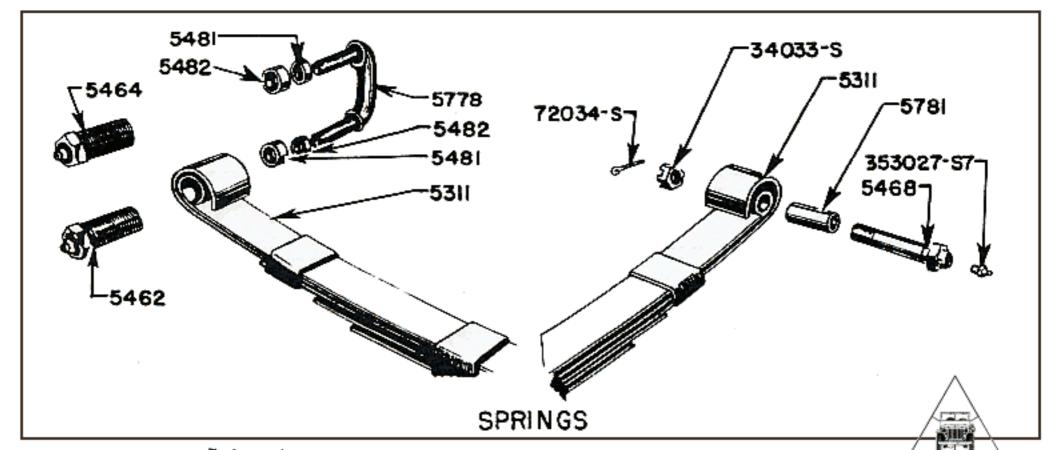

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.


1600	1601	Front & Rear Springs	
GPW 5310	4.10 Spring-	-front-right hand	T 1
GPW 5311	4.10 Spring	-front-left hand	1
GPW 5314-A	.85 Leaf #	1-front right spring	1
CPW 5314-B	.85 Lens #	1-front left apring	1
GPW 5315-A	.90 Leaf #	2-front right spring	1
CPW 5315-B	.90 Leaf #	2-front left epring	1
GPW 5316-A	.55 Leaf #	5-front right spring	1
GPW 5316-B	.55 Leaf 🐔	3-front left apring	1
GPW 5317-A	.50 Leaf	4-front right spring	1
OPW 5317-B	.50 Leaf #	4-front left spring	1
GPW 5318-A	.45 Leaf #	5-front right spring	1
CPW 5318-B 19	.45 Leaf #	5-front left apring	1
CPV 5519-A	.40 Leaf #	6-front right epring	1
GPW 5319-B	.40 Leaf #	6-front left spring	1
GPW 5320-A	.30 Leaf #	7-front right aprice	1
GPW 5320-B	.30 Leaf #	7-front left spring	1
CPW 5321	.25 Loaf #	C-front spring	2
GPW 5530-A		spring-front-short 116458	2
GPW 5330-B		opring-front-long 116460	2
		1522-S 1/4-28 x 2-3/8 Hex hd.bolt-front spring clamp	1 8
		3921-S7 1/4-28 Hex check nut-front spring clamp	8
		0571-S 1/4-9/16 Round head rivet-front spring clamp 52207	8

Shackle Brackets GPW 5537 .70 Bracket-spring shackle-assy


GPW 5337	.70	Bracket-spring	shackle-assy		A 544	14
		352119-8	3/8 x 1-1/16	Plain pointed rivet-spring shackle		4
			to frt.bumpe:	r gusset-lower		

		PARTS PRICE LIST		5.
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
		352126-S 3/8 x 1 Plain pointed rivet-opring shackle to		ia
		side rail		
GPW 5341	.75		A 500	14
		357076-S 3/6 x 7/16 Grip-huck rivet-brkt.to side rail		1 1
		352127-S 3/8 x 1-1/8 Plain pointed rivet-brkt.to side rail		14
1601				
210 5345	Δ .08	Bolt-spring tie-front spring	108411	
GPW 5345-B	.08	Bolt-spring tie-rear spring	108412	5
		33797-S2 5/16-18 Hex nut-front & rear epring tie bolt	6167	14
GPW 5452	.65	Tray-battery		1
GPW 5453	.40	Clip-front spring-RH side	A 574	1
GPW 5455	.30	Clip-front spring	A 1097	3
GPW 5456	. 04	Nut-front spring clip	339372	16
		54848-52 Lockwasher-7/16 SAE-heavy duty-front spring clip	5938	16
GPW 5458	. 45	Plate & shaft assy-spring clip-R-front	A 568	1
GPW 5459	.45	Flate & shaft assy-spring clip-left front & right rear	A 572	2
CPW 5460	.45	Plate & shaft assy-spring clip-left rear	3 571	1
GPW 5463	.30	Bushing assy-spring shackle-LH thread	635532	5
GPW 5464	.30	Bushing assy-spring shackle-RE thread	634432	6
GPW 5468	.28	Bolt-spring shackle	384228	i,
		34033-S18 Nut-castellated 9/16-18 th'dshackle bolt	6436	4
		72034-S Cotterpin 3/32 x 1-shackle bolt	5021	I _E
		353047-S7 Alemite straight grease fitting-shackle bolt	392909	4
CPW 5472	.25	Plate-spring clip-right & left rear-left front	A 573	3
GPW 5481	.04	Spal-spring shackle grease	A 515	8
CPW 5482	.04	Retainer-spring shackle grease soal	A 1252	8
GPW 5560	5.70	Spring-rear	· A 614	5
GPW 5564	1.10	Leaf #1-rear spring		2
GPW 5565	•95	Leaf #2-rear spring		5
GPW 5566	.80	Leaf #3-rear spring		2
GPW 5567	.60	Leaf #4-rear spring		5
GPW 5568	.55	Leaf #-rear spring		5
GPW 5569	. 45	Leaf #6-rear spring		5
GPW 5570	.50	Leaf #7-rear spring		2
GPW 5571	. 40	Leaf #8-rear spring		5
G₩ 5572	.30	Leaf #9-rear spring JeepDraw		2
GPW 5705	.40	Clip-rear spring	A 575	i ₄
GPW 5724-A	.18	Clamp-spring-rear-short	116459	2
CPW 5724-B	.18		116589	2
		21522-S 1/4-28 x 2-3/8 Hex hd.bolt-rear spring clamp		9
		53921-S7 1/4-28 Hex hd.nut-rear spring clamp		9
		60371-S 1/4 x 9/16 Rd.hd.rivet-rear apring clamp	52207	1 8
		Spring Shackles		
GPW 5778	.49		A 513	5
GPM .5779	.49	Shackle-epring-right thread	A 514	5
CPW 5781	.13	Bushing-spring	359039	4
GPW 5783-A	.30	Emper-axle	A 491	4
0100		oloo Engine		
	1,40		A 1536	
		Consists of 1 GPW 6020, 1 GPW-6051, 1 GPW-6288, 1 GPW-6353,		
		1 GPW-6521, 2 GPW-6555, 2 GPW-6619, 1 GPW-6625		
		1 GPW-6627, 1 GPW-6630, 1 GPW-6642, 1 GPW-6648,		
		1 CFW-6659, 1 GFW-6700, 2 GFW-6701, 2 GFW-6702,		
		1 GPW-6710, 1 B-12410, 1 GPW-8255, 1 GPW-8543,		
		1 CPW-9417 1 CPW-9455, 1 CPW-9447, 1 CPW-9448,		
		1 GPW-9450, 4 OLA-12410		


22	22 PARTS PRICE LIST					
PORD PART HUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER		
	.80	GPW 18387 Valve gasket set-comp. walve job	A 1537			
		Consists of 1 CPW 6051, 1 CPW-6521, 2 CPW-6559, 1 CPW-6648,				
		1 CPW-8255, 1 CPW-9435, CPW-9447, 1 CPW-9448,				
		1 GPW-9450, 4 OLA-17/10				
GPW 6005		Engine assy-complete-includes clusch & flywheel hagless trans.	A 440	1		
0.1 000)		and starter				
GPW 6006		Engine-less all electrical units.carburerur, fan, fan be't, air	A 1193	! 1		
GPW 6006		cleaner, fuel pump, clutch & transmission		-		
		Ol01 Cylinder Block				
	51.00		-127	1		
GPW 6010	51.00	74121-S 1-1/4 Expansion slug cyl.block	11:91	5		
		Cylinder assy-includes crankshaft & . amchaft with conn. parts,	A 5609	1		
GPW 6011			N ,009	1		
		valves, chain cover & housed parts, o'l pump & flywheel less oil				
		pan & cyl.head & distributor, coil, oil float, oil level indicator		 		
CPW 6016	1.35		A 1190	1		
CPW 6020	. 014		630 % 9	1		
		20349-S2 3/8-24 x 3 4 Her bd. screw-front cover to plate	50164	3		
		24389-S2 3/8-24 x 1 Hex discrev-front cover to plate	591 C	1		
		33800-S2 3/8-24 Hex rul-front cover to plate	5901	14		
	-	34807-gg 3/8 Lockwaster front cover to plate	5010	1		
		24348-g 3/8-16 x 3/- 5 x hi.eev-plate to block	6412	3		
		34807-S2 Lockweeher-clute to block	5010	3		
		Engine Mountings				
GPW 6029	. 140	Bracket-engine support-front-FE				
GPW 6030	.40			1		
		355966-S 5/16-24 Weld nut-:rout engine suptRH		1		
		357075-S 3/8 x 5/16 Grip-huck rivet-brkt.to side rvii		8		
GPW 6031	1.95	Plate assy-engine front	A 1463	1		
74 6038	l.c		634758	1		
GPW 6038-A	.55		A 592	2		
	.8		A 109	1		
GPW 6040-A			A 146	1		
GPW 6043	. 40	24348-S 3/8-16 x 3/4 Hex hd. screw-brkt. to trans. case bond #15	6412	1		
			52189	3		
			5010	1		
		34807- S2 3/8 Lockwasher-brkt.t. trans.case	A 512°			
CPW 6044	.60		59101	† · · · · · · · · · · · · · · · · · · ·		
		54747-S2 Plain washer-erwitte stay cable		1		
		34807-S2 3/8 Lockwasher-angine stay cable	-010			
		33800-52 3/8-24 Her nut-engine stay cable	5901	5		
		Ol01 Cylinder Head				
CPW 6050	7.3	5 Head-cylinder-6.48 to 1 ratio-met iron	A 1534	1		
GPW 6051	.3		638678	1		
GPW 6065	.0		638635	9		
UN 000)	·	351025-S8 7/16-20 Hox ran-cyl, hd. stud	638539	6		
2771 6066	 .		349368 & A15	19 5		
GPW 6066	 	88027-s */8-16 x 1-15/16 Stud-manifold to cyl.block	349712	1		
	-		632159	2		
	4	88057-S7 3/8-16 x 1-11/16 Stad-manifold to cyl.block	300143	3		
		88042-S 3/8-16 x 1-1/2 Stud-exhaunt manifold		-		
	21112	88027-3 3/8-16 x 1-4/16 Stud-eng.front cover to cyl.block	384958 384958	- 2		
	eépDraw	88032-S 3/8-16 x 1-3/8 State-eng. front plate to cyl. block				
	//yeepahow.com	357689-S 1/4-20 x 1 Stud-ignition coll to cyl.block	635886	5		
		88141-S 5/16-18 2-3/4 Stud-oil pump to cyl.block	375981	3		
GPW 6067	.0	8 Stud-cylinder head-use in stud hole #12	A 1548	1		
GPW 6098	-1		A 1051	AdReq		
	+	24427-S7 5/16-24 x 1-1/4 Hex hd.bolt-pointed-insulator to	6609	4		
	 	engine support bracket-front	1	1		
	-	34746-32 5/16 Plain washer-insulator to eng. supt. brktfrt.	52274	14		
	1	Networds with train applied animate out on sufficient at an animate out of the part of the				

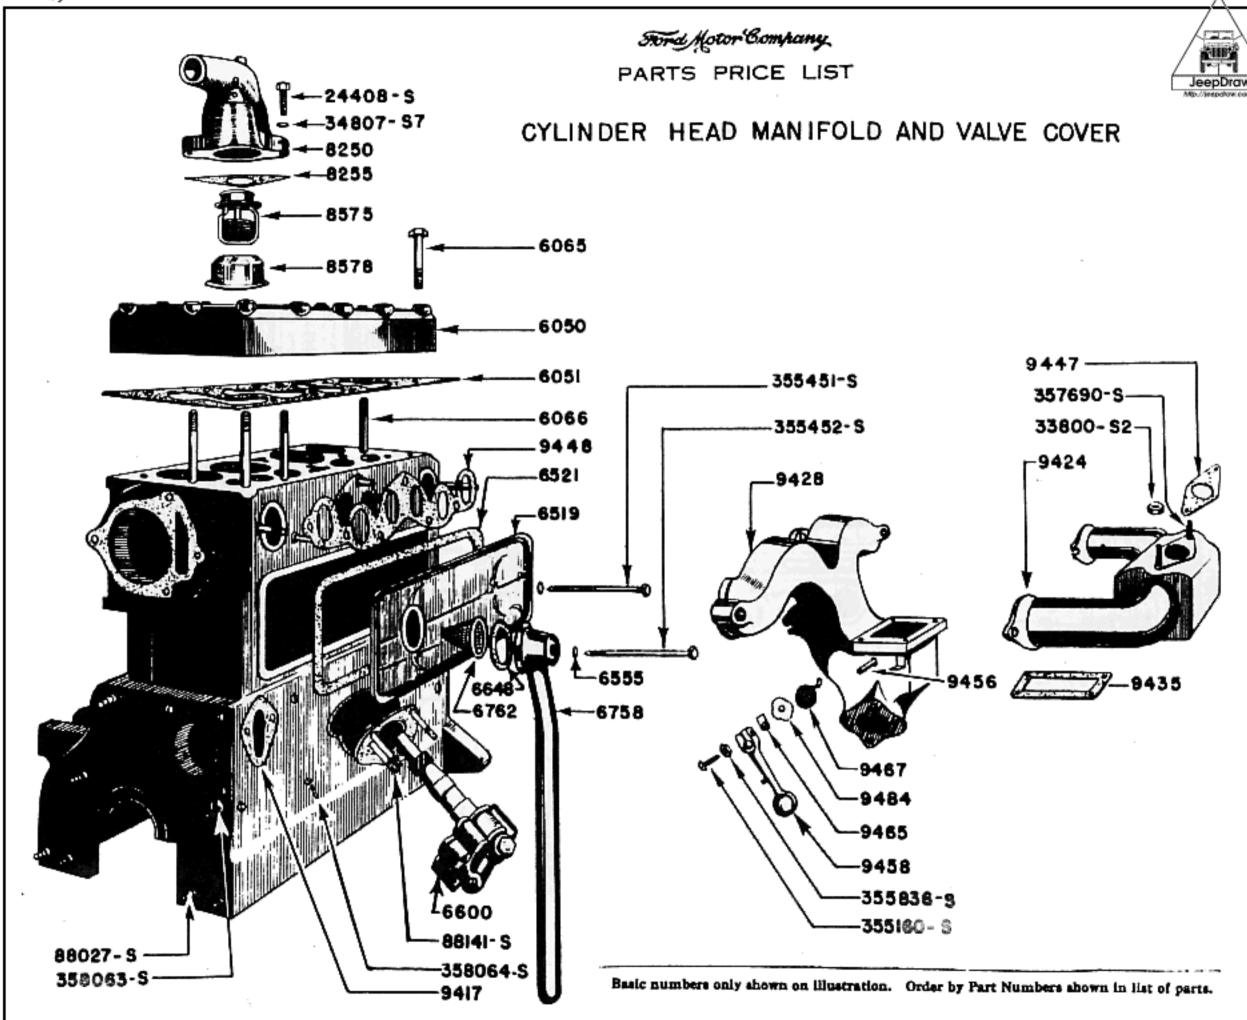




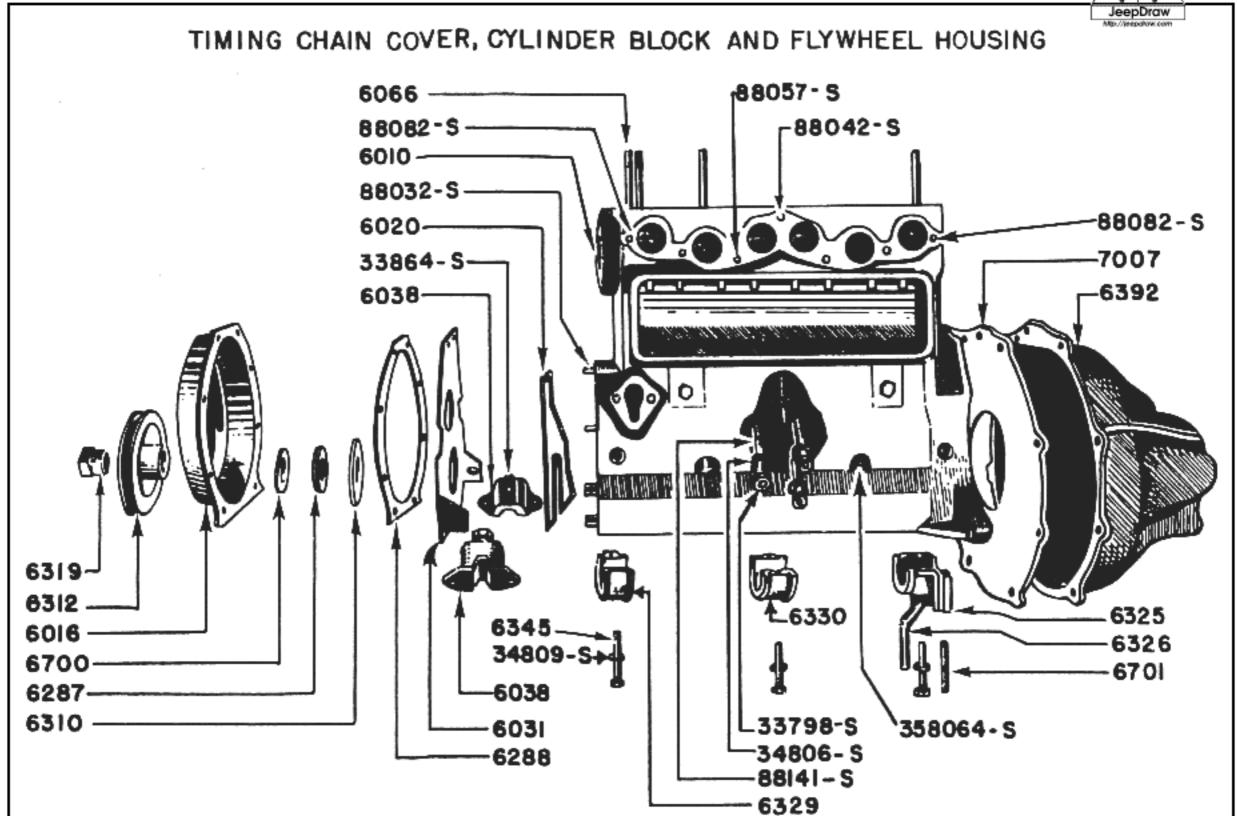

		PARTS PRICE LIST		25
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
		34806-52 5/16 Lockwacher-ins. to engine support brkt-front	51933	4
		33798-S2 5/16-24 Hex nut-insul.to eng.supt.brkt-front	5910	i i
		33864-S 1/2-20 Hex nut-insul.to frt.engine plate	5916	2
		34809-32 1/2 Lockwasher-insul.to frt.engine plate	5009	2
		33800-s2 3/8-24 Hex nut-ins.rear to brkt.& cross member	5901	1
		34747-32 3/8 Plain washer-ins.rear to cross mbr.bolt only	52101	2
		34807-S2 3/8 Lockwasher-ins.rear to brkt.& cross member	501.0	4
	0103	Pistons, Rings and Piston Pins	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
GPW 6110-A	2.15		636954	1 4
GPW 6110-B	2.15	Piston010 oversize	115998	4
GPW 6110-C	2.15	Piston-, 020 oversize	116021	4
CPW 6110-D	2.15	Piston-,030 oversize	116022	4
CPW 6135-A	.40	Pin-piston -std.	636961	14
PW 6135-B	.40	Pin-piston001 oversize	116001	1
PW 6135-C	.40	Pin-piston002 oversize	116008	4
CPW 6135-D	.40		116003	4
PW 6149-A	2.25	-	116110	1
PW 6149-B	2.25	Piston ring-set010 oversize	116111	1
PW 6149-C	2.25	_	116112	1
PW 6149-D	2.25		116113	
PW 6150-A	.10		639864	1 4
GPW 6150-B	,10		116501	1 4
SPW 6150-C	.10			
	,10		116502	i
GPW 6150-D			116503	4
3PW 6152-A	.35		116562	14
PW 6152-B	.35		116563	4
PW 6152-0	.55	Ring-piston compression-lower020 oversize	116564	14
P 6152-D	.35		116565	4
3PW 6159-A	.35	Ring-piston-oil regstd.	116566	4
CPW 6159-B	.35	Ring-piston oil control010 oversize	116567	1 4
PW 6159-C	.35	Ring-piston oil control020 oversize	116568	4
PW 6159-D	-35		116569	4
		355497-S Screw-piston pin lock	632157	4
		34807-S2 3/8 Lockwasher-piston pin lock screv	5010	l _s .
	0104	Connecting Rod and Bearings	639999	T -
GPW 6200	3.50			2
GPW 6201	3.50		640000	3
		356021-S 7/16-20 Nut-conn.rod cap bolt	636962	- 8 - a
		356028-S 7/16-20 Stamped nut-conn.rod cap bolt nut lock	52825 639862	8 8
PW 6211-A	.25	Bearing-connecting rod-standard		
PW 6211-B	.25		116534	8
PW 6211-0	.25		116535	8
PW 6211-D	.25		116536	8
		0106 Camshaft	375907	1
GPW 6243	.15	and the state of t		
CPV 6244	.04		375908 375900	1
GPW 6245	.15	JeepPraw	637065	1
GPW 6250	5.00	and the second s	638458	1
DPW 6256	1.05			
		355499-3 3/8-24 x 1-1/4 Hex hd.screw-sprocket to camehaft	634850	14
GPW 6260	3, 95		638457	1
GPW 6262	.20		639051	1
		74127-S 1-3/4 Expansion plug-rear camehaft bearing	51460	1
DEM 6269	.01	Lockwasher-camehaft sprocket cap screw	315932	4
CPW 6285	.13	The state of the s	630364	1
GPW 6286		Ring-chain cover packing retaining	375917	1
CPW 6287	.08	Retainer-crankshaft seal	375920	1

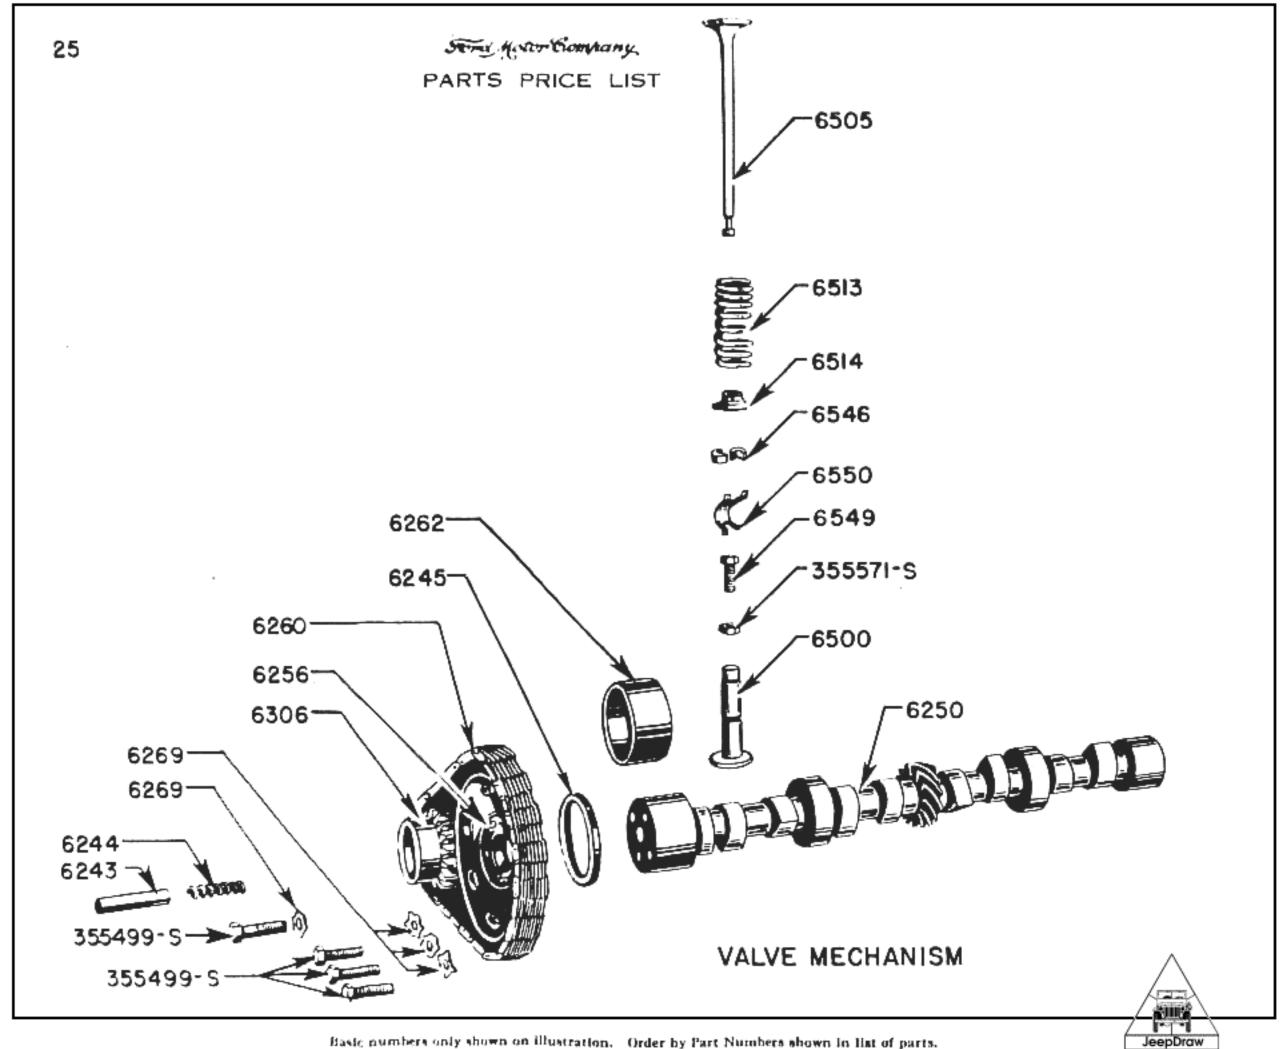

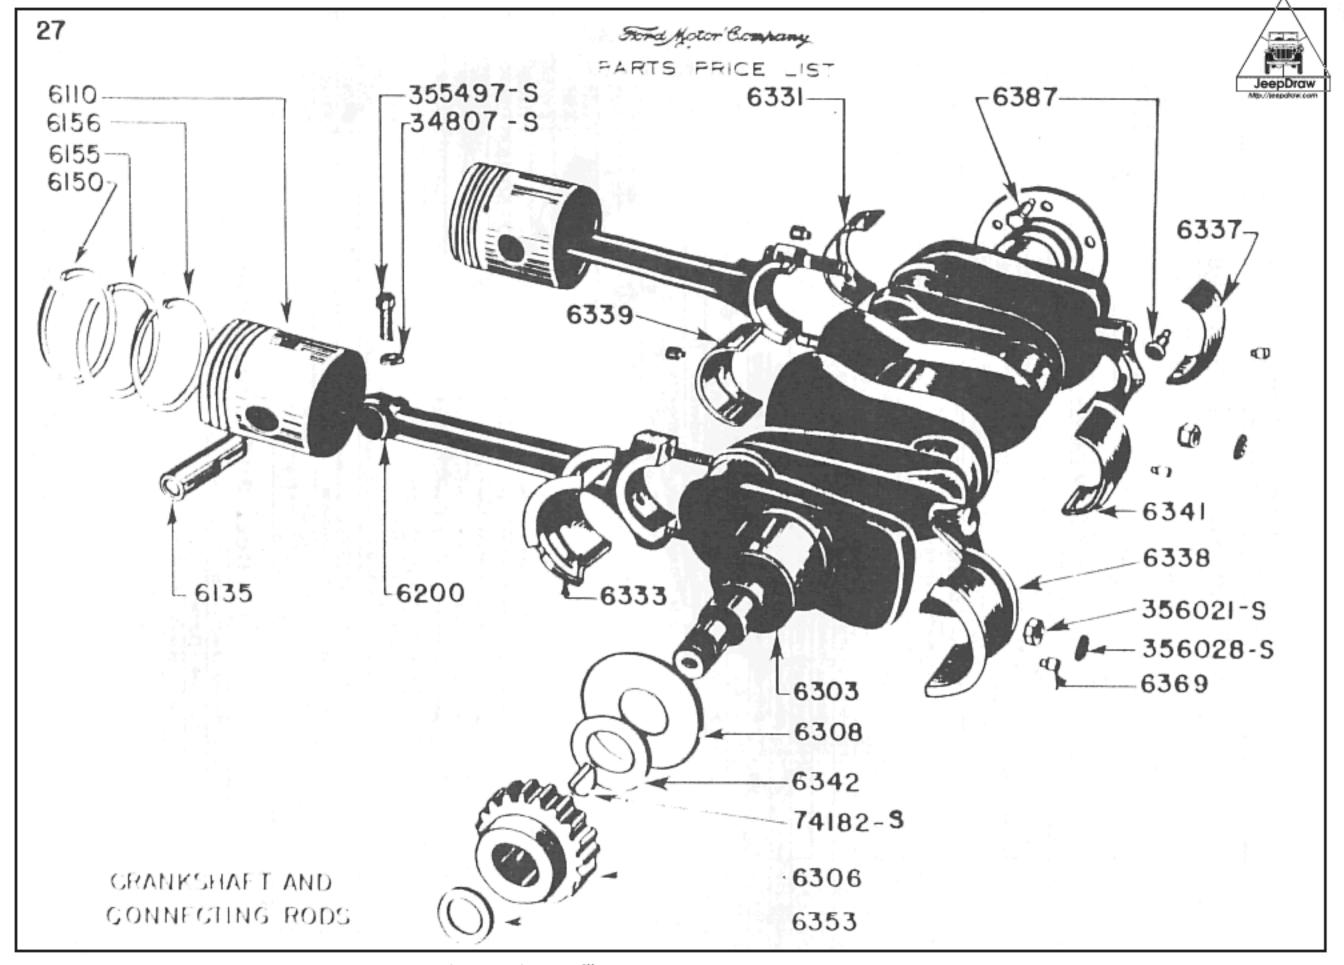


Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

Ford Motor Company

FORD PART			WILLYS	NUMBER
NUMBER	LIST PRICE	PART NAME	PART NUMBER	MEQUIN
Pw 6288	.09	Gasket-front cover 34807-S2 3/8 Lockwasher-plate & cover to block stud	630365	1
		35800-S2 3/8-24 Hex nut-plate & cover to block stud	501.0	6
			5901	6
		0102 Crankshaft and Bearings		
PW 6303-A	19.25	Crankshaft	638121	1
PW 6306	1.20	·	638459	l
Pw 6308	. 30		634796	1
PW 6310	.12	Slinger-crankshaft oil	375877	1
PW 6312	.55		638113	1
GPW 6319	.10		5036 387633	1
JPW 0319	10	557574-S Pin-starting crank nut	28023	1 1
PW 6325	1.05	Cap-rear main bearing	637236	1
PW 6326	.09		630294	1
174 0720		557420-5 1/8 x 7/8 Pin-crankshaft brg.cap drain plug	537112	1
PW 6329	.65	Cap-crankshaft bearing-front	630285	1
PW 6330	.65	Cap-crankshaft bearing-center	630288	1
PW 6331-A	.65	Bearing-crankshaft-rear upper-standard	638732	1
PW 6331-B	.60	Bearing-crankshaft-rear upper010 undersize	639239	1
PW 6331-C	.60	Bearing -crankshaft-rear upper-,020 undersize	116530	1
PW 6331-D	.60	Bearing-crankshaft-rear upper030 undersize	116531	1
PW 6333-A	.85	Bearing-crankshaft-front upper-standard	637007	1
PW 6333-B	.85	Bearing-crankshaft-front upper010 undersize	637724	1
PW 6333-C	.85	Bearing-crankshaft-front upper020 undersize	116522	1
PW 6333-D	.85		116523	1
PW 6337-A	.65	Hearing-crankshaft-rear lower-standard	638733	1
PW 6337-B	,60		639240	1
PW 6337-C	.60	The state of the s	116532	1
2PW 6337-D	60	Bearing-crankshaft-rear lower030 undersize	116533	1
PW 6538-A	.85	Bearing-crankshaft-front lower-standard Bearing-crankshaft-front lowerC10 undersize	637008	1 1
PW 6338-B	.85	Bearing-crankehaft-front lower020 undersize	116524	1
PW 6338-D	.85		116525	1 1
PW 6339-A	.60		638730	1
PW 6339-B	.60		639237	1
PW 6339-C	.60	Bearing-crankshaft-center upper020 undersize	116526	1 1
PW 6339-D	.60		116527	1
PW 6341-A	.60	Bearing-crankshaft-center lower-standard	638731	1
PW 6341-B	.60	Bearing-crankshaft-center lower010 undersize	639238	1
PW 6341-C	.60	Bearing-crankshaft-center lower020 undersize	116528	1
PW 6341-D	.60	Bearing-crankshaft-center lower030 undersize	116529	1
FW 6342-A	.04	Spacer-crankshaft-sprocket	630727	1
		74182-S #13 Woodruff key-sprocket to crankshaft	50917	1
pw 6342-B	. Ola	Spacer-crankshaft sprocket	630262	АвRоq
PW 6345	.12	Screw-bearing cap to crankcase	381519	6
PW 6353	.01	Gasket-crankshaft oil slinger	334103	1
PW 6369	. 04	Dovel-crankshaft bushing	635377	5
		oloo Flywheel and Ring Gear JeepDraw	Ì	
PM 6375	9.50		A 1443	1
PV 6384	1,30	Ring gear-Nywheel	635394	1
PW 6387	. 04	Dowel-flywhoel crankshaft	632156	5
		355497-S Bolt-flywheel	632157	4
		34907-S2 3/8 Lockwasher shakeproof-flywheel dowel & bolte	52332	6
		53800-S2 3/8-24 Hex nut-flywheel dowel & bolte	5901	6
FW 6392	6.25	Housing assy-flywhoel	A 439	1
	0105	Valves, Springs, Guides, Tappets		
PW 6500-A	.40	Tappet-valve-Std.	637047	8
		A CORRESPONDED TO THE PORT OF	2 M 2 C 3 C 4 /	1.57

Stord Motor Gonzany

FORD PART NUMBER	LIST PRICE	. PART NAME	PART NUMBER	REQUIRED
GPW 6505	.50	Vulve-exhaust	637183	4
GPW 6507	. 35	Valve-Intake	637182	4
GPW 6510	.18	Guide-wnlve stem-exhaust	375811	+
GPW 6511	.18	Guide-valve stem-intake	637045	4
GPV 6513	.15	Spring-valve	638636	6
GPW 6514	.08	Retainer-walve opring-lover :	637044	3
GPV 6519	, 30	Cover adoy-waive chamber	656554	1
GPW 6521	.00	Gacket-valve opring cover	630305	1
		355451- : Ecrew-valve spring cover cap-front	632158	1
		355452-S Erew-valve apring cover cap-rear	639052	1
GPW 6546		Lock-valve agring retainer-lower -	375994	16
GPV 6549	.08	Screw-walve tappet adjusting	637048	8
		555571-S 3/9-24 Square nut-valve tappet adj.screw lock	375910	8
GPW 6550	. (4	Spring-valve tappet clearance	637704	8
CPV 6995		Gnoket-velve chamber dever screw	51875	2

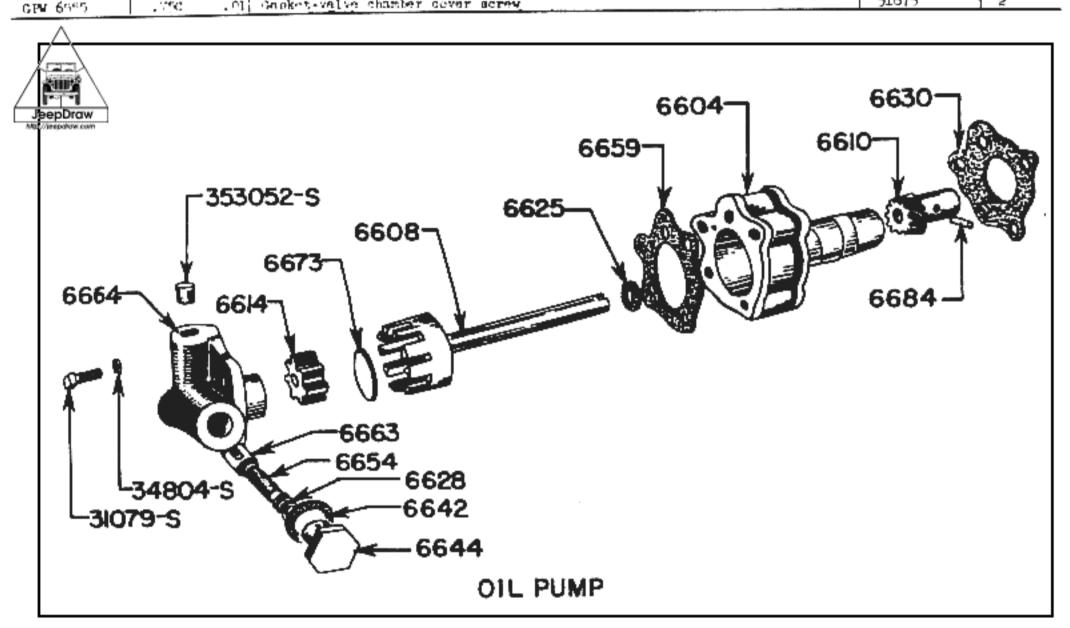

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

		Oil Pump		
GPW 6600	4.65	Punp-oil-eeg	637636	1
GPV 6604	1.95	Body-oil pump	630384	ı
		353052-35 1/8 Slot.pipe plug-oil hele plug in oil pump cover	52525	1
CPV 6608	1,25	Oil pump shaft assy	636599	1
GPW 6610	.65	Gear-oil pump driven	637425	1
GPW 6614	.25	Pinion-oil pump	343306	1
CPW 6615	1.05	Float-oil pump	630396	1
		72053-3 1/8 x 1-1/4 Cotter pin-oil float to support	5108	1
CPW 6617	, 30	Support-oil float	630397	1
GFW 6619	.04	Gasket-oil pump cover	650392	рейви
3PV 6625	.01	Gasket-oil pump shaft	דְנֻכָּפִידוּ	1
OPW 6627	.01	Gasket-oil float support	630398	1


PARTS PRICE LIST

THAN CREE	LIST PRICE	. PART NAME	PART NUMBER	NUMBER
		14 106-32 5'16 Lockwasher-oil Float support to crankcase	-1833	2
		%=3%6-S = 16-18 x 3/4 Hex hd.acrev-oil float supe.to	636796	5
		crankcage		
FR 5628	.01	Shim-oil gamp oil relief apring	6*0389	AeReq
77V 6630	. 04	Gasket-oil pump body to cylinder block	630394	1
		54806-32 5/16 Lockwasher-pump to cyl.block	-18-3	5
		***798-32 */16-24 Hex nut-pump to cyl.block	1 5910	1
77 0042	.01	Gasket-oil pump oil relief apring retainer	634813	1
F- 6644	.15	Retainer-oil pump oil relief apring	630590	1
FW 6648	.01	Gasket-ventilator to valve spring	630299	
F¥ 66°4	.04	Spring-oil relief planger	356155	1
74 6659	. 04	Gaeket-eil pump cover	639870	_
00,,	100	V55062-S Copper gasket pump cover to body acrow	380197	1
	1	1079-S7 #12-24 Screw eval fill.hd-front cover to body	51819	
FW 6663	.04			1 /
2W 000)		557421-S .22 Tapered pin-oil pump shaft	630518	1
PW 6664	1.05	Cover-oil nump-easy	52788	1
			630387	1
P¥ 6673	. 52	Discoil pump rator	636600	1
		Oil Pan		
	.15	GPW 18512 011 pan gasket set	A 1538	
		Consists of 1 GPW-6627, 1 GPW-6710, 1 B-12410		
PW 6675	3.00	Oil pan assy	A 1167	1
Pi 6684	, C1	Pin-oil pump spiral gear	330964	1
F7 6700	.08	Seal-crankshaft-front end	637098	1
PW 5701	.06	Seal-crankshaft bearing cap-rear	637790	5
2v 5702	.04		637237	2
		34809-S2 1/2 Lockwasher-bearing cap to cross screw	5009	6
FW 6710	.12	Gneket-oil pan	639980	1
2,29	1.5-	60356-S7 3/16-x 1/2 Rd.hd.rivet-plug flange to oil pan	52109	14
F4 6727	.15		639979	1
	. 30	Crankcase ventilator assy	A 1061	1
FN 6758		Baffle-crankcase ventilator	630298	1
74 6763	.13		A 5165	1
TW 6763-B	. 30			
FW 6766-3	.20	Indicator-oil filler cap & level assy	A 5168	1
PW 6770	.12	Support bracket-oil filler tube	A 5105	1
	.01	B-12410 Gasket-oil pan brain plug	1 314335	1
0700	1	0700 Transmission		
0700		1 1 all 5 ll l Sop Brow		
	.05	TTW 1 150 Transmission gasket set MacAnagaman	4 1948	
		Conclete of 1 0PM-7051-B, 1 0PM-7903, 1 0PM 7756		
FW 7000	=7.79	Tynnemicsion Assy	A 1145	1
		O701 Transmission Case		
FW 7005	10,00) A 1140	1 1
	. 1714	IN TOTA-P Garket-trans, tage	631499	1
FW 7007	1,50	Flate assy-rear orgine	A 5121	1 :

Transmission Main Shaft Gears, Countershaft and Reverse Idler Gears and Countershaft

TPW TOT" : 11.50 Tear-trans.main.drive	A 4554	1
GRA TO A . Charge timing hold	575217] I
151. To 1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	52046	1
* Transite it is the sheet timing hole cover acres	72776	1
3.04 Benries- rane, re's frien sear bell-Federal 1.00	636954	1

Ford Motor Company PARTS PRICE LIST

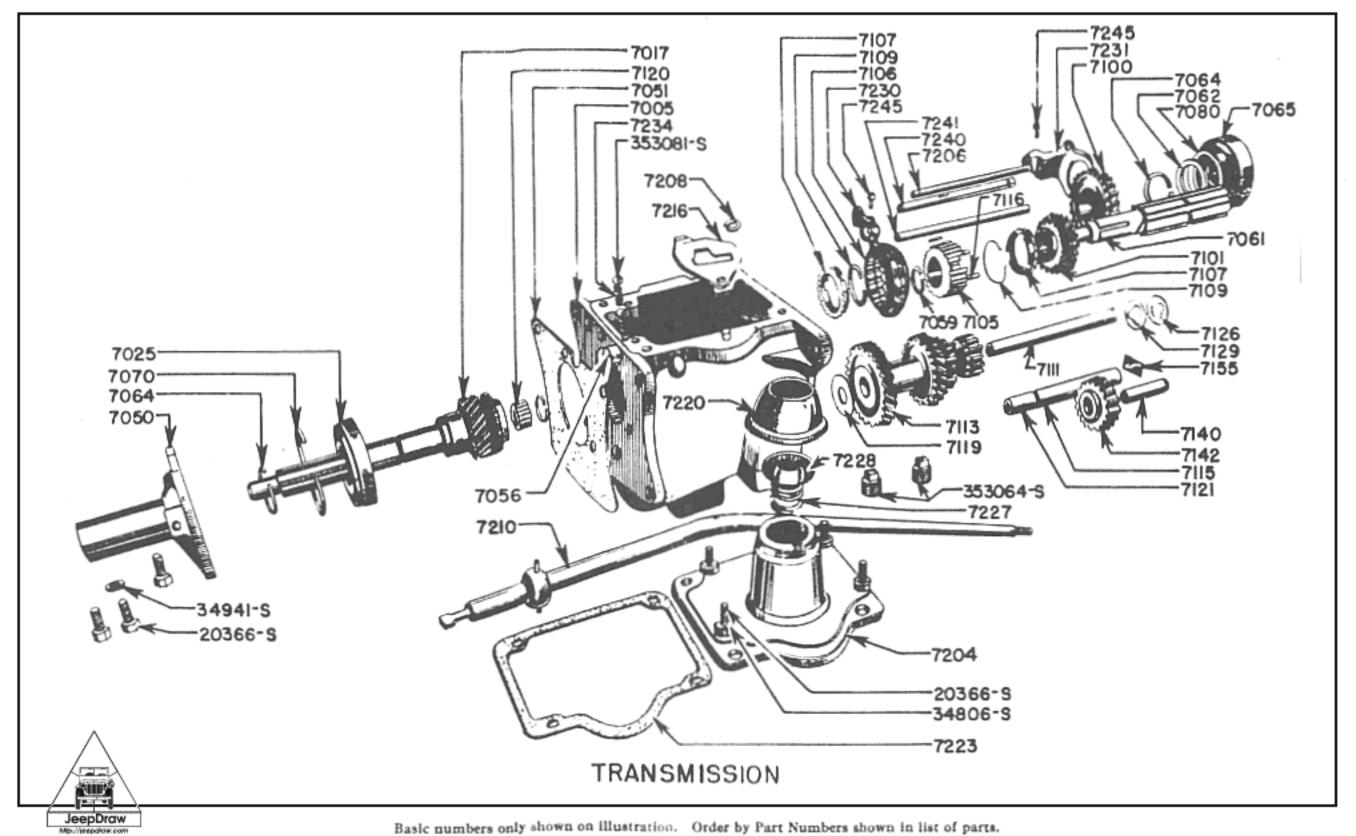

NUMBER	LIST PRICE	PART NAME	PART NUMBER	REQUIRES
GPW 7050	1.60	3	04301;	1
		20366-S 5/16-18 x 7/8 Hex hd.bolt-trans.main drive gear	635868	3
		bearing retainer to case		
		34941-52 5/16 External tooth lockwasher-trans.main bearing	52510	3
		retainer to case		
GPW 7051-B	.04	Gasket-transmission case	637495	1
GPW 7052	.02	Seal-drive gear bearing	640018	1
GPW 7056	.03	Cup-trans.high & inter.gear shifter shaft oil retainer	637503	1
		357417-S .12451255 x .614634 Pin-trans.countershaft	A 524	1
		washer		
GPW 7059	.04	Ring-transmission main shaft snap-thin	637835	1
GPW 7061	7.15		A 519	1
GPW 7062	.15	Spacer-trans.main shaft brg.	A 738	1
GPW 7063	.01	Ring-trans.pilot bearing	639423	1
GPW 7064	.04	Ring-trans.main drive gear bearing to shaft snap	635844	2
GP 7065	3,00	Bearing-trans.main shaft ball (ND 7607)	A 916	1
		72071-S 1/8 x 1-1/2 Cotter pin-trans.main shaft	5397	1
в 7070	Δ .05		635846	1
GP 7077	.20	Cap-universal joint bearing	V 8/15	2
O1T 7078-A	.02	Seal-universal joint greage	A 941	16
GPW 7080	.oe	Baffle-trans.main shaft brg.oil	A 410	1
		0902 Universal Joint		
	5.75	GPW 18397 Kit-universal joint spider	A 1433	
		Consists of 1 GPW-708h, 4 GPW-7074, 4 01Y-7096		
OLY 7083	Δ .06	Perrule-universal joint spider	A 940	16
	4.15	GP 4841 Knuckle assy-universal joint	A 935	2
	5.25	GP 4863 Flange & sealer assy-transfer case univ. joint rr.	A 1105	1
	2.75	GP 4866 Yoke-coupling shaft flange center	A 950	1
	3.60	GP 4842 Flange assy-front universal joint-axle end	A 1445	1
OLY 7096	Δ .05	Ring universal joint spider bearing retainer-snap	A 945	10
GP 7097	.06	Beal-universal joint knuckle dust cap	A 943	2
		0704 Transmission Gears	•	
GPW 7100	4.20		636879	1
GPW 7102	4.75		638798	1
	70.12	L		1
	.20	Bushing-trans.main shaft & inter.gear	635820	1
GPW 7104			635820 637830	1
GPW 7104 GPW 7105	.20	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub		
GPW 7104 GPW 7105 GPW 7106	3.15	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub	637830	1
GPW 71.04 GPW 71.05 GPW 71.06 GPW 71.07	3.15 2.65	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking JeepDraw	637830 637833	1
GPW 71.04 GPW 71.05 GPW 71.06 GPW 71.07 GPW 71.09	.20 3.15 2.65 .90	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub	637830 637833 637834	1 1 2
GPW 71.04 GPW 71.05 GPW 71.06 GPW 71.07 GPW 71.09 GPW 71.11	.20 3.15 2.65 .90 .04	Bub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans.	637830 637833 637834 637831	1 2 2
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7113	.20 3.15 2.65 .90 .04 .65	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft	637830 637833 637834 637831 638948	1 1 2 2 1
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115	.20 3.15 2.65 .90 .04 .65 11.25	Bub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing	637830 637833 637834 637831 638948 A 739	1 1 2 2 1
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115	.20 3.15 2.65 .90 .04 .65 11.25	Bub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Cear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting	637830 637833 637834 637831 638948 A 739 A 880	1 1 2 2 1 1
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116	.20 3.15 2.65 .90 .04 .65 11.25 .55	Bub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front	637830 637833 637834 637831 638948 A 739 A 880 637832	1 1 2 2 1 1 1 3
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7119 GPW 7120	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08	Bub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Cear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing	637830 637833 637834 637831 638948 A 739 A 880 637832 635812	1 1 2 2 1 1 1 3
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7120 GPW 7121	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.countershaft gear	637830 637833 637831 637831 638948 A 739 A 880 637832 635812 639422 A 878	1 1 2 2 1 1 1 3 1
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7120 GPW 7121 GPW 7121	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08 .12 .04	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.c'shaft gear Synchronizer assy	637830 637833 637834 637831 638948 A 739 A 880 637832 639812 639422 A 878 657829	1 1 2 2 1 1 1 3 1 13 2
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7120 GPW 7121 GPW 7124 GPW 7126	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08 .12 .04 .60 5.90 .20	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.c'shaft gear Synchronizer assy Washer-trans.c'shaft gear thrust-rear	637836 637833 637831 638948 A 739 A 880 637832 639812 639422 A 878 657829 A 879	1 1 2 2 1 1 1 3 1 13 2
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7120 GPW 7121 GPW 7124 GPW 7126 GPW 7126 GPW 7129	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08 .12 .04 .60 5.90	Hub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.c'shaft gear Synchronizer assy Washer-trans.c'shaft gear thrust-rear Washer-trans.c'shaft gear thrust-rear	637830 637833 637831 638948 A 739 A 880 637832 635812 639422 A 878 637829 A 879 635811	1 1 2 2 1 1 1 3 1 13 2
GPW 7104 GPW 7105 GPW 7106 GPW 7107 GPW 7109 GPW 7111 GPW 7115 GPW 7115 GPW 7116 GPW 7120 GPW 7121 GPW 7124 GPW 7126 GPW 7129 GPW 7140	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08 .12 .04 .60 5.90 .20 .12 .35	Eub-trans.inter & high clutch Sleeve-trans.inter.& high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Counterchaft-trans. Cear-trans.counterchaft Spacer-trans.counterchaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.counterchaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.c'shaft gear Synchronizer assy Washer-trans.c'shaft gear thrust-rear Washer-trans.c'shaft gear thrust Shaft-trans.reverse idler	637836 637833 637831 638948 A 739 A 880 637832 639812 639422 A 878 657829 A 879 635811 638952	1 1 2 2 1 1 1 3 1 13 2 1 1 1
GPW 71.04 GPW 71.05 GPW 71.06 GPW 71.07 GPW 71.09	.20 3.15 2.65 .90 .04 .65 11.25 .55 .08 .12 .04 .60 5.90	Sheve-trans.inter & high clutch hub Ring-trans.synchronizer blocking Spring-trans.high & inter.clutch hub Countershaft-trans. Gear-trans.countershaft Spacer-trans.countershaft gear bearing Plate-trans.inter.& high clutch hub shifting Washer-trans.countershaft gear thrust-front Roller-trans.main shaft pilot bearing Bushing-trans.c'shaft gear Synchronizer assy Washer-trans.c'shaft gear thrust-rear Washer-trans.c'shaft gear thrust Shaft-trans.reverse idler Gear-trans.reverse idler	637830 637833 637831 638948 A 739 A 880 637832 635812 639422 A 878 637829 A 879 635811	1 1 2 2 1 1 1 3 1 13 2 1

Ford Motor Company PARTS PRICE LIST

POND PART NUMBER	LIST PRICE	PART MAME	FART NUMBER	NUMBER
		O706 Shift Forks		
GPW 7204	2.10		6 tepen	1 1
GPW 7206	.20		639/36	+-
GIM LOGI	.02	Ganket-trans.gear shift housing cap	659962	1 1
GEN TOOP	.01	Spring-trans.abift ; late	644,730	+1
GPW 7010	2.20	Lever-trans.gear shifter assy	5.136c	1-1
GP 7713	. 50	Ball-trans.gear shift lever-1 regd.for trans.gear shift lever-	A 971	- 3
_		2 reqd.for transfer case gear shift lever		
GPW 7015	.20	Plate-trans.gear shift lever guide	635859	1
GPW 7016	.10	Plate-trans.shift	635841	1
		557418-S .370373 x .75 Pin-trans.case to shift plate	635840	1
GPW 7217	.17	Bull-trans.gear shift lever fulcrum	A 1381	1
BB 7020	Δ + 4c	Cap-trans.gear shift housing	A 1379	1
				
GPW 7921	.12	Trunnion-trans.gear shift lever	A 1382	1
		62216-5 3/16 x 7/16 Flat countersunk hd.rivet-trans.gear	635860	
		shift housing to lever guide plate	07,7,00	
GPW 7205	. 04		635861	1
		20366-C 5/16-18 x 7/8 Hex hd.bolt-trans.gear shifter	635868	4
		housing to case	07.000	+
		54346-52 5/16 Lockwasher-trans.gear shifter hag.to case	52045	1 4
GPW "227	.05		392328	1
310			192,20	+
BB 1028	Δ .07	Seat-trans.gear shift lever spring	635863	1
GPW 7230	1.39	Fork-trans.high & intermediate gear shift	636196	1
GPW 7231	1.25	Fork-trans.low & reverse gear shift	636197	1
GPW 7255	.13	Plunger-trans.gear shifter shaft lock	A 1385	1
GPW 7234	.00	P Spring-trans.gear shifter shaft poppet	635837	5
GPW /234		353081-S 5/16-Steel bell-trans.shift rail poppet	635838	2
GFW 721:	.50		A 1156	1
Grw 15"	+		1 1120	1
GPW 7241	.5	Shaft-trans.gear shifter high & intermediate	A 1155	1
	_			4 1
GPW 7345	.12		636200	2
		353064-S 1/2 Pipe plug-ext.hdtrans.case	5140	2
		JeepDraw	a contractor of the	-
		Mb-//sepdow.com		
0203		0200 Clutch		
GFW 7503	1.0	Shaft-clutch release equalizer-assy	A 1355	1
GPW "507	.4	Clutch release equalizer shaft bracket assy	A_179	1
GPW 75 19	.09		A 180	1
GPW 7512	.0	Washer-clutch release equalizer shaft dust	A 887	S
G.V. 7514	2:	Stud-clutch release equalizer shaft ball	à 181	2
4 1,16.7		34808-32 7/16 Lockwasher-clutch control ball	5059	1
		35%01-34 7/16-14 Hex mut-clutch control ball	5336	1
		24327-27 5/16-24 x 5/8 Hex hd.screw-control brkt.to frame	521.32	5
		alde		
		348062 Lockwacher-5/16-control brks.to frame side	51833	- 2
		34000-22 Dickwinger-5-10-control state 5-25		
		33796-S2 */16-0% Hex nut-control brkt.to frame side	5910	5
			5910 5059	2
CPW 7515	7.	33798-S2 2/16-24 Hex nut-control brkt.to frame side	100	


Ford Motor Company

PARTS PRICE LIST

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REGUIRED
CPW 7517	.01	Washer Clutch release equalizer shaft	3 177	3
GPW 7418	.1 5	Cover-transmission case inspection	630103	1
		51308-S 1/2-10 v 1/2 Bex 11. perevenuer to bell housing	1761	
		54805-32 1 % Tookwaleher - novem to relit housing	*270 6	2
		•		
		0204 Clutch Pedal and Spring		
SPV 7520	1.50		A 405	1
GPW 7521	.15	Rod-clutch release pedal	A 499 .	1
		72004-S 3/32 x 1/2 Cotter pin-pedal rod	5354	3
GFW 7523	.79	Spring-clutch & brake pedal retracting	630593	2
CPN 7525	.94	Clutch pedal pad assy	A 1360	1
		357501-S 3/16 x 1-1/8 Pin-clutch pedal pad to shank	300573	1
		74178-S #9 Woodruff key-clutch pedal to shaft	5036	1
		24505-57 5/16-24 x 1-3/4 Her hd. screw-clutch pedal clemp	50992	1
		34806-S2 5/16 Lockwasher-clutch pedal clamp bolt	51833	1
		33798-32 5/16-24 Hex hd.nut-clutch pedal clamp bolt	5910	1
		24426-S2 5/16-18 x 1-1/4 Hex hd.screw-podel shank to pedal	6157	5
		34806-S2 5/16 Lockwasher-pedal shank to pedal	51833	2
		356561-S Washer-pedal shaft	A 498	3
		72063-S 5/32 x 1-3/8 Cotter pin-pedals to shaft	52944	3
GPW 7550	. 45	Clutch control lever cable assy	A 5102	1
GPW 7532	, 09		632177	1
		33798-S2 5/16-24 Hex nut-adj.yoke lock	5910	1
		73890-S 5/16 x 27/32 Clevis pin-yoke and to control lever	339043	1
GPW 7539	.03		A 176	5
		72004-3 3/32 x 1/2 Cotter pin-yoke end to control lever	5354	1
GPW 7545	.04		A 178	1
		72053-S 1/8 x 1-1/4 Cotter pin-clutch control spring	5100	5
				+
		/ [
			4	
		JeepDraw Min-Zierpdow coo	-	+

FORTS PRICE LIST

PORD PART LIST PRICE PART NAME PART NUMBER REQUIRED

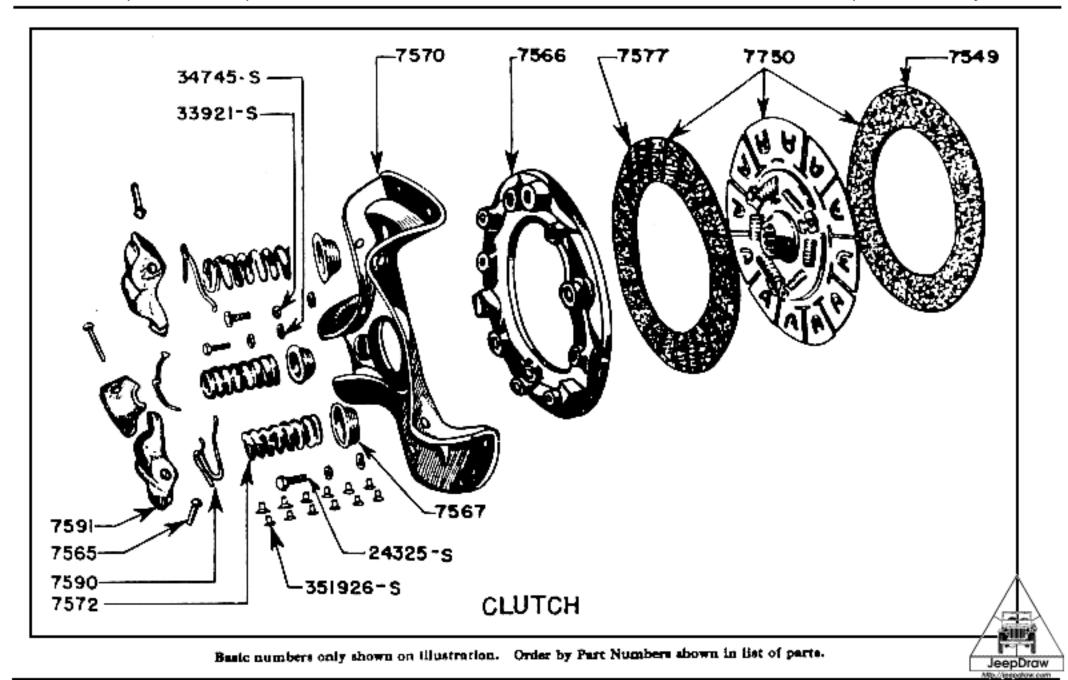

Clutch Disc 0201 GPW 7549 Pacing - clutch disc 371.567 1 751926-S Rivet -clutch feeling 374631 Dine anny-clutch 4.65 636755 GPW 7550 Hub-clutch release bearing 639651 GPW 7561 ī Spring-dutch release bearing 630117 GPV 7962

0202 Clutch Pressure Plate, Cover and Springs

63012 63815 63815	59 3
63815	
	8 T
63815	7 3
63815	1 1
63899	3 3
stch adjusting 63815	4 3
6.1677	·e 1
63592	9 1
63815	3 3
6381.5	8 3
ing acrew lock 63815	5 3
adjusting serov 63830	5 3
	63815 ling acrew lock 63815


	0205	Clutch Pilot Bearing		
GPW 7600 .00	Bearing -cl	with pilot	679578	1

THE

JeepDraw

FORM HOTOR GOMPANY PARTS PRICE LIST

PORD PART
NUMBER
PART NAME
PART NUMBER
PART NUMBER
PART NUMBER

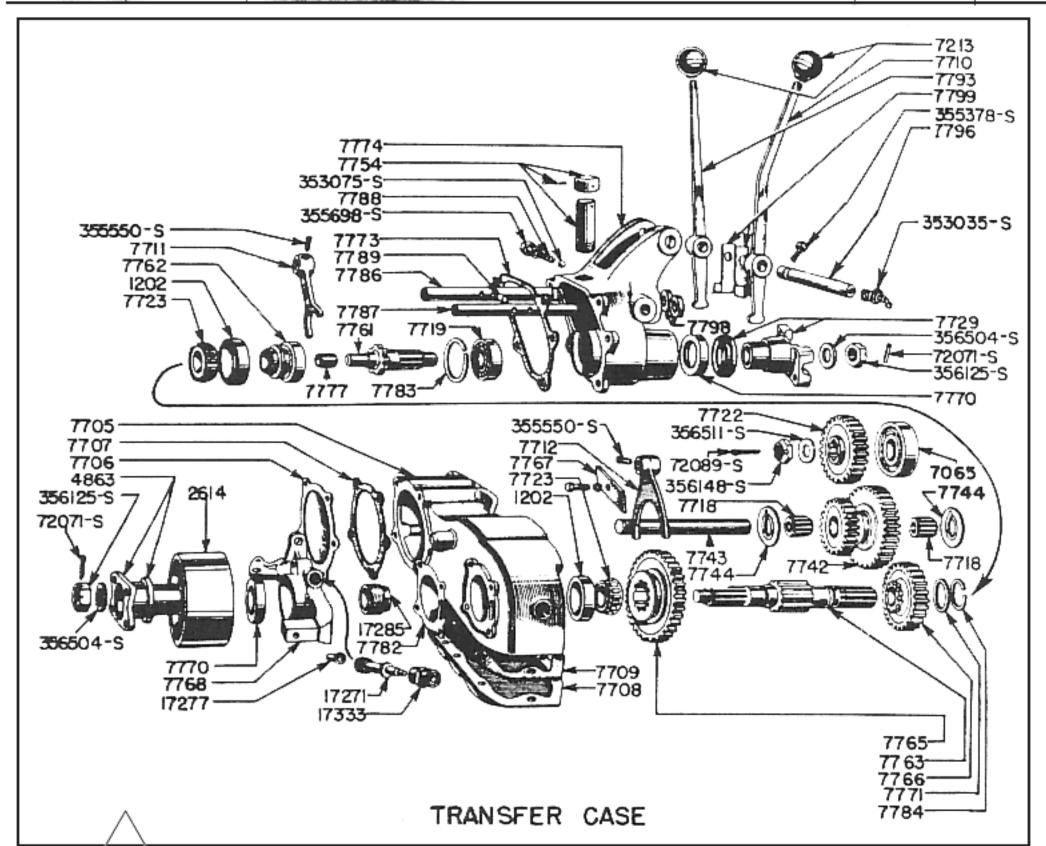

Basic numbers only shown on Illustration. Order by Part Numbers shown in list of parts.

0801	Millo-//yeepahare.com		OBOO Transfer Case		
GPW 7700		175.00	Case assy-transfer	A 1195	l
GPN 7705		50.50	Case-transfer	A 1503	1
GPW 7706		.25	Cover-transfer case-rear	3 1508	1
CPW 7707		.05	Gasket-transfer case cover-rear	A 1509	1
			24348-S 3/8-16 x 3/4 Her hd. screw-rear cover screw	6412	5
			34807-S2 3/8 Lockwasher-rear cover screw	5010	5
GP 7706		1.20	Cover-transfer case-bottom	A 953	1
GP 7709		.06	Gasket-transfer case bottom cover	A 954	1
			20326-37 5/16-18 x 5/8 Hex hd. bolt-bottom cover to case	51485	1.0
			34806-S2 5/16 Lockwasher-bottom cover to case	51833	10
			353064-3 1/2 Pipe plug-transfer case filler	9140	ì
			358059-S 1/2 Pipe plug-countersunk-trans.case drain	A 1104	1
		2,40	GPW-18555 Set-transfor case gasket	A 1543	1

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
	0806	Transfer Case Shift Shaft and Fork		NEGOTA
	•			
		and Shift Lever		
GPW 7710	5,80	Lever-transfer case front wheel shift	A 1506	1
GPW 7711	5.80	Fork-transfer case front axle shift	A 560	1
SF 7712	4.20	Fork-transfer case under drive shifting	A 259	1
GP 7718-A	.65	Bearing-transfer case inter, shaft roller-Hyatt 94322	A 924	?
OP 7719	3,00		A 1007	1
	0802	Transfer Case Drive Gear, Shaft, Bearing	<u>is</u>	
GP "727	10,40		A 1510	1
SP 7725	2,00	Cone & roller assy-trans.case output shaft-Timken 14131-Bower BT14131	51575	1 2
	.45	01Y 1202 Cup-transfer case output shaft-Timken 14276-Bower BT14276		1 2
P 7729	3.75	Flange & sealer assy-trans.case universal joint-front	A 1106	1
		3%6504-S Spec.flat washer-universal flange to trans.case	A 1029	5
		output & clutch shaft .		Ī
		356125-S 3/4-20 Hex nut-universal flange to trans.case	A 980	5
		output & clutch shaft		T
		72071-S 1/P x 1-1/2 Cotter pin-universal flange to trans.	5397	2
		case output & clutch shaft		
	0804	Transfer Case Idler Gear and Shaft		
P 7742	21.80		4 200	1 7
P 7743		Shaft-reverse idler gear	A 999 A 998	1 1
P 7744	.60	Washer-transfer case Inter.shaft thrust	A 1000	+
P 7746	.09	Gasket-transfer case oil seal front & rear	A 1134	5
71110	1	355554-S 3/5-16 x 1 Hex hd.screw-rear brg.cap to case	A 1136	1
		355533-S 3'8-16 x 2 Hex hd. bolt-rear brg.cap to case	A 1137	3
		356205-S Spec.washer-rear brg.cap to trans.case	A 17.35	1 4
P 7747	.03	Slinger-trans.case-dust	A 978	2
P 7754	.40		A 934	1 1
P# 7756	.01		A 1435	1
		34807-52 3/8 Lockwasher-transfer case to trans.case	5010	1 3
		24408-5 378-16 x 1-178 Hex hd. screw-trans.case to trans.case	52911	14
	-	54747-S7 3/2 Flat washer transfer case to trans.case	A 1680	5
		24388-3 */8-16 x 1 Hex hd. screw-trans.case to trans.case	51405	1 1
		24489-3 3/8-24 x 1-5/8 Hex hd acrew-trans.to engine plate	52379	1 2
	1//	to cyl.block		1
	ALERA T	39997-S Bolt-trans.case dowel	630101	1 2
		24409-37 3/2-24 x 1-1/8 Hex hd. screw-trans. to engine plate	6606	14
	JeepDraw	33800-32 3/8-24 put-trans.to eng.plate & cyl.block	5901	18
	No-Amepalow.com	34807-52 3/8 Lockwasher-trans.to eng.plate & cyl.block	5010	18
		72043-S7 3/32 x 1-1/8 Cotter pin-trans.case breather	52976	1 1
P 7761	11.50	Shaft-trans.case clutch	A 975	1
P 7762	6.10	Gear-trans.case clutch	V 565	1
	0805	Transfer Case Output Shaft		-
n 0063	22.50			1
P 7763	11.80		A 968	1
P 7765	13.20		A 989	1
P 7766	.10	Plate-trans.cage inter.gear shaft lock	A 1001	1
P 7767	.10	20328-52 3/8-16 x 5/8 Hex hd. screw-inter.shaft lock plate	52189	1
		34807-S2 3/2 Lockwasher-inter.shaft lock plate	5010	1
Per 27/2	6.70	Cap & bushing accy-trans.case output shaft rear	1	1
PW 7763	.50	Retainer-trans.case output shaft-oil	A 998	1 2
P 7770-A	2.10	Washer transcase output shaft-thrust	A 990	1
P 7771	.05	Sasket-trans.case from brg.car	A 957	1 1
FW 7773	.00	544554-3 3/4-16 x 1" Hex hd.bolt-trans.case front brg.cap	A 11 6	1 4
		to case		+



FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
		*56005-8 Oten.washer-trans.case front brg.cap to case	A 1135	5
GPM TOTAL	ç. 40	Cap-transfer case output shaft front brg.	1 256	1
GP 7776	. 50	Shield assy-transfer case dust	A 1111	2
GP 7777	.13	Bushing-transfer case output shaft clutch pilot	A 927	1
GPW 7781-A	.13	Insulator-transfer case support	634750	1
		356524-5 Washer-trans.case support mounting	634762	1
		355741-S Bolt-trans.case support	A 147	1
		*409-52 1/2 Lockwasher-support bolt	5009	1
		33046-S2 1/2-20 Hex nut-support bolt	637324	1
GP 7782-A	. 04	Shim-transfer case output shaft rear cap .003	A 982	AsReq
GP 7787-B	.05	Thim-transfer case output shaft rear cap .010	A 983	AsReq
GP 7799-0	. હલ	Jhim-transfer case output shaft rear cap .031	A 984	AsReq
GP 7783		Ring-output shaft front bearing-snap	A 976	ABROG
GP 7784	.10	Ring-output shaft rear bearing-snap	A 991	1
GPW 7786	3.00		A 1504	1 1
GP 7787	1.04			+
		355550-S 3/9-24 x .72 Set screw-trans.case shaft fork to shaft	A 962	1
GP 7788	.05		A 963	2
	• • •	355698-S 776-20 Hex hd.bolt-trans.case shift.shaft poppet plug	A 966	2
GP 7789	7 70		A 967	2
G1, 1109	1.12	Interlock-transfer case shifter shaft	A 965	1
CT1 2707	7 00	353075-S 3/8 Steel ball-trans.case shifter shaft poppet	5599	5
GPW 7793	3.90		A 1505	1
GP 7796	. 10	Pin-transfer case shift lever pivot	A 972	1
		35,3035-S7 Grease fitting-pivot pin	638224	1
		355378-S 5/16-18x.50 Set screw-trans.case shift lvr.pivot pin	A 973	1
GP 7798	.40	Seal-transfer case shift rod oil	A 974	2
GP 7799	. 30	Spring-transfer case shifter lever	A 970	2
0500		0501 Radiator		
GPW 8005	30.00	Radiator-assy	A-1214	1 1
		355762-32 7'16-20 x 1-1/2 Carriage bolt-radiator mtg.		2
		34084-S Nut-7/16-20 Rad. to support brkt.		1
		54708-S Washer 7/16 Plain-rad.to supt.brkt.		2
		33802-52 7/16-20 Hex nut-rad, mounting colts	5 3 3 9	1
		34700-S7 7/16 Plain washer-rad mounting bolts	303922	1 2
amr. 91.00	1.41			2
GPW 8100		E 7129-3 Gasket-radiator cap	1 1215	1 1
GPW 8102	1	Derlector-radiator side air-RH	A 1216	1 1
	!	Derlector-radiator side air-LH	A 3175	1
PW 8103			A 3176	1 1
9N 8115	4	Tock-1/2" drain-cyl.water jacket	A 1126	2
		35/3063-3 3/3 Countersunk pipe plug-plug end of oil hole	376373	2
		58064-5 1/8 Pipe plug-cyl.block oil hole	5085	4
GPW 8125-A		Pad-radiator support	634336	2
PW 8133		Pod-radiator brace	A 1217	1
PW 8146		Assy-shroud-fan		1
PW 8166	.331	Deflector-radiator top air		1
		33798-S2 5/16-24 Nut for rad, brace rod	5910	3
		54306-82 5/16-Lockwasher for rad, brace rod	51933	3
		26493-S7 1/4-20 x 1/2 Screw	51492	12
		13795-32 1,4-20 Nut	5790	12
		34505-52 1,4 Lockwasher	52706	12
NOTE - 6 regul	red for top air	deflector to hood, 6 required side deflector to front fender splash panel		•
PW 8222		Seal-rad.top air deflector to rad.	A 2979	l
Pw 8226		Hal-rad.side air deflector to rad.	A 2507	2
PW 5220	: · · · · · · · · · · · · · · · · · · ·	Thield-rad.shell to cross member	A 1124	1
IEM DEMU		7-6-3 Wheher-tan pulley shield . 24 x .62	\ 1125	<u>-</u>
		0 6-3 Withher-tain pulley shield . 4 x .62	51485	10
		20045-32 "76-1" x 275 Hex hd.nut-oil pan to cyl.block	1407	IO
			707	
	:	1310-3 5'16-18 x 1'2 Hex hd.screw-oil pan to frt.eng.cover	51 391	4
		34306-32 5/16 Lockwasher-oil pan to cyl block & frt cover	51 A 3 3	20

34306-32 5/16 Lockwasher-oil pan to cyl.block & frt.cover

51833


20

THE

Ford Motor Company

PARTS PRICE LIST

FORD PART NUMBER	LIST PRICE	PART NAME	PART NUMBER	REQUIRED
	0505	Engine Water Fittings and Hose		
GPW 8250	1.05	Elbow-water outlet	A 1192	1
		24408-S 3/8-16 x 1-1/8 Hex hd-outlet elbow cap screw	52911	3
		54807-52 3/8 Lockwasher-outlet elbow cap screw	5010	3
CPW 8255	.05	Gasket-water outlet elbow	639650	1
GPW 8260	.55	Home-radiator water outlet	A 5164	1
GPW 8286	.30	Hose-rad.upper	A 6127	1
60 8287	Δ .04	Hose clamp assy	52226	4
GPW 8307	8.00	Guard-brush assy	A 3615	1
GPW 8348	.12	Liner-brush guard to hood-center	A 3094	1
GPW 8349	.04	Liner-brush guard to hood-side	A 3095	1
7.00		20388-S2 3/8-16 x 1" Hex head bolt	51405	3
		33799-S7 3/8-16 Hex nut	5544	3
		34807-32 3/8 Lockwasher	5010	3
		34707-S2 3/8 Plain washer	5455	3
		For brush guard frame to bracket on chassis		
		62627-S3 9/64 x 1/2 Split tubular rivet	51182	
		For brush guard hood liner center to rad.guard top		7
		For brush guard hood liner side to rad.guard top		4

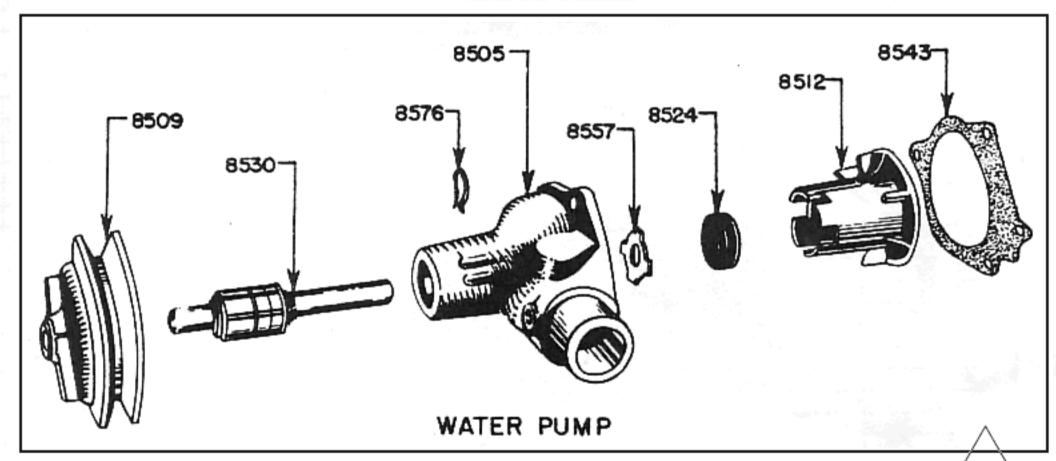

Banic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

Water Pump—Fan Belt JeepDraw 0503 GFW 18515 Water pump repair kit 2.15 A 1539 Consists of 1 CPW-8524, 1 CPW-8530, 1 CPW-8543, 1 CPW-8557, 1 GPW-8576 5.25 Water pump assy CPW 8501 639992 1 1.45 Rody-water pump CPW 8505 637052 2 .65 Pulley-fan & water pump-cast design GPW 8509-A 1 636299 .65 Impeller-water pump GPW 8512 639993 1 Water pump seal assy GPW 8524 639663 1 2.10 Bearing & shaft assy-water pump GPW 8530 636297 1 Casket-water pump to cyl.block GPW -8543 .02 637053 1 34806-S2 5/16 Lockwasher-pump to cyl.block 51833' 4 5/16-18 x 7/8 Hex hd.screw-pump to cyl.block 20366-S 3 6428 GPW 8548 13 Mould -water pump seal 639667 1 TARABLE - 17 A. 1 7 - 1-1 /2 HAY be sometime to the training ---

PO	PARTS PRICE LIST					
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER		
CPW 8557	.03		619994	1		
GPW 8565	.08		63966	1		
GPW 5572	.09		639664	1		
GPW 8573	.08	Retainer-water pump seal spring outer	639666	1		
		0502 Thermostat				
CPW 8575	.85		657646	1		
CPW 8576	.01	Wire-water pump bearing retaining	636298	1		
GPW 8578	.09	Retainer - thermostat	639691	1		
		osos Fan				
GPW 8600	1.45		A 447	1		
		34805-32 1/4 Lockwasher-fan to pulley	52706	1 4		
		20324-S2 1/4-20 x 5/8 Hex hd. screw-fan to pulley	515114	4		
GPW 8620	.89		A 1495	1		
0300		0304 Fuel Tank and Lines	1			
GPW 9002	8.00		1 4 1221			
0.TH 9002	0,00	20308-S2 1/4-20 x 1/2 Hex hd bolt	A 1221 52170	1		
		34129-S2 1/4-20 Square nut	52165	3		
		353201-S 1/4 Nut retainer	72107	3		
	 	34805-32 1/4 Lockwasher	52706	3		
		34745-50 1/4 Flat washer	638305	3		
		For fuel tank shield to rear floor	0,2,0,			
	.20	GPW 1111322 Cap-gas tank well drain	A 3055	1		
	.06	leenDraw		1		
GPW 9014	.20		A 3199	1		
GPW 9017	.30		A 3501	1		
GPW 9019	.30	Guard-fuel tank stone-left	A 3195	1		
GPW 9030	1,80	Cap assy-fuel tank	A 1254	1		
		358061-S 1/4 Pipe plug-drain	A 5120	1		
GPW 9035		Gesket-fuel tank cap	A 1275	1		
CPW 9051	.60	Support-fuel tank holddown rear inner	A 2970	1		
GPW 9057	.40	Strap-fuel tank holddown outer-assy	A 1477	1		
GPW 9062	.13	Bracket-fuel tank holddown rear-inner	A 2952	1		
GPW 9063	.12	Bracket-body side panel fuel tank holddown	A 2954	2		
GPW 9065	.12		A 2953	1		
		24309-S2 1/4-28 x 1/2 Hex hd.bolt	52169	S		
		34805-32 1/4 Lockwasher	52706	5		
		For fuel tank hold down front inner brkt.to floor pan front				
GPW 9066	.12	-	A 1481	1		
		24505-S7 5/16-24 x 1-3/4 Hex hd.screw	50992	5		
		33798-S2 5/16-24 Hex nut	5910	2		
		34806-52 5/16 Lockwasher For fuel tank hold down clamp	51833	5		
GPW 9069	.05	Anti-squeak-fuel tank-6" long	A 1738	5		
GPW 9009	.12		A 1741	2		
GPW 9074	.18	Anti-squeak-fuel tank hold down strap-24.88" long	A 1476	2		
GPW 9075	.06		A 1740	2		
GPW 9078	.03		A 1480	1		
GPW 9079	.05	Anti-equeak-fuel tank-7-1/4" long	A 1739	2		
GPW 9083	.50	Seal-gas tank stone guard-front	A 3207	1		
GPW 9083	.50		A 3209	1		
GPW 9084	.40		A 3206	1		
GPW 9085	•50	Seal-gas tank stone guard-L	а 3208	1		
GPW 9095	.75	Strap-gasoline tank holddown-assy	A 1472	2		
GPW 91140	3,60	Casoline strainer-strainer unit assy	A 12 6 1	1		
GPW 9149	3,60	Cover-gasoline strainer	A 1258	1		
		353055-S 1/4" Pipe plug-3/4" long-gasoline strainer cover	5138	5		
GPW 9154	.20	1/4 x 1/8 Plug-reducing pipe bushing-gasoline strainer cover plug	A 1265	2		

PARTS PRICE LIST

JeepDraw Alle, response com


FORD PART

LIST PRICE

PART NAME

PART NUMBER

REQUIRED

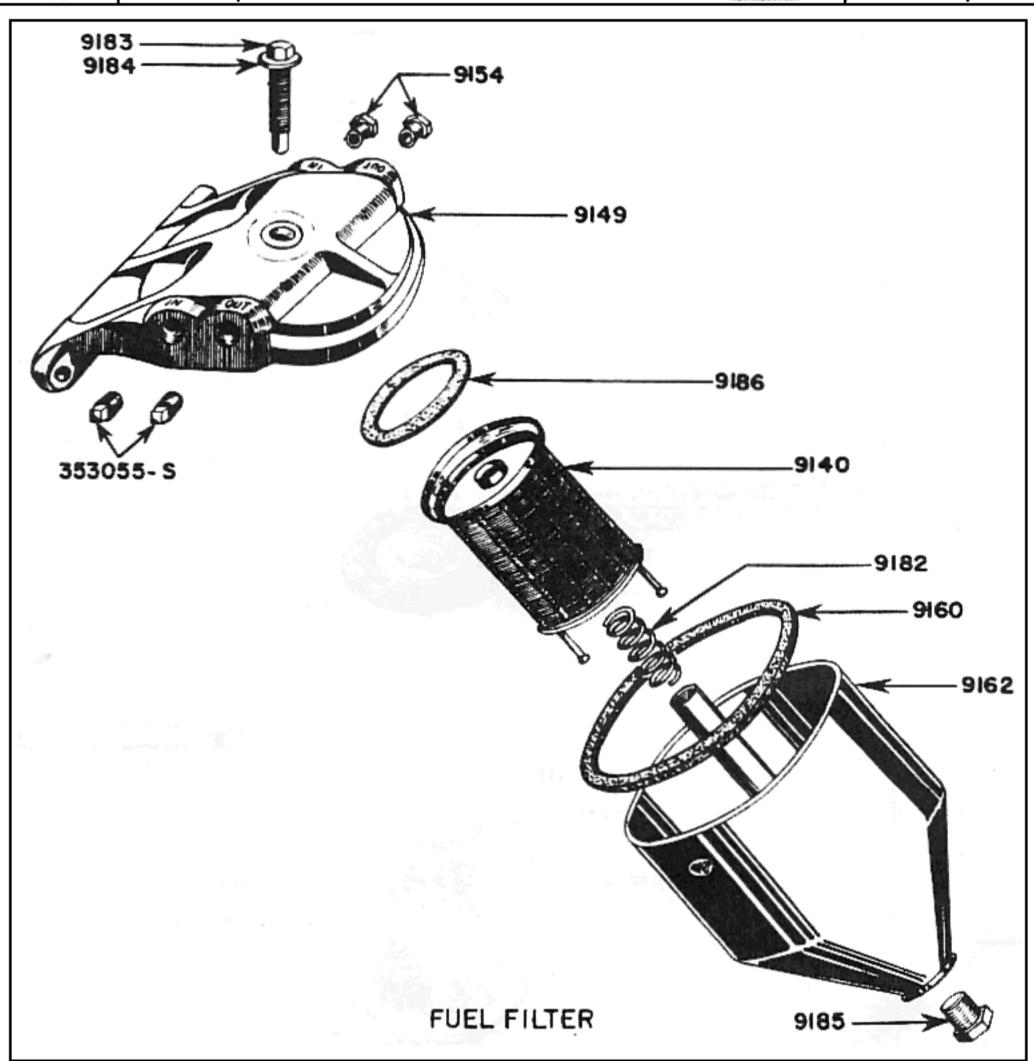


Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

		Fuel Filter	1 3317	
GIW 9155	10.00	Filter aney-fuel	A 1255	1
GPW 9160	.25	Gasket-gasoline strainer bowl	A 1259	1
PW 9162	1.55	Bowl & center stud-gasoline strainer	A 1265	1
GPW 9167	.10	Nut-gae atrainer thumb	113461	1
PW 9182	.05	Spring-etrainer unit-gasoline strainer	A 1262	1
GPW 9183	.30	Screw-gasoline strainer cover cap	A 1256	1

FORM NOTON GOMMANY, PARTS PRICE LIST



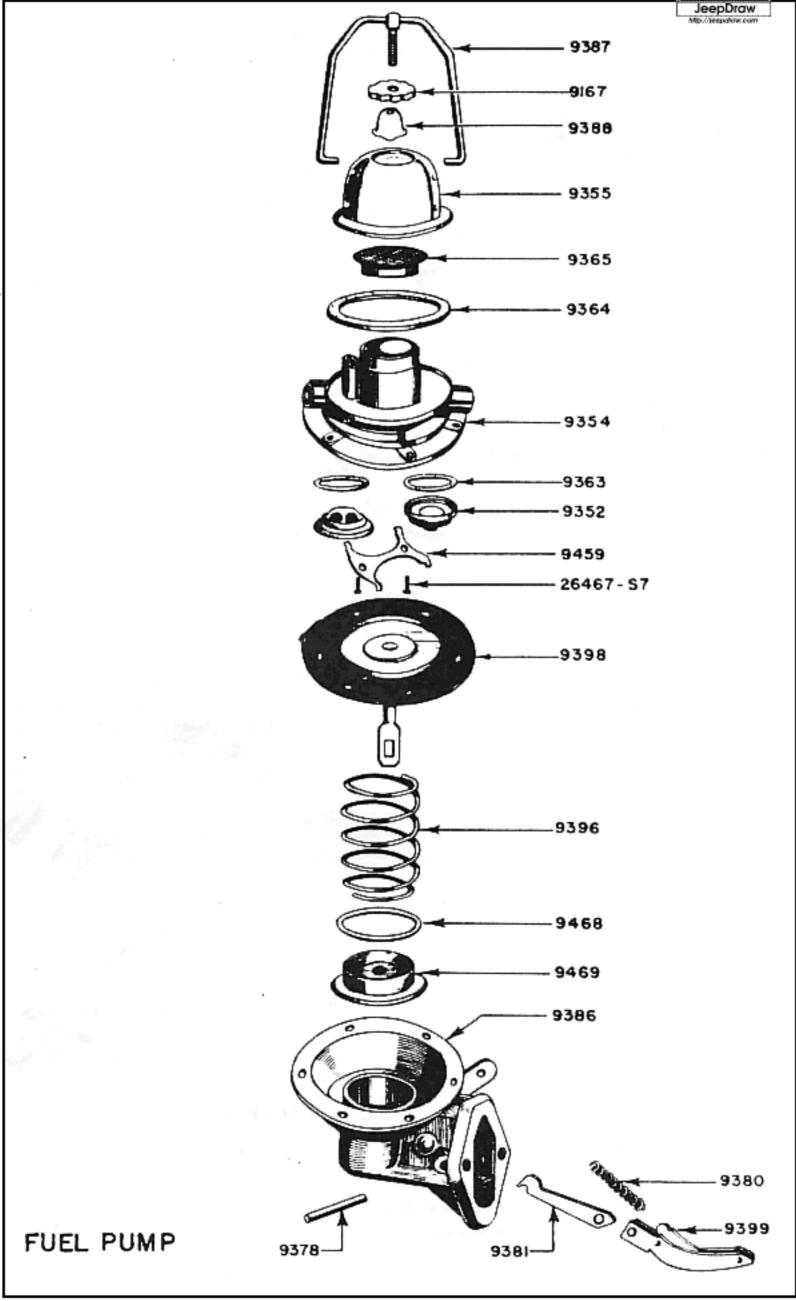


FORG PART HUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	REQUIRED
GPM 9184	.05	Gasket-gasoline strainer cover cap screw	A 15	!
GPW 9185	.10	Plug-gasoline strainer drain	4 1764	1
GPW 9186	,10	Gasket-strainer unit-gaseline strainer	A 1264	1
GPW 9211	.13	Cover-fuel gauge-tank unit	1 2 1 76"	1
GPM 9237	.85	Tube easy-fuel tank to fuel filter	à 1366	1
GPW 9267	.08	Connector-fuel line	7,000,00	1
GPW 9268	.17	Elbow-fuel tank line connector-1 filter-2 pumps	700,000	
		24389-S2 3/8-24 x 1 Screw-filter to dash	=010	2
		34707-S2 3/8 Plain washer-filter to dash	a, ae	2
		54807-52 5/8 Lockwacher-filter to dach	5010	
		33800-52 3/8-24 Hex nut-filter to dash	5901	5
GPW 9273	3.69		A 1269	1
GPW 9275	2,50		A 1202	+
7417		555095-S7 #8-32 x 5/8 Round hd.machine acrew & weather assy-	5556	5
		gauge to tank		
GPW 9276	.02	Gasket-fuel tank gauge	A 1293	1
GPW 9280	3,50		A 1268	-
				1
CPW 9282	.60		A 1367	1
GPW 9288			A 1325	1
GPW 9289	.40		A 1368	1
CPW 9295	.08		A 5450	5
		32924-S2 #10 x 1/2 B.H. Sheet metal screw-clip to cross sill	52809	3
		355130-S7 #10-24 x 1/2 Rd.hd.acrew-1-clip to dash-1-clip	5113	2
		to fender splash		
		34803-52 3/16 Lockwasher-1-clip to dash-1-clip to fender	52221	2
		splash		
		355836-38 #10-24 Hex nut-1-clip to dash-1-clip to fender splash	6352	2
GPW 9316	.30	Tube assy-oil gauge	A 1450	1
GPW 9319-A	.03	Grommet-3/16 rubber-split	662420	1
		26467-S7 #8-32 x 1/4 Round hd.machine screw	5253	1
		34802-S2 #8 Lockwasher	52705	1
		For fuel gauge wire to tank unit		<u> </u>
GPW 9325	. 06	Union25 inverted flare-oil gauge tube	A 1456	1
		G302 Fuel Pump		
	1.20		A 1540	
	X. E.	Consists of 2 GFW-9352, 1 GFW 9364, 2 GFW 9363, 1 GFW-9377,	R 1,7-0	
		1 GPW-9378, 1 GPW-9380, 1 GPW-9381, 1 GPW-9596,		
		1 GPW-9398, 1 GPW-9399, 1 GPW-9417, 1 GPW-9459,		
		1 GFW-9468, 1 GFW-9469, 2 26467-57-8		1
GPW 9350	6,00	Fuel pump Assy	à 1220	1
GPW 9352	.15		115651	2
GPW 9354	,80		115650	1
		31628-37 #10-32 x 1/2 Fill.hd.screw-top cover to body	113439	6
		34803-S7 #10 Lockwasher-top coverto body	52221	6
GPN 9355	.15	Bowl-fuel pump-metal	1 1494	1
GPW 9363	.01		11,5652	5
GPW 936h	.01	Gasket-fuel pump bowl	115666	1
GPW 9365	.10	Fuel pump filtering screen assy	115654	1
GFW 9369	. 30		A 1369	1
	.01		A 1047	1
GPW 9377			A 1046	1
GPW 9378	.20	Pin-fuel pump rocker arm Spring-fuel pump rocker arm	115643	1
GPV 9580		Link-fuel pump rocker arm	115880	1
GPW 9381		That are bedy a parentag layer appy	A 1045	1
GPW 9386	2.30	ruet pump body & priming level dany	115657	1
CPW 9587	.10	La cui Proprie	113460	1
GPW 9388	.10	Mp./jeepdox.com.	115868	1
	.05	Spring-fuel pump diaphragm		
GPW 9396			115610	1 1
GPW 9596 GPW 9598	.50		115644	1

FORM Notor Company PARTS PRICE LIST

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
CPW 9417	.01	Gasket-fuel pump	638737	1
		20366-S 5/16-18 x 7/9 Hex hd.screw-fuel pump to cyl.block	6428	5
		34906-S2 5/16 Lockwasher-fuel pump to cyl.block	51833	5
		0108 Manifolds		
GPW 9410	9,40	Manifold assy-intake & exhaust	A 1165	1
GPW 9424	3.15	Manifold-intake-Assy	A 1166	1
		88057-57 3/8-16 x 1-11/16 Stud-intake manifold to carb.	632159	2
CM 2458	6.00	Manifold-exhaust-assy	A 912	
GPW 9435	.10	Gasket-intake to exhaust manifold	634811	1
GPW 9443	.04	Washer-manifold clamp	344732	5
		33800-S2 3/8-24 Hex nut-int.& exh.manifold stud	5901	.7
GPW 9447	.12		A 923	1
		33800-S2 3/8-24 Hex nut-carb, to inlet manifold	5901	5
CPW 9448	.15	Gasket-intake & exhaust manifold	638640	1
GPW 9450	.04		634814	1
		33800-S2 3/8-24 Her nut-flange to exh.manifold	5901	5
		24429-S7 3/8-24 Hex hd.screw-flange to exh.manifold	50878	1
CPW 9456	.25	Shaft-heat control valve	637206	1
GPW 9458	.25	Lever-heat control valve counter weight	637210	1
CPW 9459	.05	Clamp-fuel pump valve	115653	1
271 2162		26467-57 #8-32 x 3/8 Rd.hd.screw -valve clamp	5253	2
CPW 9460	.20		636439	1
CPW 9462	.10		636438	2
CPW 9463	.02		639743	1
		24386-S2 5/16-18 x 1 Hex hd.screw-exh.manifold to int.manifold 34906-S 5/16 Lockwasher-exh.manifold to int.manifold	51486	4
CPW 9465	.01	11011111010	637211	4
021 9-07		355160-S2 #10-24 x 3/4 Rd.hd.screw-clamp lever to shaft	5272	1
		355836-57 #10-24 Hex nut-clamp lever to sheft	6352	1
CPW 9467	.20		637208	1
014 3401		88032-S 3/8-16 x 1-3/8 Stud-exh.manifold to exh.pipe	332515	1
GPW 9468	.05	Washer-fuel pump diaphragm spring seat	115869	1
GPW 9469	,10	Seal-fuel pump pull rod-rubber	115870	1
GPW 9484	.01	Washer-heat control valve Bi-metal spring	637209	1
		O301 Carburetor		1
	4.00	GPW-18357 Carburetor repair kit	1 . 1611	
	4,00	Consists of 2 GPW-9516, 1 GPW-9519, 1 GPW-9531, 1 GPW-9533,	A 1541	
(122)		1 GPW-9575, 1 GPW-9576, 1 GPW-9579, 1 GPW-9583,		-
		1 GPW-9588, 1 GPW-9594, 1 GPW-9599, 1 GPW 9631,	-	-
	<u> </u>	1 GPW-9906, 1 GPW-9914, 1 GPW-9926, 1 GPW-9940		
JeepDraw Mpolymphowolog	.70	GPW-18352 Set-cerburetor gasket-Consists of 1 GPW-9447,	A 5549	-
		2 GPW-9516, 1 GPW-9519,3 GPW9569, 1 GPW-9574.		-
		3 GPW-9608		
GPW 9510	12.50		A 1223	1
GPW 9515	1.05		116208	1
GPW 9º16		Gasket-carburetor body flange	116202	2
GIW 9518		Body flange assy-carburetor	116584	1
G1W 9721	7. 0	555200-5 #12-29-9/16 Fillister hd. screw & lockwasher-	116207	2
		carburetor upper body to throttle body		
		31662-S 1/4-28 x 7/8 Fill.hd.screw-carburetor body	116215	1
		flange attaching screw		
		54805-52 174" Lockwasher-body flarge	52706	1
		34807-52 3/8 Lockwasher-flange stud	5010	1
	.11	Saaket-curburetor bowl cover	116203	1
GPW (PE)		*1061-3A #8-32 x 1/2 Fill.hd.acrew-carburetor bowl cover	116215	1
GPW (7º17	i i			
GPW (PE) /		nttaching acrew		
GPW 0°17		nttaching screw 54802-52 #8 Lockwasher-bowl cover	6330	1

Ford Motor Bompany PARTS PRICE LIST

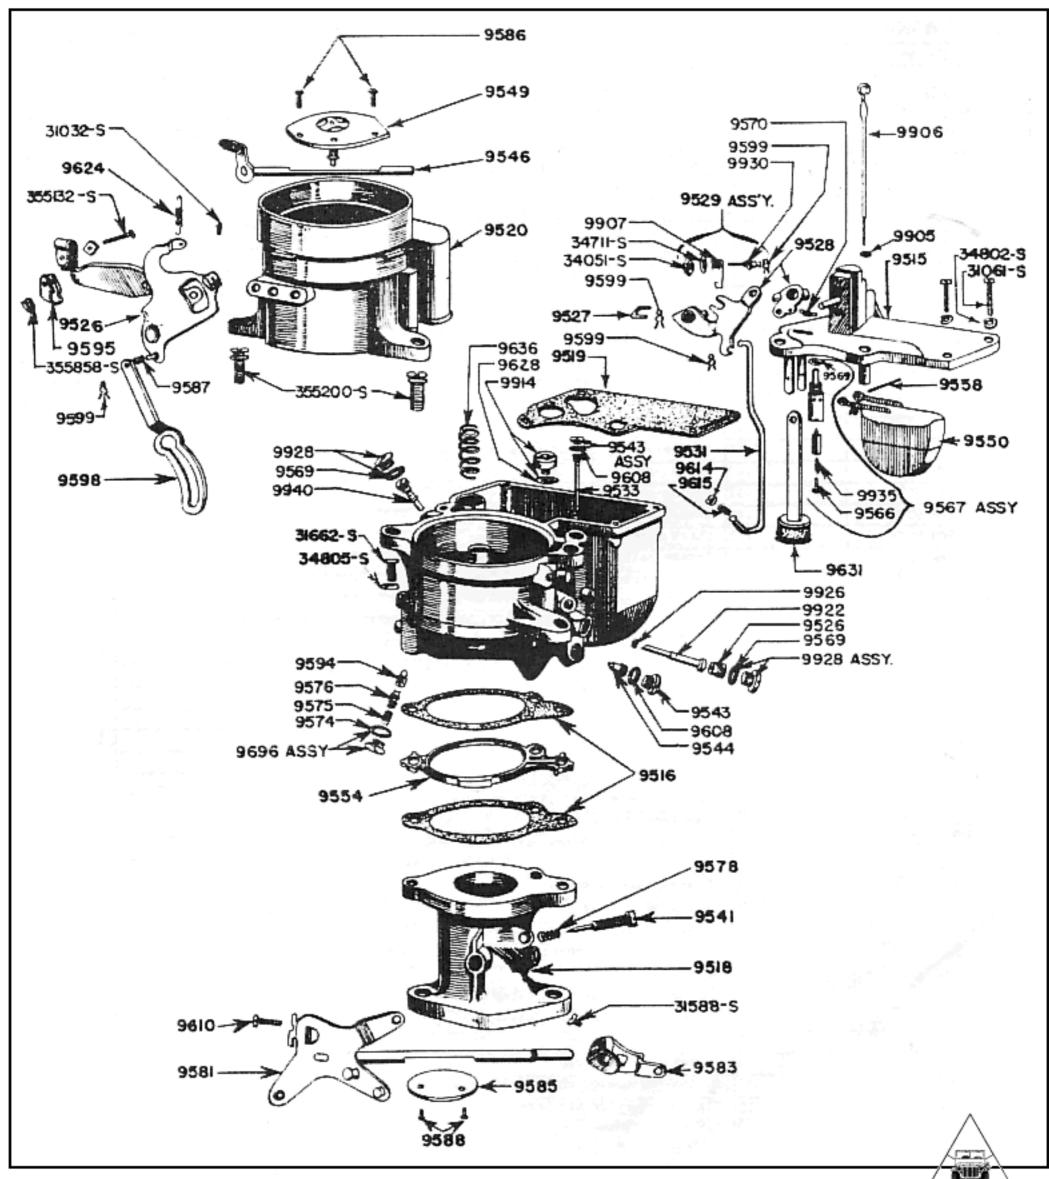

CARBURETOR


JeepDraw

Store Motor Company

FORD PART	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
		31037-S7 #8-32 z 5/16 Fill.hd.acrew-carb.air hornattach.acrew	116212	. 1
	,	34804-32 #12 Lockwasher-air horn	51969	. 1
GPV 9522	.02	Plug-rivet	116159	1
GPW 9523	.02		116160	6
GPW 9526	<i>,</i> €5		116586	1
		310%-S7 #8-32 x 1/h Rd.hd.acrew-choke control wire clamp	116211	1
GPW 9527	.05	Connecting link-carburstor pump	116199	1
GPW 9528	.26		116181	1
GPW 9529	. 48		116557	1
GPV 9531	. 26		116198	1
GPW 9533	.52		116559	1
GPW 9541	.32		116176	1
GPW 9543	.11		116165	5
GPW 9544	.22		116179	1
GPW 9546	.42		116545	1
GPV 9549	- 55		116157	1
		355067-57 M-32 Fill.hd.screw & spring washer-choke walve	116384	1
GPW 9550	,85		116172	1
GPV 9554	. 38		116210	1
GPW 9558	.05		116173	1
GPW 9562	.20		116161	1
GPW 9566	,06	L	116177	1
GPW 9567	.85		116174	1
GPW 9569	.05		116168	3
GPW 9570	.11		116187	. 1
GPW 9574	.05	Gasket-carburetor strainer plug JeepDraw	116170	1
GPW 9575	.11		116175	1
GPW 9576	.25		116205	1
GPV 9578	.05		116183	1
GPW 9579	.02		116162	1
GPW 9581			116585	1
GPV 9585	.22		116197	1
		31588-S7 #10-32 x 5/16 Fillister hd. screw-throttle shaft	A 1636	1
		arm clamp		ļ
GPW 9585	.11		116154	1
GPW 9586	.05		116216	5
GPW 9587	.05		116189	1
GP# 9588	.05		116217	5
GPW 9594	.25		116204	1
GPW 9595		Clamp-carburetor tube	116587	1
		355132-S Screw-carburetor tube clamp	116588	1
		355858-S Mut-carburetor tube clamp	116219	1
GPW 9598	.11		116542	1
GPW 9599	.01	Spring-carburetor pin	116178	5
GPW 9608	.05		116169	3
GPW 9610	.05	Screw-carburetor throttle lever adjusting-3/16 x 26	116214	1
GPW 9614	.05	Retainer-spring	116194	1
GPW 9615	.05		116185	1
GPW 9617	2,65	Element and wing bolt assy-air cleaner	A 5630	1
GPW 9621	.10		A 5632	1
GPW 9623	,10		A 5633	1
GP# 9624	.11	Spring-carburetor choke pull back	116184	1
CPV 9628	.15		v 5gr	1
GPW 9629	.03		A 5104	1
		24247-32 5/16-24 x 3/4 Hex hd. screv-air cleaner supt. brkt.	51.396	5
		34706-S2 5/16 x 7/8 Plain washer-air cleaner support brkt.	5437	9
		34806-92 5/16 Lockwasher-air cleaner support brkt.	51833	5
		33798-S2 5/16-24 Hex nut-air cleaner support brkt.	5910	5
		355253-S 1/4-20 Wing screw-air cleaner to brkt.	115905	4
		34745-82 1/4 Plain washer-air cleaner to brkt.	52702	4



NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBE
GPW 9631	.75		11619"	1
GPW 9632	. 30	Horn-carburetor air cleaner	A 463	1
GPW 9636	.11	Spring-carburetor pump	116188	1
GPW 9637	.75		A 1290	1
	.04	GPW 2250 Clamp-air cleaner tube	A 1515	1
		27149-S2 #10-32 x 1" Rd.Hd.screw-carb.to air clar.tube clamp	6383	1
		34141-52 #10-32 Square nut-carb.to air clar.tube clamp	60.73	1
		27161-S2 #10-32 x 1-1/4 Rd.hd.screw-carb.to air clar.tube clamp		1
GPW 9647	.40	Shield-air cleaner-assy	A 642	1
		20309-57 1/2-28 x 1/2 Hex hd. screv-shield to frame	51732	3
		34705-82 1/4 Flair, washer-shield to frame	5121	5
		54805-62 1/4 Lockwasher-shield to frame	52706	3
		33796-52 1/4-28 Hex nut-shield to frame	5914	1
		20310-S2 5/16-18 x 1/2 Hex hd.bolt-shield to frame		2
	-	55797-S2 5/16-18 Hex nut-shield to frame		2
GPW 9650	.11	Spring-carburetor plunger	116186	1
GPW 9652	.50	Hose-flexible-cleaner tube to cleaner	A 1311	1
GPW 9653	. 04	Clamp-hose	635097	5
GPW 9656	.50	Bracket-air cleaner support assy-RH	1 1278	1
GPW 9657	.65	Bracket-air cleaner support assy-LH	A 1279	1
GPW 9658	.70	Cup-air cleaner-oil	A 5631	1
GPW 9686-A	.04	Bushing-carburetor tube clamp	A 1451	1
GPW 9696	.11		116163	1
GPW 9905	.02		116206	1
GPW 9906	. 32	Metering rod-carburetor	116540	1
		34051-S7 #6-32 Nut-metering rod pin	52615	1
		34711-S #6 Washer-metering rod pin	116207	1
GPW 9907	.11		16538	1
GPW 9914	. 32	<u> </u>	116541	1
GPW 9922	. 32		116166	1
	.05		116171	1
GPW 9926 GPW 9928	11		116164	2
	.11	NGC/88000Ktom	116209	1
GPW 9930	.05		116191	1
GPW 9935 GPW 9940			116180	+
CERM WWW.	1213	0/c-sarsars ser pamp		1 1
72	0303	Accelerator Throttle and Choke		1
	0303	Accelerator Throttle and Choke	A 1301	1
GPW 9700	0303	Control assy-carburetor choke	A 1301	
GPW 9700 GPW 9711	0303 .60	Control assy-carburetor choke Binge-accelerator treadle-female	A 1301 650482	1 1
GPW 9700	0303	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator	A 1301 650482 A 1225	1 1 1
GPW 9700 GPW 9711 GPW 9716	0303 .60 .06	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-87 5/16-24 Thin hex nut-acc.foot rest lock	A 1301 650482 A 1225 52954	1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727	.20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-37 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector	A 1301 650482 A 1225 52954 A 1174	1 1 1 1
GPW 9700 GPW 9711 GPW 9716	0303 .60 .06	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft	A 1301 650482 A 1225 52954 A 1174 639607	1 1 1 1 1 1 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727	.20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt.	A 1301 650482 A 1225 52954 A 1174 639607 337304	1 1 1 1 1 1 2
GPW 9700 GPW 9711 GPW 9716 GPW 9727	.20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-37 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-32 1/4 Lockwasher-acc.cross shaft brkt.	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706	1 1 1 1 1 2 2 2
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728	.20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-37 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt.	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914	1 1 1 1 1 1 2 2
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728	.20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298	1 1 1 1 2 2 2 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A	.20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 35909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084	1 1 1 1 1 2 2 2
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9735-A	.20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083	1 1 1 1 2 2 2 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B	.20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174	1 1 1 1 1 2 2 2 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9735-A	.20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 35909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766	1 1 1 1 1 1 2 2 2 1 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737	.20 .20 .20 .20	Control assy-carburetor choke Hinge-accelerator treadle-female Foot rest assy-accelerator 35909-37 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-5 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-32 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Fedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-3 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-5 1/16 x 5/8 Cotter pin-acc.cross shaft	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766 5433	1 1 1 1 1 2 2 2 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9735-A	.20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. 33796-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-S 1/16 x 5/8 Cotter pin-acc.cross shaft Shaft-accelerator cross and lever-assy	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766	1 1 1 1 1 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737-A	.20 .20 .20 .20	Singe-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. 33796-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 72068-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft Faccelerator cross and lever-assy 33925-S7 3/8-24 Check nut-carb.choke & throttle control	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766 5473 A 1243	1 1 1 1 1 2 2 2 1 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 1 2 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737-A	.20 .20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. 33796-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-S 1/16 x 5/8 Cotter pin-acc.cross shaft Shaft-accelerator cross and lever-assy	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52768 5433 A 1243	1 1 1 1 1 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737	.20 .20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-32 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-S 1/16 x 5/8 Cotter pin-acc.cross shaft Shaft-accelerator cross and lever-assy 33925-S7 3/8-24 Check nut-carb.choke & throttle control 34907-52 3/8 Int.tooth lockwasher-carb.choke & throttle cont.	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766 5443 A 1243	1 1 1 1 1 2 2 2 1 1 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 1 2 1 1 1 2 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737 GPW 9737	.20 .20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 35909-37 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88350-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-5 1/16 x 5/8 cotter pin-acc.cross shaft Shaft-accelerator cross and lever-assy 33925-S2 3/8-24 Check nut-carb.choke & throttle control 34907-52 3/8 Int.tooth lockwasher-carb.choke & throttle Clip accelerator retracting spring	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52768 5433 A 1243 A 1243 639610	1 1 1 1 1 2 2 2 1 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 1 2 1 1 1 1 2 1
GPW 9700 GPW 9711 GPW 9716 GPW 9727 GPW 9728 GPW 9731-B GPW 9732-A GPW 9737 GPW 9737	.20 .20 .20 .20 .20	Control assy-carburetor choke Binge-accelerator treadle-female Foot rest assy-accelerator 33909-S7 5/16-24 Thin hex nut-acc.foot rest lock Link-accelerator connector Bracket-accelerator cross shaft 88390-S 1/4-20 x 7/8 Stud-acc.cross shaft brkt. 34805-S2 1/4-28 Hex nut-acc.cross shaft brkt. 33796-S2 1/4-28 Hex nut-acc.cross shaft brkt. Connection-accelerator hinge Pedal assy-accelerator-less hinge Accelerator treadle assy-complete Spring-accelerator cross shaft 356305-S 21/64 x 9/16 x 1/32 Plain washer-acc.cross shaft 72008-S 1/16 x 5/8 Cotter pin-acc.cross shaft Shaft-accelerator cross and lever-assy 33925-S2 3/8-24 Check nut-carb.choke & throttle control 34907-82 3/8 Int.tooth lockwasher-carb.choke & throttle cont. Rod-throttle	A 1301 650482 A 1225 52954 A 1174 639607 337304 52706 5914 651298 A 1084 A 1083 632174 52766 5443 A 1243	1 1 1 1 1 2 2 2 1 1 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 1 2 1 1 1 2 2 1

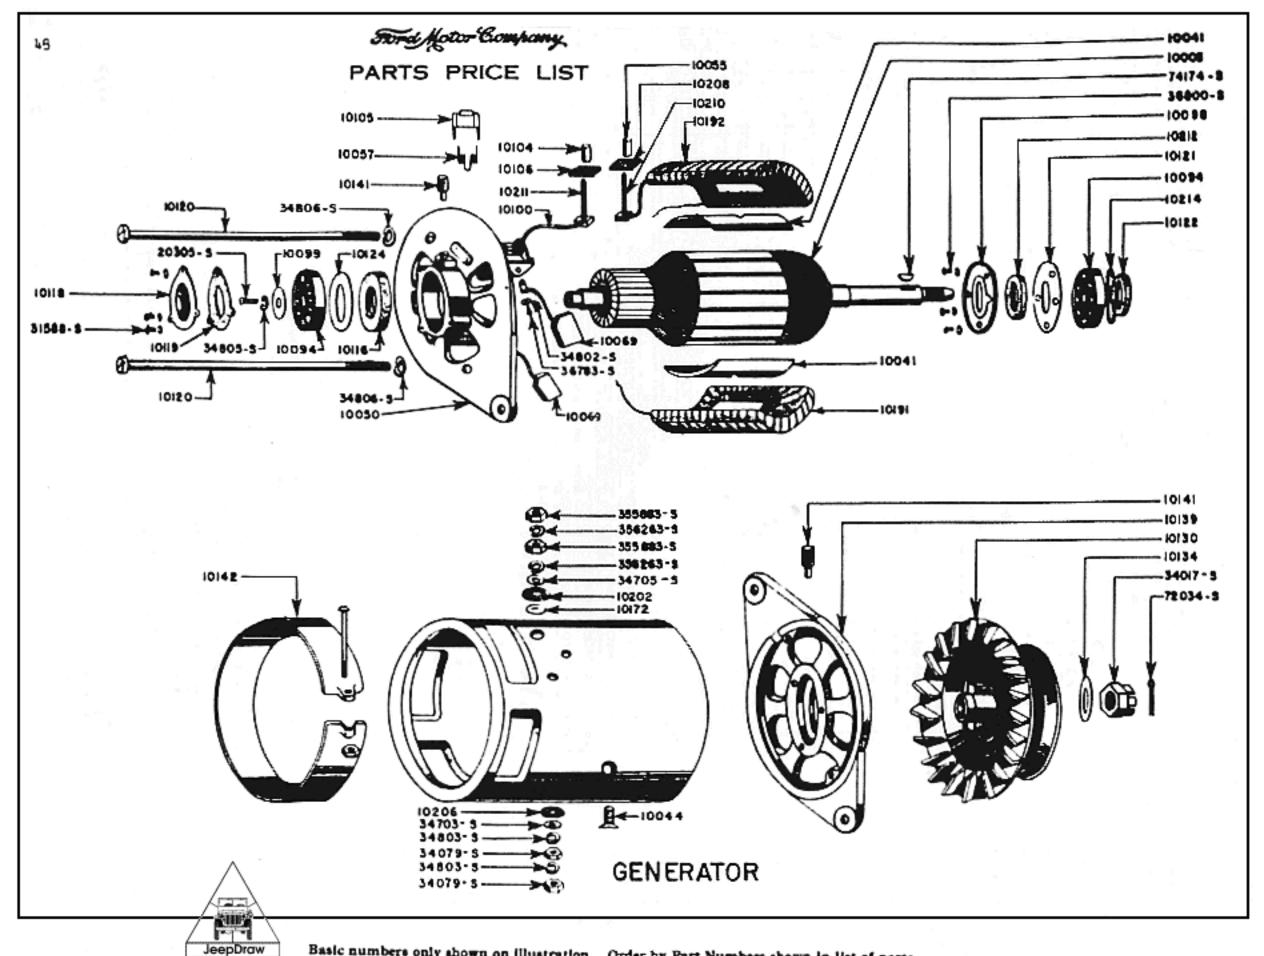


PARTS PRICE

-		PARTS PRICE LIST		1.1
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	PEOUIR
		72003-5 1/16 x 1 to dotterpin-1-throttle rot mill.brkt		1
		l-throttle rod to cart.		
GP# 9747	.60	Throttle not heav	A 12"/	2
		5-745-82 1/4 Plain washer-act, trope shaft lever	2,777.5	:
		72003-S 1/16 x 1/2 Cotter pin-noc. troop shaft lever	506"	:
GPM 97%1	.06	Clip-acc. retracting apring mtd. ander terb. to manifold stad not	A 11"5	1
GPW 9759	.15		65*01.1	1
GIW 9775	.6%	The state of the s	5106	1
GPW 9776-A	.01	The state of the s	650402	1
GPW 9795	.05	Spring-accolorator treadle hinge	640483	1
		7h019-S Pin-Acc. treadle hinge	650484	1
		72003-S 1/16 x 1/2 Cotter pin-acc, treadle hinge	5067	1
		355162-32 10-24 x 1/2 Flat hd.machine screw-treadle amoy	51557	3
		to too board		
		35803-87 #10 Lockwacher-treville near to toe board	52221	5
		355836-88 #10-24 Hex nut-treadle assy to toe board	6352	2
GPW 9799	.08	Spring accelerator	633011	1
0600		0601 Cenerator and Regulator		
0000		Ocherator and Regulator		
	.50	Str. 1933. Truest and Britainess	A 1651	1
GW 10000-A	40.00		A 5992	1
		20305-S7 Bearing retainer screw	A 1623	1
		31°88-S7 #10-32 x 5/16 Fill.hd.acrew-Generator	A 1636	- 3
		34017-S2 1/2-20 Castellated nut-Generator	A 1640	1
		54051-57 #6-32 Hex nut-Generator	A 1610	1
		34079-87 #10-32 Hex nut-Generator	A 1617	2
		34141-32 #10-32 Square nut-Generator	A 1589	1
		31.703-S7 #10 Plain washer-Generator	A 1615	1
		34705-S2 1/4 Plain washer-Generator	A 1616	1
		34801-37 % Lockwasher-Generator	A 1613	1
		3h802-S2 #8 Lockwasher -Generator	51532	2
		34805-S2 1/4 Lockwasher-Generator	52706	1
		36009-S #6-32 x 9/16 Flat Hd.screw -Generator	A 1618	1
		36783-S #8-32 x 1/4 Rd.hd.screw-Generator	A 1632	5
		36800-8 10-32 x 3/8 Rd.hd.acrew-Generator	A 1647	3
		36932-S7 \$10-32 x 1-1/4 Rd.hd.screw-Generator	A 1650	1
		57789-S A0-32 x 5/16 Rd.hd.screw-Generator	A 1680	1
		72034-S 3/32 x 1 Cotter pin-Generator	A 1642	1
		74174-S Woodruff key -Generator	A 1641	1
GPW 10005	14.00	Armature assy	A 1637	1
GPW 100i-1	-95		A 1600	2
		351175-57 9/64 I.D. x 11/32 O.D. x 3/64 Thick-spec.flat washer		2
		555486-S7 Pole piece screw	A 1596	5
GPW 10050	4,40	Comm. and plate assembly	A 1627	1
CPW 10055	.03	Insulating bushing	A 1599	1
GPW 10057	.06	Brush spring	д 1628	5
GPW 10069	•25		A 1630	5
B 10094	Δ **2.10	Pall bearing-SAE #203 JeepDraw	51248	2
GPW 10098	.05		106313	1
		5-6203-87 Flat weaher-generator shaft to brg.		1
CIM TOTCO	.15	Lend Anny	A 1601	1
GPW 10104	.02	Inoulating bushing	A 1598	1
GPW 10105	.00	Brook Arm	A 1629	5
GPW 10106	.02	Terminal post bottom insulator	A 1594	1
GFW 10116	.00	Felt wanter	4 1624	1
GPW 10118	.10	Comp.ent cap cover	A 1626	1
OFW 10119	.10	End cap cover gasket	д 1625	1
GPW 10120	14	Prime ocrev	A 1590	2
		27063-87 #10-32 x 5/16 Round hend acrew #8 Bond atrap to		1
		generator		

THE .

JeepDraw

Ford Motor Company PARTS PRICE LIST

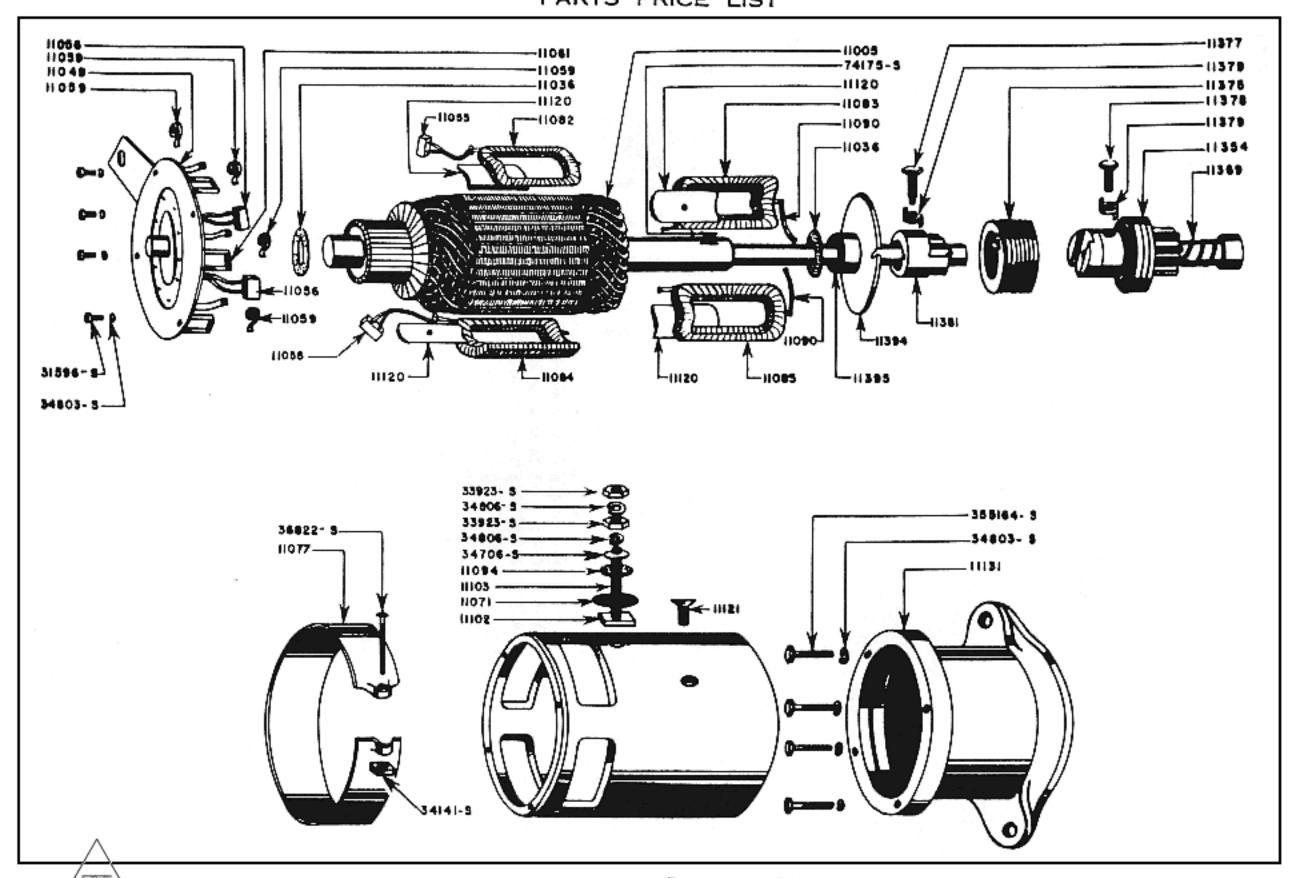

STARTING MOTOR AND DRIVE

PARTS PRICE LIST 51					
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	MUMBER MEQUIAED	
PW 10101	.00	Felt washer retainer	1 7-11-	:	
FF 141 2	-01	Folt washer	1 A 16-6	1	
FSW 10154	.01		A 167.	1	
SPW 10150	2.10		A 16' -	1	
GPW 101 54	, nz	1 ' Plair, washer	1.64	1	
GPW 111 AC	=, M	Drive old head nony	16	:	
37K 1 1 19	P. Dr.	Drive and head JeepDraw	116-1	Ţ	
3F¥ 131+1	.00	1 % Ottor-press to type	1-11-2-5064-	x.	
9FW 11147	. I *,	Hend burd	A 16-1	1	
OBM 10143	, hr)		A 1399	1	
GPW 10103-A	, tz	Brace Asny-generator	A 1401	1	
GPW 10155	. 23	Spring-generator brace	A 1469	1	
		355496-5 3/8-16 Hex hd. screw-support to cyl.block	633949	Ê	
		34807-32 3/0 Lockwanher-support to cyl.block	5010	2	
GPW 1/1162	DI.	Guide-generator brace adjusting	A 1400	1	
		24409-37 378-24 x 1-1 P Hex hd. screw-guide to brace	6606	1	
		34707-32 3/8 Plata washer-guide to brace	5455	1	
		54807-32 3/8 Lockwasher-guide to brace	501 O	1	
		33800-32 3/8-24 Hex nut-guide to brace	5901	1	
GPW 10166	4.0	Generator-support assy	A 1392	1	
GPW 10173	.00	Insulator-field connection	A 1592	1	
GPW 10175	5.00	Coil-field assy-comp.	A 1604	1	
GPW 10176	.13	Screw-generator brace pivot	A 1468	1	
		34807-S2 3/8 Lockwasher-gen.brace pivot screv	501.0	1	
		33800-S2 3/8-24 Hex nut-gen.brace pivot screw	5901	1	
GPW 10177	.03		A 1470	1	
		24426-S2 5'16-1A x 1-1/4 Hex hd.screw-brace to generator	6157	1	
		34806-52 5/16 Lockwasher-brace to generator	51833	1	
		35797-S2 5/16-18 Hex nut-brace to generator	6167	1	
GPW 10178-A	. 12	Insulator-generator support	A 1395	5	
		3°6': 16-S Washer-23/6" hole-generator support-insul.	A 1396	2	
		16371-57 Washer-21/64 hole-generator support-insul.	A 1401	2	
		355455-5 Bolt-gen.support insul.	A 1397	2	
		अभि06-S2 5/16 Lockwasher-gen.support insul.bolt	51833	5	
		33798-82 5/16-2: Hex nut-gen. support insul.bolt	5910	5	
		34706-32 5/16 Plain washer-Bond #7	A 1533	1	
GPW 10191	2.50	Coil-field-assy-R	A 1607	1	
GPW 10192	2,50	Coil-field-anny-L	A 1606	1	
GPW 10202-A	.01	Insulator-terminal post top	A 1591	1	
GPW 10202-B	.01	Insulator-generator armature terminal		1	
GPW 1202-0	.01	[maulator-generator armsture terminal		1	
GPW 10206-A	.01	Wesher-insulating	A 1593	1	
GPW 17206-B	. 15	Bushing-generator armeture terminal		1	
GPW 10205-A	.02	Insulator-terminal post bottom	A 1595	1	
GFW 10208-B	,02	Inadiator-generator field terminal		1	
GPW 10210	.05		A 1605	1	
GPW 10211 .A	. 05	Post-terminal -	A 1602	1	
		te AM3-S #14-24 Hex nut-arrature terminal	A 1611	2	
		1-6263-57 #14 Lockwasher-armature terminal	A 1612	2	
GPW 10211-B	, Q5	Terminal-generator ground		1	
78 10212-A	.72	Seni-generator oil inner		1	
		%-c264-S7 Washer-fist-generator aroutire terminal		1	
CPW 10212	.03	Seal-Passerator Oil	Λ 1644	1	
OLA 10214	20, ک	Retainer-reserator grease		1	
		2706'-87 #10-32 x 5/16 round head acrew- #5 Bond strap to		1	
		voltage regulator			
		54705-S7 #10 Washer-flut -#8 Pond atrup to voltage reg.		1	
GPW 10714	.02	Retainor-felt washer	109173	1	
GPW 10016	.01	Perminal	A 1503	1	
GPW 10218	.01	Terminal	A 1608	1	


FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
FW 10°0°	31.50	Voltage regulator ≥ circuit breaker	1 1409	1
		24427-17 5'16-24 x 1-1/4 Hex hd. screw-circuit breaker to	6600	
		fender splash		
		34806-32 5/16 Lockwasher-circuit breaker to fender splasher	51933	4
		34706-52 5/16 Plain washer-slotted holes on voltage reg.	5437	5
11AS10655	15.75	Battery-15 plate	A 1238	1
GPW 10850	2.00	Armeter	A 5231	1
CPW 10863	6.00	Heat indicator-sany	A 1270	1
		OSO2 Starting Motor		
	. 45	GPW-19555 Get-starter brush-Consists of 2 GPW-11055,	A 1552	
		2 GPW-11056		
GPW 11001	26.00		A 1245	1
		2442B-S 3/B-16 Hex hd.screw-starting motor to rear eng.	51406	5
		plate		
		31596-S #10-32 x 3/8 Fill.head acrew -Starter	A 1572	Ì4
		355944-S5 5/16-24 Hex nut-Starter	A 1565	5
		34141-52 #10-32 Square nut -Sterter	A 1589	1
		34706-S2 5/16 Plain washer -Starter	5437	1
		34803-S7 #10 Lockwasher-Starter	A 1635-A 1614	17
		34806-S2 5/16 Lockwasher -Starter	A 1619 - 5051	2
		34807-S2 3/8 Lockwasher-starting motor to rear eng.plate	5010	2
		36822-S #10-32 x 1-1/2 Rd.hd.screw -Starter	A 1588	1
		63543-S 1/8 x 1/4 Oval hd.tubular rivet -Starter	A 1567	4
		74175-S #6 Woodruff key -Starter	5017	1
		351355-S7 5/16-20 x 5/8 0.D. x 3/64 Thick special flat		2
		washer (Starter terminal)		
GPW 11005	6.35	Armature assy	A 1568	1
GPW 11036	.01	Washer-thrust-1/32" thick	109455	2
GPW 11049	1.30	Plate-comm.end-assy	A 1566	1
GPW 11053	•07	Spacer-bearing thrust	A 1569	1
GPW 11055	.25	Brush-starting motor	109431	2
GPW 11056	.25	·	109446	2
B 11059	Δ .05		109445	14
GPW 11061	.01	Holder-brush	109442	5
B 11062	Δ .01	Insulator-starter brush holder		4
GPW 11071	.01	Washer-insulating	109437	1
GPW 11077	.20		109452	1
GPW 11082	1.05		A 1562	1
	.80		A 1560	1
GPW 11083	1.05		A 1561	1
GPW 11084			A 1563	1
GPW 11085	.80		A 1557	1
CPW 11088	.01		A 1558	2
GPW 11090	.03		A 1553	1
GPW 11094	•01		A 1554	1
GPW 11102	.05		109433	1
GPW 11103	.10		109436	1
GPW 11107	.02			14
GPW 11120	.15		A 1556	4
		355485-S7 Screw-pole piece	A 1559	1
GPW 11151	3.50		A 1585	
		355164-8 \$0-32 x 31/32 Hex hd. screw-pinion housing to	A 1584	4
		etarter		
		74113-5 Plug-expansion 3/4 diacyl.block	51921	1
		24430-S 7/16-14 x 1-1/4 Hex hd.acrew-bell hag.to trans.	6184	4
		34808-S2 7/16 Lockwesher-bell housing to trans.	5059	14
GPW 11154	.10	Bushing-starter motor	639734	1
GPW 11140	.04	Support-starting motor	639646	1
GPW 11350	5.50		A 1573	1
OF HERMAN	2131		A 1581	1

		PARTS PRICE LIST		72
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
GPW 11357	. 30	Sleeve-compression	A 1575	1
CPW 11369	.01	Spring-take up	A 1580	1
GPW 11375	.45	Spring-drive	A 1577	1
GPW 11377	.08	Nach N	A 1578	1
GPW 11 <i>3</i> 78	.07		A 1579	1
GPW 11379	.01	JeepDraw	A 1574	2 .
GPW 11381	.45		A 1576	1
GPW 11394	1.00	Bearing-intermediate-assy	A 1582	1
GPW 11395	.20		A 1583	1
9N 11450-A	△ •95		371427	1
		20388-S7 7/8-16 x 1 Hex hd. screw-support to crankcase	A 1746	1
		34747-87 3/8 Plain washer-support to crankcase	A 1680	1
		34807-S2 3/8 Lockwasher-support to crankcase	5010	1
		24327-S7 5/16-24 x 5/8 Hex hd. screw-support to starting mtr.	52132	1
		34706-S2 5/16 Plain washer-support to starting motor	5437	1
		34806-S2 5/16 Lockwasher-support to starting motor	51833	1
		35800-82 3/8-24 Her nut-support to starting motor	5901	1
		20309-S7 1/4-28 x 1/2 Hex hd. screw-starter sw. to floor	51732	5
		54805-32 1/4 Lockwasher-starter switch to floor	52031	5
		33796-S2 1/4-28 Hex nut-starter switch to floor	5914*	2
		34806-S2 5/16 Lockwasher-starter switch cable to switch	51833	2
		34806-S2 5/16 Lockwasher-starter switch cable battery &	51833	5
		motor to switch		
		33909-S7 5/16-24 Hex nut-thin-starter switch cable to sw.	52954	2
		33909-S7 5/16-24 Hex nut-thin-starter sw.cable battery	52954	2
		& motor to switch		-
GPW 11514-A	.02	Seal-starter switch floor	A 2992	1
117511654	3,15		A 1332	1
III	7.27	26457-S7 #8-32 x 1/4 Rd.hd.screw-blackout switch terminal	52705	7
		BCTBV BCTBV T/ TALIBUTON DIGGROUND BUTTON COLUMNICAL	72,127	 '
		356229-B #8-Keyed lockwasher-blackout switch term.screw	A 1350	7
GPW 11474	.04		372438	1
GFW II+ +	1	26457-S Screw-throttle wire stop	51040	-
		20.7/10 00101 01100110	720 10	
		0604 Ignition Coil		
	1 26 1		A 1424	-
GPW 12000	3.25	Coil-ignition-& bracket assy		1 -
GPW 12006	.01	Terminal-H.T.wire	A 1652	5
GPW 12010	.35		A 1664	1
GPW 12011	.05	Plunger-contact spring	A 1656	1
GPW 12012	.01	Spring-contact	A 1657	1
CPW 12024	2.25	Coil-ignition	A 1527	1
GPW 12030	.15	Bracket-ignition coil	A 1526	1
GPW 12064	•05	Washer-coil bracket	631105	2
		34805-S2 1/4 Lockwasher-coil bracket	52706	2
		33796-S2 1/4-28 Hex nut-coil bracket	5914	2
GPW 12082	.20	Bearing-absorbent bronze	A 1681	5
GPw 12083	.04	Spring-dist.shaft friction	637615	1
		20304-S2 1/4-20 x 1/2 Hex hd. screw-ign.dist.to cyl.block	51514	1
		54745-S2 1/4 Plain washer-ign.dist.to cyl.block	52702	1
		34805-32 1/4 Lockwasher-ign.dist.to cyl.block	52706	1
GPW 12084	.20	Weight spring set	A 1677	1
GPW 12091-A	.08		301435	1
GEN TEONI-W	1			

JeepDraw

Ford Motor Company

PARTS PRICE LIST

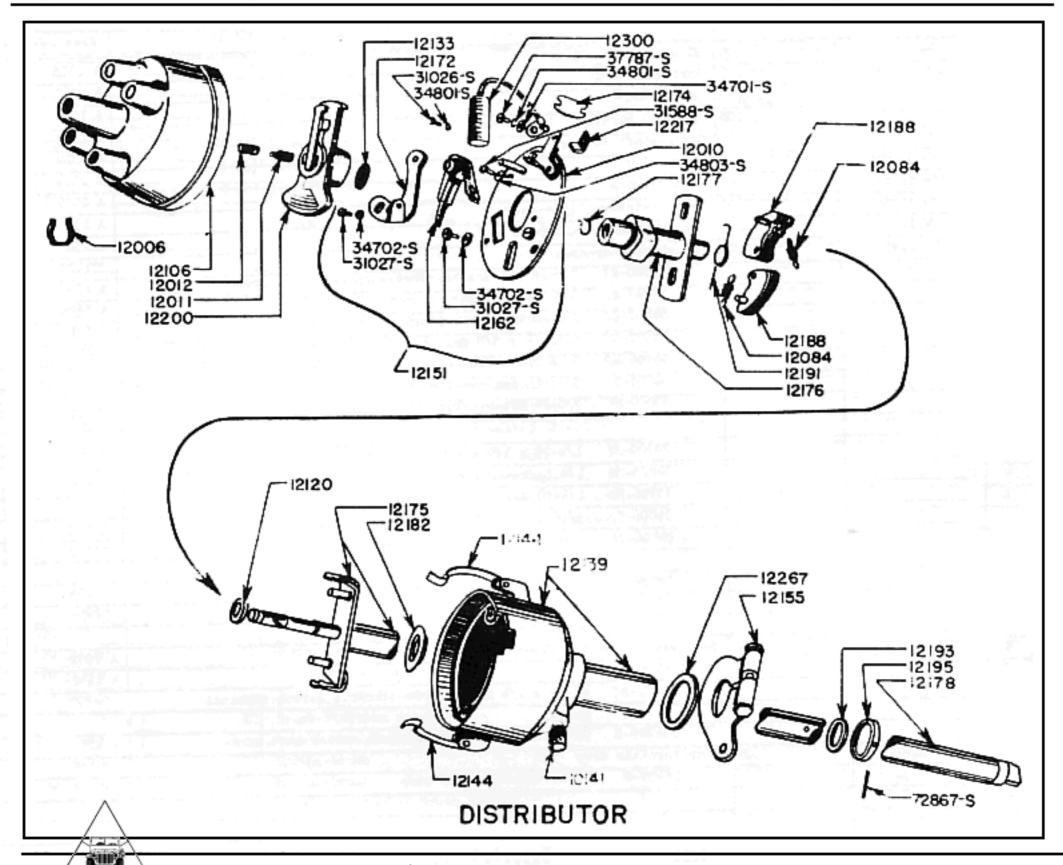


Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

hills of treasistics		0603	Distributor	1, 11/20	-
	1.0	O GPW 18354	Kit-distributor breaker point service	å 1687	1
GPW 12100	11.	O Distributor-ig	nition	V 15/17	1
	1 7 2	31027-58	#8-32 x 3/16 Fillister head screw-distributor	A 1668	1
1 11 12 12 1		31583-S7	#10-32 x 1/4 Fillister nead screw-distributor	1 1686	1
		31588-87	#10-32 x 5/16 Fillister head ecrew-distributor	A 1636	1 3
		34701-87	#6 Plain washer-distributor	A 1667	1
		34702-52	#8 Plain washer-distributor	A 1666	1
		34801-57	*6 Lockwasher-distributor	A 1669	5
		34803-57	#10 Lockwasher-distributor	52960	5
		72867-87	Rivet-distributor drive	A 1685	1
GPW 12106	1.0	5 Cap-distributo	г-авау	A 1655	1
9N 12113-A	Δ .	5 Seal-distribut	or-spark plug wire	327257	4
GPW 12120	.(2 Washer	Start of the State	1 1672	1
GPW 12155		Wick-cam sleev	e felt	A 1671	1
GPW 12139	2.	O Ense-distribut	or-assy	A 1679	1
GPW 12144		3 Spring-distrib	utor cap	A 1682	2
GPW 12145	.0	1 Pin-hinge		A 1683	5
GPW 12151	2.0	O Plate-breaker-	assy	A 1662	1
GPW 12155		5 Arm-advance co	ntrol-assy	A 1674	1

		PARTS PRICE LIST		55
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REQUIRED
CFW 12162	.55	Arm-breaker-asey	A 1570	1
GPW 12164	.04	Plate-floor dimmer switch	A 2993	1
CFW 12169.	.03	Spring-breaker arm	A 1587	1
CPW 12172	.30		A 1564	1
GFW 12174	.05		A 1660	1
GPW 12175 GPW 12176	1.75		A 1675	1
	1.50	^	A 1661	1
CPW 12177 CPW 12178	1:,30	THE PROPERTY OF THE PROPERTY O	.A 1653	1
GPW 12182	.01	Washer-shaft thrust-upper	A 1678	1
GPW 12188	.25	the trade of daily	A 1673	1
CPW 12191	.10	Jeepbidw	à 1676	5
GPW 12193	.02		A 1684	1
GFW 12195	.10		106740	1
317 22299		VOLIGI - GIB V, BIJG I V	A 1659	1
GPW 12200	.45	Rotor	1.1650	
	1		A 1658	1
CPW 12217	.03	Clip-breaker arm spring	A 1663	
			A 1007	1
GPW 12250-A	.85	Breaker-circuit-5 ampe	A 1753	
		26452-S2 #8-32 x 1/4 Rd.hd.screw-terminal to circuit brkr.	51040	2
		54802-S2 #8 Lockwasher-terminal to circuit breaker	52705	2
		26496-S #8-32 x 5/8 Round head screw-circuit breaker to	5780	5
		bracket	7100	-
		34802-32 #8 Lockwasher-circuit breaker to brkt.	52705	2
		34052-S2 #8-32 Hex nut-circuit breaker to bracket	6214	2
GPW 12250-B	.85	I. Walpo	A 1734	1
		26452-S #8-52 x 1/4 Rd.hd.acrew-term.to circuit breaker	51040	2
		34802-52 #B Lockwasher-terminal to circuit breaker	52705	2
		26496-S #8-32 x 5/8 Rd.hd.screv-circuit breaker to brkt.	5780	5
		34802-S2 #8 Lockwasher-circuit breaker to brkt.	52705	5
		34052-S2 #8-32 Hex nut-circuit breaker to brkt.	6214	2
	ļ			
GPW 12250-C	.85	Breaker-circuit-30 amps	A 1349	1
GPW 12267	.01	Washer-shaft thrust-upper	A 1654	1
OT: 10097		Cable week also fo		
GPW 12283	.55	Cable-spark plug #2	A 1416	1
CPW 12284	.55	Oable-spark plug #3		
ALM FEEDA	1	Andre-spars brug #2	A 1414	1
GPW 12286	.55	Cable-spark plug #1	A 1418	1
		The state of the s	A 1410	
GPW 12287	.55	Cable-spark plug #4	A 1412	1
	1		73 M 78-56	
GPW 12298-B	.60	Wire assy-ignition coil secondary	A 1420	1
GPW 12300	.70	Condenser assy	A 1631	1
		31026-S7 #6-32 x 3/16 Fillister hd.screw-condenser to	A 1670	1
		breaker plate		
		36787-57 #6-32 x 5/16 Rd.hd.screw-condenser terminal to	A 1633	1
A		breaker plate		
GPW 12405	#.70	Spark plug	A 538	14
B 12410	Δ .01	Gasket-oil pan drain plug	314338	1
			4-17-2-	
01A 12410	4 .01	Gasket-spark plug	637863	4
114 10100		Canage when I was to avoid the	1	
11A 12425	Δ .03	Cap-spark plug insulator	λ 1096	4

PARTS PRICE LIST

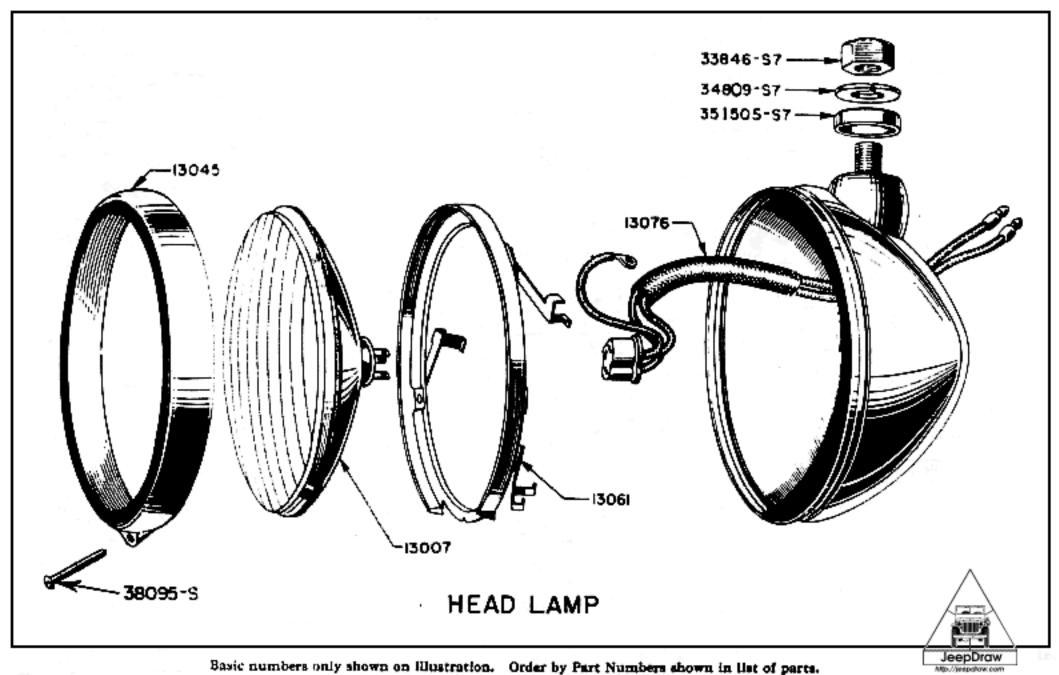


Basic numbers only shown on Illustration. Order by Part Numbers shown in list of parts.

GPW 13005	6.45	Hendlamp Assy-RE	A 1305	1
	.30	GFW 1102980 Cover-headlamp	A 3070	2
1		6-S2 1/2-20 Hex nut-headlamp to support	5916	1
		351505-37 5/P Spec.flat washer-head lamp to support		1
GPW 13006	6.45	Headlamp-assy-IH	A 1304	1
Γ		248.6-52 1/2-20 Hex nut-head lamp to support	5916	1
		351505-57 573 Spec.flat washer-headlamp to support	-	$+\frac{7}{1}$
GPW 13007	1.70	Bulb-headlemp-agey	A 1033	2
GPW 13012	1.70	Housing sub-assy	A 5586	1 2
		57206-S #10-32 x 1/4 Round head screw-wiring to hag.	1032	2
		ground headlamp	10,0	+-
		3-903-57 #10 Lockwasher-wiring to housing ground headlamp	52960	1 2
GPW 13015	.03	Pereliner-bolt	A 1031	2
GPW 13020	. 30	Boit-headlamp support hold down-assy	A 2873	1 2
GPW 13022	.16	3015	A 1361	2
	The state of the s	3=7419-52 5/16 Clevis pin	A 2875	12
		33926-S2 5/16-18 Wing nut	A 2466	2
	i	72003-S7 1/16 x 1/2 Cotter pin	5067	2
,		34-76-52 5/16 Flat washer	52768	2
		For headlamp support hold down bolt	,,,,,	+-
GPW 15032	200	firse-headlamp support	A 2878	2
	i	20326-37 5/16-18 x 5/8 Hex hd.bolt	51486	1
		34006-52 5/16 Lockwasher	51.840	- 4
	i	53''97-32 5/16-18 Hex nut	52350	14
	<u> </u>	For headlamp support hinge to brush guard		- -
-		55246-32 1/2-20 Hex nut		2
	-	5-1-50-S 5/8 Special flatwasher		2

PARTS PRICE LIST


FORD PART NUMBER NUMBER REQUIRE

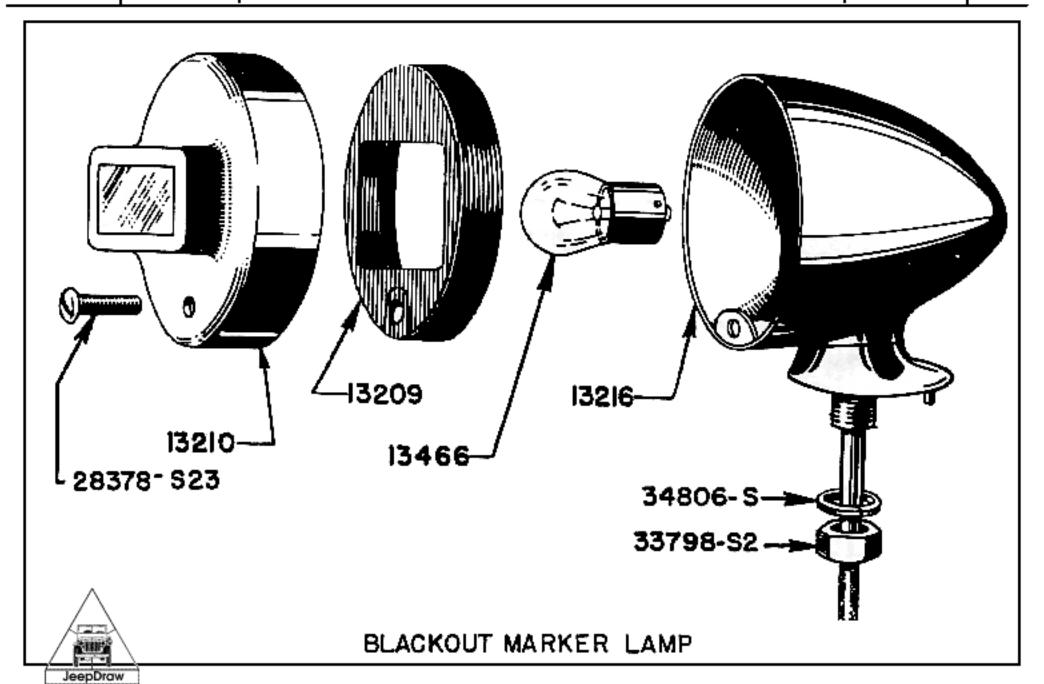

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.


			<u> </u>	
		3h809-s 1/2" Lockwasher		5
		For headlamp stud to headlamp hinge bracket		1
		38095-3 #6-32 x 3/4 Fillister head screw-headlamp	door 1057	2
		constricting		
GPW 13061	.13	Ring-sealing		2
GPW 13043	1.25	Door Assy	A 1056	2
CPW 13070	1,00	Support-headlamp-sesy-RH	A 2871	1
GPW 13071	1.00	Support-headlamp-aesy-LH	A 2870	1
GPW 15072	,15	Bracket-headlamp support-RH	A 2877	1
GFW 13075	.15	Bracket-headlamp support-LH	A 2876	1
GPW 13075	1.25	Wire assy-Ref	A 1363	1
GPW 13076	1.05	Wire assy-IR	A 1362	1
GPW 13139	.05	Tlip		2
CPW 13200	4.00	Lamp-blackout marker-RE	A 1437	1
		33798-32 5/16-24 Hex nut-blackout marker lamp bolt	to 5910	1
		support		
		34806-S2 5/16 Lockwasher-blackout marker lamp bolt	to supt. 51840	1
GPW 13201	h, 00	Lamp-blackout marker-LH	A 1436	+1
		33798-32 5/16-24 Hex nut-blackout marker lamp bolt	to 5910	ı
		support		
		34806-32 5/16 Lockwasher-blackout marker lump bolt	50 51840	1
		eupport		
GP 13209-B	.18	Gasket-door	A 1071	5
GP 13210-B	1,40	Door tagembly	A 1070	- 2

FORD PART NUMBER	LIST PRICE	PART - NAME	WILLYS PART NUMBER	NUMBER REQUIRED
		28378-525 #8-32 x 7/8 Oval head screw-door assy to brkt.	1072	2
		stiffner-blackout marker lamp		
GP 13216-B	1.50	Housing assy-RH	A 1440	1
GPW 13217	1.50		A 1439	1
В 13466	Δ #.07	Bulb-3 C.P. 6 volt-blackout marker lamp	51.804	5

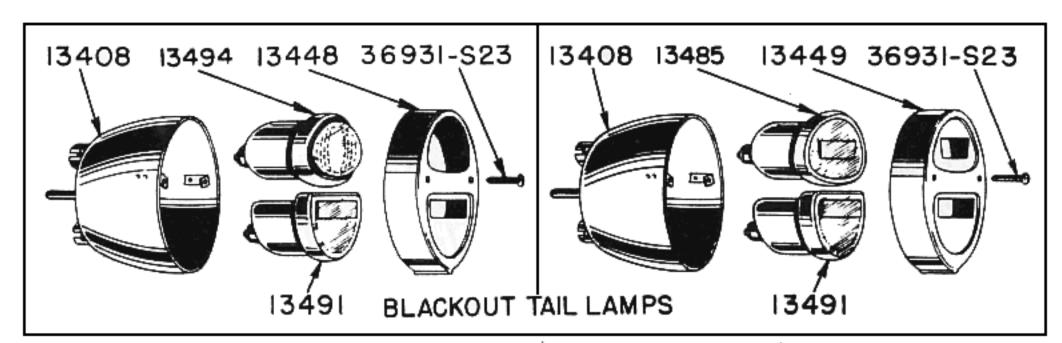

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

		osos Tail Lamps		
GPW 13380-A	1.00	Reflector assy	A 1306	14
		36825-S" 1/4-28 x 1/2 Rd.hd.screw-reflector to body-rear	52834	8
		33796-S2 1/4-28 Hex nut-reflector to body-rear	5914	8
		34805-32 1/4 Lockwasher-reflector to body-rear	52706	8
		26483-S7 1/4-20 x 1/2 Rd.hd.screw		8
		33795-52 1/4-20 Hex nut		8
		34805-52 1/4 Lockwasher		8
		For reflector to body side panel JeepDraw		
GP 13404-B	4,00	Blackout tail & stop lamp-assy	A 1065	1
GP 13405-B	4,00	Blackout tail & service lamp assy	A 1064	1
	i	357713-S7 1 4-20 Mounting stud-tail lamp aboy to mounting		4
		surface stud		
		33795-ST 1/4-20 Hex nut-teil lamp assy to mounting surface	5790	14
		atrai		
		NACS-37 1' Lockwasher-tail lamp assy to mig.surface	52706	4
		etist bist		
GPW 13408-B	1.20	Housing sub masy	A 1073	5
GPW 13410	.<0	Wire to blackout stop light & tail light-assy	A 719	1
GPW 13434-A	.64	Rubber grommet+C T.D.	345961	7
GPW 134-57-A	. 04	Rubber grommet62 [.D.	662276	2
25 13 18 B	.601	Door-blackout tail & service lamp	A 1076	1
GP 13448-B				
GP 13449-A	.60	Door-blackout ta!! % stop lamp	A 1079	1
		36031-303 #-50 x 1-174 Rd.hd.acrev-pointed-tail lamp-door	A 1077	14
		assy to door retaining lug		-
GPW 13461-A	.12	Grommet-rear lamp to body	A 627	1

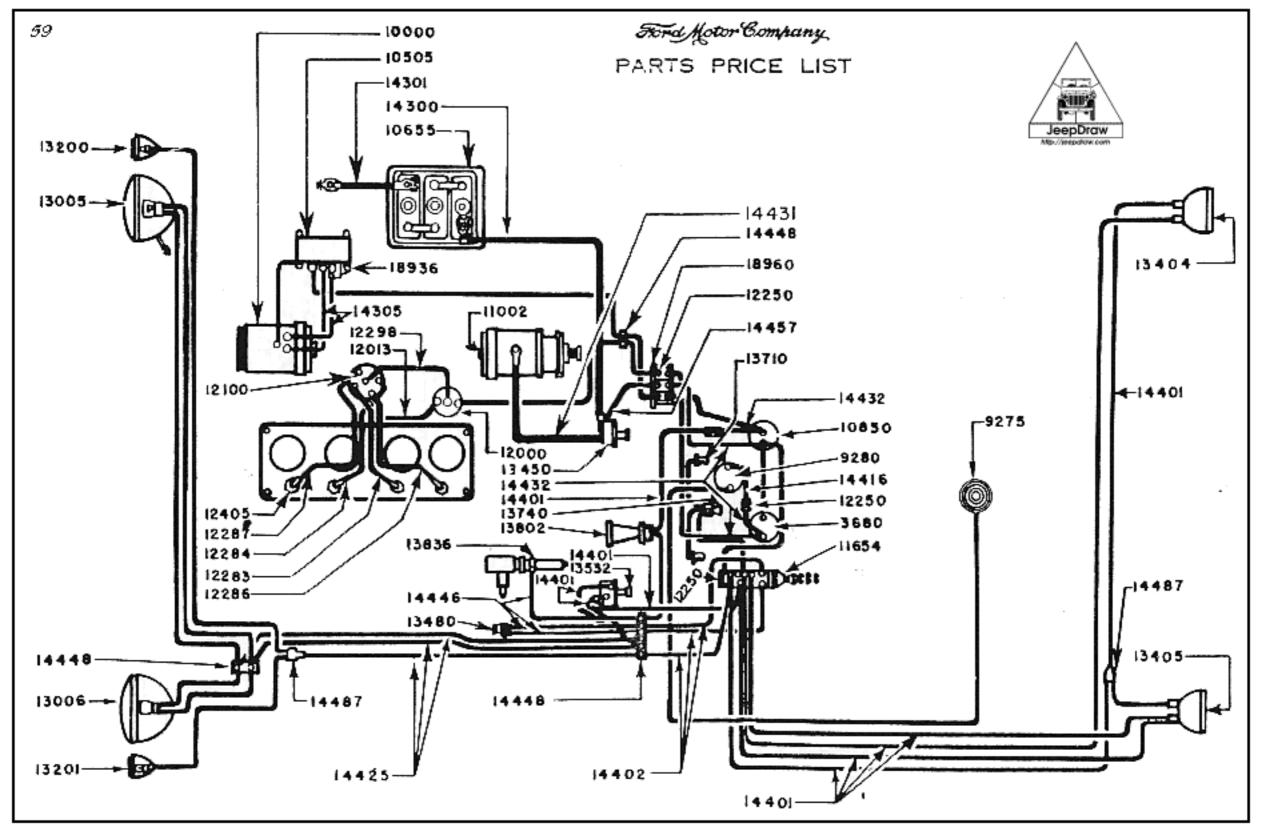

WIRING DIAGRAM

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	REQUIRE
		0606 Light Switches		
11A 13480	Δ .50	Switch assy-stoplight.	A 1271	1
GP 13485-A	1,35	Upper stop lamp unit-assy	A 1078	1
GP 13491-A	3.35	Lower tail lamp unit-assy	A 1075	2
OPW 13494-A	2.65	Upper service unit-assy	A 1074	1
CPW 13532	.50		638979	1
		36824-S2 1/4-20 x 1/2 Rd.hd.screw-dimmer switch to floor	51492	5
		34805-S2 1/4 Lockwasher-dimmer switch to floor	52076	2
CPW 13549-A	.02	Seal-dimmer switch floor	A 2991	1
	-	38204-S #10 x 1/2 Binding head sheet metal screw-dimmer	52809	2
		switch floor seal to floor	72309	-
GPW 13704	•17	Shield-instrument light	A 1334	5
GPW 13710	.50		A 1411	1
GPW 13713	.25		à 1748	2
GPW 13740	.70		A 1333	1
		26457-S7 #8-32 x 1/4 Round hd.screw-switch to inst.panel	52131	2
		356229-S #8 Keyed lockwasher-instrument panel light switch		
		3,0227-3 No neyed recewanter-inacroment panel light switch	A 1350	5
			-	
		0609 Horn		
GPW 13802	2.35	Horn assy-6 volt	A 1312	1
		34052-S2 #8-32 Hex nut-terminal to horn JeepBraw	52182 - 6214	
		54802-52 & Lockwasher-terminal to horn	52705	2
GPW 13831	.20	Rracket-horn	A 1389	1
		20325-S7 1/4-28 x 5/8 Hex hd.screw-horn to bracket	5920	2
		34805-S2 1/4 Lockwasher-horn to bracket	52706	2
	T	24347-52 5/16-24 x 3/4 Hex hd. acrew-horn brkt. to dash	51396	2
	<u> </u>	33909-87 5/16-24 Hex nut-horn brkt. to dash	52954	2
	 	34806-S2 5/16 Lockwasher-horn brkt.to dash	51833	2
		34706-S2 5/16 Flat washer-horn brkt.to dash	1533	2
GPW 13836	.50	Brush-horn wire contact	A 302	1
		26457-87 #0-32 x 1/4 Rd.hd.acrew-brush to col.		2
	!	34902-S #B Lockwasher-brush to col.		5
		0606 Wiring		
GPW 14171	.30		A 752	T 1
GPW 14300	.85		A 1452	1
GFW 14300	1	23017-S16 5/16-18 x 1-1/4 Sq.head bolt-battery terminal	323397	1
		34056-S16 5/16-18 Hex nut-battery terminal	323457	1
GPW 14301	.50		A 1320	1
GP# 14,01	+	23017-516 5/16-18 x 1-1/4 Sq.head bolt-battery terminal	323397	1
	+	34056-S16 5/16-18 Hex nut-bettery terminal	323457	1
CPW 14303	.15		A 1098	1
GF# 14305		34747-S7 3/8 Plain washer-battery strap to frame	A 1680	1
	<u> </u>	33911-S2 3/8-24 Hex nut-#10 & #11 Bond strap to eng.supt.	873	2
	-	34807-S2 3/8 Lockwasher-#10 & #11 Bond strap to eng.supt.	5010	2
		34747-S2 3/8 Flat washer-#10 & #11 Bond strap to eng. supt.	1680	_
		24369-S 3/8-24 x 7/8 Hex hd.screw-#10 & #11 Bond strap		5
	4		50151	5
	-	to front engine plate	873	
	-	33800-S7 3/8-24 Hex nut-#10 & #11 Bond strap to front	0/2	2
		engine plate	es 7el.	+
		34807-S2 3/8 Lockwasher-710 & 711 Bond strap to front	51304	5
		engine plate		
		34742-57 3/8 Flat washer-#10 & #11 Bond strap to front		2
		engine plate		
	.25	Wiring assy-gen. to voltage reg. & filter	A 5074	1
GPW 14305				
GPW 14305 GPW 14321	.04	Wire assy-ignition coil-primary Wiring assy-lighting switch	A 5083 A 5048	1



		PARTS PRICE LIST		61
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBE
		355130-ST #10-24 x 1/2 Rd.rd.screw-wiring harmons to body	5115	1-
		559836-S7 #10-P4 Hex nut-wiring harmens to body	63%	1"
		34803-S7 #10 Lockwanner-wiring harness to body	52960	17
GPW 14402	. 1+0		A 1571	1
CPW 14406	.25	See Brede agent all a	A 5070	1
GPW 14409	.09		1 5081	1 ,
GPW 14416	.08	and the state of t	A 5080	1
GPW 14425	.85	Wiring assy-headlamp connector	A 1665	1
GPW 14431	.55	Cable-starting switch to starting motor	1 1454	1
GPW 14432	.40	Wiring assy-filter	A 5981	1
CPW 14436	.08	Cable-headlamp ground	A 1731	2
		32852-S #10-x 3/8 Sheet metal screw-headlamp ground cable	52993	2
		to bracket	1277	
GPW 14446	.40	Wiring assy-chassis left side	A 5061	1
GPW 14448-A	.25	Junction block-2 post	639599	2
GPW 14448-B	.50	Junction block-6 post	A 1490	1
		355112-57 #10-32 x 5/16 Rd.hd.screw & washer-terminals to	A 1490	
		junction blocks		10
	1	355132-S #10-24 x 3/4 Rd.hd.screw-junction blocks to dash	5070	<u> </u>
		355131-S #10-24 x 5/8 Rd.hd.screw-junction block to fender	5272	Įŧ.
		aplasher	5064	5
		V	52221	6
		aplasher	4 .	
		34939-s2 #10 External tooth lockwasher-junction block to		14
		dash		
		355836-37 #10-24 Hex nut-junction blocks to dash and fender	6352	6
		splasher		
198 14451	.18		372668	1
11A 14452	Δ .04	Terminal-hattery cable	371400	3
B 14455	△ .20 Dz .01		306688	AsReq
GPW 14456	.00	Wire assy-junction block to coil & junction block to filter	A 5079	2
GPW 14457	.13	Wire assy-reg. battery arm to filter	5078	1
GPW 14458	.20	Wire assy-light switch to ammeter to ignition switch	A 5072	1
GPW 14459	.08	Wire assy-filter-bat.ammto junction block	A 5073	1
B 14463	Δ .01	Eyelet terminal	307556	AsReq
GPW 14464	. 0	Clip-wire clamp-3/8-oil gauge tube to dash	78318	12
		355158-S2 10-24 x 3/8 Rd.hd.screw-tube to dash	5182	1
		34803-57 #10 Lockwasher-tube to dash	52221	1
	 	355836-S7 #10-24 Hex nut-tube to dash	6352	1
	 	32866-S2 #10-5/8 Rd.hd.screw-clip to body floor	52889	3
GPW 14465	.13		A 5082	1
В 14466	Δ .0.		314369	5
	-			-
GPW 14487-A	.0	5 Connector-3 wire clip-15 amp.	635985	3
GIN T-4-01-W) solution y are step to any		-
GPW 14487-B	.0	Connector 2 wire alin-15 emp		1
GPW 1440[-B	• • • •			+
*** *1110=	1.	2 Connector terminal & insulator-assy		<u> </u>
11A 14487	Δ .0	2 Connector terminal a insulator-assy		5
	-	Cl. Best April 31 abs contact 27 a November 1	1 700	
GP 14496-A	-0		A 729	2
GPW 14560	.0	Clip-wire 5/16	A 1695	3
		555130-S7 #10-24 x 1/2 Rd.hd.screw-headlamp harness clip to	A 1700	5
		fender aplasher		
		355836-57 #10-24 Hex nut-headlamp harness clip to fender	6352	5
		aplnaher		
		34803-S7 #10 Lockwasher-headlamp harness clip to fender	52960	2
		aplasher		
	1	b passing .	I	
GPW 14561	1 .00		A 1694-A 5598	11

FORD PART	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
CPW 14585	.02	7/16 Clip-1 wiring-1 fuel line-1 oil filter tube	A 1289	2
		51866-S #10 x 5/8 Rd.hd.wood screw-clip to bely floor	5580	1
		reinforcing cross member		_
GPW 14621	.03	Clip-wire 3/16	A 1693	3
		54703-S7 #10 Washer-plain-clip to bond strap	5463	la
		355130-S7 #10-24 x 1/2 Rd.hd.acrev-used with GPW-14560.	A 1700	5
		GPW-14561 & GPW-14621 clips	11 2100	
		355836-S7 #10-24 Hex nut-used with CPW-14560,GPW-14561 &	63521	5
	-	GPW-14621 clips	07/61	
	1	34803-S7 #10 Lockwasher-used with GPW-14560,GPW-14561 &		5
	-	CFW-14621 clipe		,
		34703-S7 #10 Flatwasher-used with GPW-14560, GPW-14561 &		-
		GPW-14621 clipe		5
10 1000	10	•		
48 15021	Δ .12	Bulb-6-8 volt 1 C.Pinstrument lamp	52837	5
		Fenders Fenders		
GPW 16005	19.00		A 2943	1
GPW 16006	19.00	/	A 2942	1
GPW 16082	2.15	/ Virginia /	A 2842	1
CPW 16083	2.15	Apron-front fender splach-LH	A 2841	1
GPW 16094	.50		A 2844	1
GPW 16095	.50	Brace-front fender-LH	A 2843	1
GPW 16105	.12		A 2891	2
GPW 16128	.15		A 3096	2
GPW 16132	.04		A 2662	2
GPW 16133	.02		A 3159	3
	.09			
GPW 16159	.09		A 3158	5
<u> </u>		355475-82 5/16-18 x 5/8 Welding bolt	A 3179	1
		33896-S2 5/16-18 Wing nut	300329	1
		34806-S2 5/16 Lockwasher	51.833	1
77.6		For front fender to battery bracket		
		20366-S7 5/16-18 x 7/8 Hex hd.bolt	6428	6
		34130-82 5/16-18 Square nut		6
		34706-S2 5/16 Plain washer	5437	6
		34806-S2 5/16 Lockvasher	518 ¹ 40	6
		353202-S 5/16 Nut retainer		6
		For front fender to brush gward		1
		20046-S2 5/16-18 x 3/4 Hex hd. screw	51523	6
		341 30- S2 5/16-18 Square nut	6167	1 6.
		353202-52 5/16 Nut retainer	6167	6
		For front fender to cowl		+
		24346-S2 5/16-18 x 3/4 Hex head ocrew		+ 4
		34806-S2 5/16 Lockwasher		14
				+ 4
		351370-S2 5/16 Special flat washer		-
		33797-S2 5/16-18 Hex nut		14
		Front fender to cowl step	1 200	-
		34707-S7 3/8 Tinned flat washer	A 1680	5
		Front fender splash apron to frame-rear holes		
		20349-S2 3/8-24 x 3/4 Hex head bolt	501.63	4
		34707-S2 3/8 Plain washer	5455	14
		34807-S2 3/8 Lockwasher	5010	14
	1	Front fender splash apron to frame		
		20347-S2 5/16-24 x 3/4 Hex head bolt	51.396	1
		351370-52 5/16 Flat washer	71633	1
	+	34806-52 5/16 Lockwasher	51840	1
		Front fender splash apron-left-to top of frame		+-
		24449-52 3/8-24 x 1-3/8 Hex head bolt-pointed	52600	14
			51304	14
	1	34807-S2 3/8 Lockwasher		
		34707-S2 3/8 Flat washer	52819	1 4

NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBE
		350976-S2 5/16-24 Clinch nut-voltage regulator to frt.	A 2375	Įt.
	1	fonder apron		
		Hood		
CPW 16610	18.50			
3PW 16684	18.50	Fanel assy-hood top Bracket-hood catch	A 2635	1
PW 16800	.30		A 3059	5
GPW 16849	.20	Bumper-hood top windshield	A 2188	1
PW 16892	.25	Catch-hood-assy-to front fender	Y 5355	2
20072	1	353201-S 1/4 Nut retainer	V 5889	2
		34129-S2 1/4-20 Square nut		5
		24344-S7 1/4-20 x 3/4 Hex head screw	52666	5
		34705-S2 1/4 Flat washer	52702	5
		34805-32 1/4 Lockwacher	52031	5
		Hood hinge assy to cowl top		
		20324-S2 1/4-20 x 5/8 Hex head bolt	52168	4
		34805-52 1/4 Lockwasher	52031	4
		33795-S2 1/4-20 Hex nut	5790	14
		Hood catch bracket to hood		
	Λ	20324-S2 1/4-20 x 5/8 Hex head bolt	51514	8
/		34705-S2 1/4 Flat washer	75121	8
		34805-S2 1/4 Lockwasher	52031	8
	eepBraw DeepBraw	33795-S2 1/4-20 Hex nut	5790	8
Mpu	/se-spahow.com	Hood catch assembly to front fender & hood catch retainer to		-
		hood 39114-S2 #10-32 x 7/8 Binding head machine screw		14
		Thorn on the to the same		14
	-	34803-57 #10 Lockwasher		14
	-	34703-S7 #10 Flat washer		1 4
	-	Hood top to windshield bumper		1
		2306 Tools and Equipment		
SPW 17005	1.50		A 372	1 1
GPW 17005	.10		306715	1
GPW 17017-A			700 2	
GLA TIOTIM	.25	Wrench-apark plug-socket	637635	1 1
GP 17020	.25	, , , , , , , , , , , , , , , , , , , ,	637635 A 375	1
	.70	Screw driver-common-heavy duty 6"		-
GP 17021	1.50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11"	A 375	1
	1.50 1.50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8"	A 375 A 377	1 1 1
GP 17021 GP 17023 GP 17028	1.50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting	A 375 A 377 A 376	1 1 1 1
GP 17021 GP 17023 GP 17028	1.50 1.50 1.50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw	A 375 A 377 A 376 A 374	1 1 1 1 1
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033	.70 1.50 1.50 .50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut	A 375 A 377 A 376 A 374 A 5130	1 1 1 1 1 1
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035	.70 1.50 1.50 .50 .12	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut	A 375 A 377 A 376 A 374 A 5130 A 692	1 1 1 1 1 1
GP 17021 GF 17023 GP 17028 GPW 17030 GP 17033 GPW 17035	.70 1.50 1.50 .50 .12 1.70	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313	1 1 1 1 1 1 1 1 1
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036	.70 1.50 1.50 .50 .12 1.70 .50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492	1 1 1 1 1 1 1 2
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036	.70 1.50 1.50 .50 .12 1.70 .50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-32 1/2-20 Hex nut-oil can brkt.to dash	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790	1 1 1 1 1 1 1 1 2 2
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036	.70 1.50 1.50 .50 .12 1.70 .50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 91492 5790 52706	1 1 1 1 1 1 1 1 2 2 2 2
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .50	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-S2 1/2-20 Hex nut-oil can brkt.to dash 34805-S2 1/4 Lockwesher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt.	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 379	1 1 1 1 1 1 1 1 2 2 2 1 1
GP 17021 GP 17023 GP 17028 GP 17030 GP 17033 GPW 17035 GPW 17036 GP 17037 GP 17038 GP 17042	.70 1.50 1.50 1.50 .50 .12 1.70 .50 1.70 .25	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-32 1/2-20 Hex nut-oil can brkt.to dash 34805-32 1/4 Lockwesher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 379 A 373	1 1 1 1 1 1 1 1 2 2 2 1 1 1 1
GP 17021 GP 17023 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036 GP 17037	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .25	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-52 1/2-20 Hex nut-oil can brkt.to dash 34805-52 1/4 Lockwasher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 15° angle double end 3/8-7/16 Opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 379 A 373 A 596	1 1 1 1 1 1 1 1 2 2 2 1 1
GP 17021 GP 17023 GP 17028 GP 17030 GP 17033 GPW 17035 GPW 17036 GP 17037 GP 17038 GP 17042	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .25 1.70 .25	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-32 1/2-20 Hex nut-oil can brkt.to dash 34805-32 1/4 Lockwasher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double cnd 1/2-19/32 opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 280 A 313 51492 5790 52706 A 373 A 596 A 597	1 1 1 1 1 1 1 1 2 2 2 1 1 1 1
GP 17021 GP 17023 GP 17028 GP 17030 GP 17033 GPW 17035 GPW 17036 GP 17037 GP 17038 GP 17042 GP 17043 GP 17044 GP 17045	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .25 1.70 .25 1.10	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt. to dash 33795-52 1/2-20 Hex nut-oil can brkt. to dash 54805-82 1/4 Lockwasher-oil can brkt. to dash 011 can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end 1/2-19/32 opening Wrench engineers 150 angle double end-9/16-11/16 opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 373 A 596 A 597 A 598	1 1 1 1 1 1 1 1 2 2 2 1 1 1 1
GP 17021 GP 17023 GP 17028 GP 17030 GP 17033 GPW 17035 GPW 17036 GP 17037 GP 17038 GP 17042 GP 17043 GP 17044 GP 17045 GP 17046	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .50 1.70 .25 .60 1.00 .70 .90	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Fliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-S2 1/2-20 Hex nut-oil can brkt.to dash 34805-S2 1/4 Lockwesher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end 1/2-19/32 opening Wrench-engineers 150 angle double end 5/8-25/32 opening Wrench-engineers 150 angle-double end 5/8-25/32 opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 373 A 596 A 597 A 598 A 599	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GP 17021 GP 17023 GP 17028 GP 17028 GPW 17030 GP 17035 GPW 17035 GPW 17036 GP 17037 GP 17037 GP 17042 GP 17043 GP 17045 GP 17046 GP 17047	.70 1.50 1.50 1.50 .50 .12 1.70 .50 1.70 .25 1.10 .90 1.11	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Fliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-S2 1/2-20 Hex nut-oil can brkt.to dash 34805-S2 1/4 Lockwesher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end -9/16-11/16 opening Wrench-engineers 150 angle-double end 5/8-25/32 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 373 A 596 A 597 A 598 A 599 A 599 A 599 A 599	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GP 17021 GP 17023 GP 17028 GP 17028 GPW 17030 GP 17035 GPW 17035 GPW 17036 GP 17037 GP 17042 GP 17042 GP 17044 GP 17045 GP 17046 GP 17047 GPW 17062	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .25 .60 1.00 .70 1.10 .90 1.11 .90	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt.to dash 33795-32 1/2-20 Hex nut-oil can brkt.to dash 34805-32 1/4 Lockwasher-oil can brkt.to dash Oil can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end-9/16-11/16 opening Wrench-engineers 150 angle-double end 5/8-25/32 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 379 A 373 A 596 A 597 A 598 A 599 A 500 A 600 A 1100	1
GP 17021 GP 17023 GP 17028 GP 17028 GPW 17030 GP 17033 GPW 17035 GPW 17036 GP 17037 GP 17042 GP 17042 GP 17043 GP 17044 GP 17045 GP 17046 GP 17047 GPW 17062 GPW 17080	.70 1.50 1.50 1.50 .50 .12 1.70 .50 1.70 .25 1.10 .90 1.11 .90 1.15 .90 1.15	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel mut Crank-starting Holder assy-oil can 26483-57 1/4-20 Rd.hd.screw-oil can brkt. to dash 33795-32 1/2-20 Hex nut-oil can brkt. to dash 34805-32 1/4 Lockwasher-oil can brkt. to dash 011 can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end 1/2-19/32 opening Wrench-engineers 150 angle-double end 5/8-25/32 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-drain plug Jack-screw type	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 373 A 373 A 596 A 597 A 598 A 599 A 500 A 600 A 1240	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GP 17021 GP 17023 GP 17028 GP 17028 GPW 17030 GP 17035 GPW 17035 GPW 17036 GP 17037 GP 17042 GP 17042 GP 17044 GP 17045 GP 17046 GP 17047 GPW 17062	.70 1.50 1.50 1.50 .12 1.70 .50 1.70 .25 .60 1.00 .70 1.10 .90 1.11 .90	Screw driver-common-heavy duty 6" Wrench-adjustable-auto type-11" Wrench-crescent-adj8" Pliers-combslip joint wire cutting Wrench-hydraulic brake bleeder screw Wrench-wheel bearing nut Wrench-socket-wheel nut Crank-starting Holder assy-oil can 26k83-57 1/k-20 Rd.hd.screw-oil can brkt.to dash 33795-82 1/2-20 Hex nut-oil can brkt.to dash 54805-82 1/k Lockwesher-oil can brkt.to dash 0il can-actual capacity 1/2 Pt. Hammer-ball peen Wrench-engineers 150 angle double end 3/8-7/16 Opening Wrench-engineers 150 angle double end -9/16-11/16 opening Wrench-engineers 150 angle-double end 5/8-25/32 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-engineers 150 angle-double end 3/4-7/8 opening Wrench-drain plug Jack-screw type Puller-wheel hub	A 375 A 377 A 376 A 374 A 5130 A 692 A 348 A 289 A 313 51492 5790 52706 A 379 A 373 A 596 A 597 A 598 A 599 A 500 A 600 A 1100	1


		PARTS PRICE LIST		
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER REQUIRE
GPW 17102	.17	Bracket-fire extinguisher mtg.	A 693	3
		26480-S2 #8-32 x 1/2 Rd.hd.screw-extinguisher to mtg.brkt.	6287	6
		34602-S2 #8 Lockwasher-extinguisher to mtg.brkt.	52705	6
		34052-S2 #8-32 Hex nut-extinguisher to mtg.brkt.	6214	6
		26498-S2 #12-24 x 5/8 Rd.hd.screw-ext.mtg.brkt.to body	6988	6
		34804-32 #12 Lockwasher-ext.mtg.brkt.to body	51969	6
		34054-32 #12-24 Hex nut-ext.mtg.brkt.to body	6989	6
GPW 17108	1.45	Bracket-fire extinguisher mounting-amsy		1
GP 17125	4.00	Gun-chassis lubpush type	A 213	1
		Speedometer Speedometer		
GPW 17253	. 04	Gasket-speedcmeter lens	A 1521	1
GPW 17255	10,00	Speedometer assy	A 1266	1
GPW 17261	.65		78316	1
GPW 17262	- 55	Shaft-speedometer-assy	A 1344	1
GPW 17271	.65		A 1512	1
GP 17277	.10	Bushing-speedometer drive pinion	A 985	1
GP 17285	2.10	Gear-speedometer-drive	A 1511	1
GPW 17333	.50	Sleeve-speedometer	636396	1
		Windshield Wiper		
GP 17500	1.35		A 2586	2
GP 17528	.35	Hade assy-windshield wiper		5
GP 17534	.20	Knob & inner arm assy		2
GP 17552	•95	Arm-windshield wiper inner	A 2513	2
GP 17553	1.35	Arm-windshield wiper outer	A 2512	2
		351303-S2 1/4" Special washer JeepDraw	A 2584	2
	,	34054-52 #12-24 Hex nut	A 2588	2
		34804-52 #12 Lockwasher	A 2587	5
		For windshield wiper knob & inner arm to wing whield wiper outer a		-
	,	Rear View Mirror		
21CS17682-B	4.10	Mirror assy-rear view-complete-opt.	A 2934	1
21CS17690-B	.60	Arm-rear view mirror adjusting-short		1
GP 17723-A	.65	Mirror assy-rear view		1
		34806-32 5/16 Lockwasher	51833	6
		351370-32 5/16 Special flat washer	71633	6
		36845-52 #12-24 x 5/8 Rd.hd.screw	6988	6
		34054-S2 #12-24 Hex nut	6989	
		34804-52 #12 Lockwasher	51.969	6
		For rear view mirror to cowl	71,909	6
		Bumpers Bumpers		1
GPW 17750	2.75		A 1117	1
		555456-S 5/16-24 Hex hd.bolt-bumper impact bar to brkt.	51823	4
		33798-S2 5/16-24 Hex nut-front bumper bar to front bumper	5910	2
		upper & lower guaset		-
		33798-S2 5/16-24 Hex nut-front bumper bar to wood filler	5910	2
		34806-S2 5/16 Lockwesher-front bumper bar to front bumper	51833	
		upper & lower gusset	1.1177	2
		357100-S 3/8 x 15/16" Plain pointed rivet-upper guseet to		1 1
		side rail		14
	1	34806-S2 5/16 Lockwasher-front bumper bar to wood filler	51833	12
GPW 17751	1.05			5
GPW 17752	.55		A 1147	1
GPW 17753	.25		A 1130	1
GPW 17754			A 1129	1
	.50		A 1128	1
GPW 17755			A 1127	1
GPW 17759	2.00		A 1120	5
		A STREET TO STATE OF THE STATE		2

		PARTS PRICE LIST		
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	REQUIR
		Shock Absorbers		
GPW 18040	1.00	Bracket-front shock absorber-assy-RH		1
FW 18041	1,00	Bracket-front shock absorber-assh-LH		1
CFW 18045	4.25	Shock absorber assy-front	A 169	5
CPW 18060	.08	Bushing-shock absorber mounting pin	637936	16
GPW 18075	1.20	Bracket assy-rear shock absorber		2
GPW 18080	4.25	Shock absorber assy-rear	A 170	2
		355966-S 5/16-24 Weld nut-front shock absorber brktRH		1
		357073-S 5/16 x 3/16 Grip-huck rivet-brkt.to side rail-RH		5
		352104-S 3/16 x 7/8 Plain pointed rivet-brkt.to side rail-		1
		FOR		
		357073-S 5/16 x 3/16 Grip-huck rivet-brkt.to eide rail-IH		5
		352104-S 5/16 x 7/8 Plain pointed rivet-brkt.to side rail-		1
		LH		
		356525-S Washer-shock absorber shaft	635629	8
		72037-S 3/16 x 1 Cotter pin	52946	8
		352104-S 5/16 x 7/8 Plain pointed rivet-brkt.to side rail		6
		Tire Chain		
GPW 18136	10.50	Chain-tire-6.00 x 16 heavy duty	A 1133	14
		O301 Air Cleaner JeepDraw		
GPW 18205-B	6.50	Air cleaner assy-oil type	A 5621	1
		Oil Filter		
		24367-S2 5/16-24 x 7/8 Hex screw-tube supt.brkt.to mtg.brkt.		
GPW 13632	1.55	Element assy-oil filter	A 1236	1
GPW 18658	1.55	Clamp assy-oil filter	A 1251	2
GPW 18660	7.50		A 1230	1
GFW 10000	, 1.50	24347-S2 5/16-24 x 3/4 Hex screw-filter to dash	51396	1 4
	1	34746-S2 5/16 Plain washer-filter to dash	52274	14
	1	34806-S2 5/16 Lockwasher-filter to dash	51833	4
CPV 18663	.65		51833 A 1247	
GPW 18663	.65	Bracket-asey-oil filter mounting	51833 A 1247	1
GPW 18663		Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt.	A 1247	1
GPW 18663	.04	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket	A 1247 345961	1
GPW 18663		Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube	A 1247	1 1 1
	.04	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain	A 1247 345961 A 1289	1
CPW 18666	.02	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube asey-oil filter outlet	A 1247 345961 A 1289 A 1237	1 1 1 1
GPW 18666 GPW 18667	.04	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube asey-oil filter outlet	A 1247 345961 A 1289 A 1237 A 1198	1 1 1 2
GPW 18666 GPW 18667 GPW 18675	.04 .02 1.25 1.65	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt	A 1247 345961 A 1289 A 1237 A 1198 A 1197	1 1 1 2 1 1
GPW 18666 GPW 18667 GPW 18675 GPW 18679	1.25 1.65	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233	1 1 1 2 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 9N 18679 GPW 18685	1.25 1.65 4 .06	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891	1 1 1 2 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 GPW 18679 GPW 18685 9N 18686	1.25 1.65 4 .06	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234	1 1 1 2 1 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18679 GPW 18685 GPW 18686 GPW 18687	.04 .02 1.25 1.65 4 .06 .35	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 558040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter-assy	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569	1 1 1 2 1 1 1 1 1 3
GPW 18666 GPW 18667 GPW 18675 9N 19679 GPW 18685 9N 18686 GPW 18687 GPW 18688	.04 .02 1.25 1.65 4 .06 .35 4 .10	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 558040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Gasket-oil filter cover	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231	1 1 1 2 1 1 1 1 3 1 1
GPW 18685	.04 .02 1.25 1.65 \(\Delta\) .06 .35 \(\Delta\) .10 1.25 .10	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Bolt-cover	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235	1 1 1 1 2 1 1 1 1 3
CPW 18666 CPW 18667 CPW 18675 9N 18679 CPW 18685 9N 18686 CPW 18687 CPW 18688 CPW 18691	.04 .02 1.25 1.65 4 .06 .35 4 .10 1.25 .10	Bracket-assy-cil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Pube assy-cil filter outlet Tube assy-cil filter inlet Gasket-cil filter cover bolt Adapter-cil filter tube Spring-cil filter cover bolt Elbow-cil filter Cover-cil filter-assy Gasket-cil filter cover Bolt-cover O611 Radio Suppression	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235	1 1 1 1 2 1 1 1 1 3
CPW 18666 GPW 18667 GPW 18679 GPW 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691	.04 .02 1.25 1.65 4 .06 .35 4 .10 1.25 .10	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Casket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Bolt-cover 0611 Radio Suppression Suppressor & adaptor-assy	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1235	1 1 1 1 1 1 1 1 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 9N 19679 GPW 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691	.04 .02 1.25 1.65 4 .06 .35 4 .10 1.25 .10	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter-assy Gasket-oil filter cover Bolt-cover 0611 Radio Suppression Suppressor-spark plug-radio	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1232	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
CPW 18666 GPW 18667 GPW 18679 GPW 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691 GPW 18812-B GPW 18825 GPW 18846	.04 .02 1.25 1.65 Δ .06 .35 Δ .10 1.25 .10 .35	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Bolt-cover 0611 Radio Suppression Suppressor & adaptor-assy Suppressor-spark plug-radio Ground strap-voltage reg.gen.	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1235 A 1232	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 9N 18679 GPW 18685 GPW 18686 GPW 18687 GPW 18691 GPW 18895 GPW 18846 GPW 18846 GPW 18849	.04 .02 1.25 1.65 4 .06 .35 4 .10 1.25 .10 .35	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Casket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter-assy Gasket-oil filter cover Bolt-cover O611 Radio Suppression Suppressor-apark plug-radio Ground strap-voltage reg.gen.	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1232 A 1232	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 9N 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691 GPW 18812-B GPW 18825 GPW 18846 GPW 18846 GPW 18846 GPW 18849	.04 .02 1.25 1.65 Δ .06 .35 Δ .10 1.25 .10 .35 .35	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GPW 13434A Grommet-oil filter bracket GPW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbov-oil filter Cover-oil filter-assy Gasket-oil filter cover Bolt-cover 0611 Radio Suppression Suppressor-spark plug-radio Ground strap-voltage reg.gen. Bond strap-hand brake to heat indicator to speedometer to dash Bond strap-throttle & choke to dash to oil gauge tube	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1235 A 1232 A 1235 A 1232	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
GPW 18666 GPW 18667 GPW 18675 GPW 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691 GPW 18895 GPW 18846 GPW 18846 GPW 18850 GPW 18850 GPW 18850	.04 .02 1.25 1.65 Δ .06 .35 Δ .10 1.25 .10 .35 .35 .35	Bracket-asey-oil filter mounting 351025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GFW 13434A Grommet-oil filter bracket GFW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Bolt-cover O611 Radio Suppression Suppressor-spark plug-radio Ground strap-voltage reg.gen. Bond strap-hand brake to heat indicator to speedometer to dash Bond strap-hood to brush guard	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1232 A 1232 A 1232 A 1284 A 5041 A 5035 A 5040	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
CPW 18666 GPW 18667 GPW 18679 GPW 18685 9N 18686 GPW 18687 GPW 18688 GPW 18691 CPW 18812-B GPW 18825 GPW 18846	.04 .02 1.25 1.65 4 .06 .35 4 .10 1.25 .10 .35 .35 .35	Bracket-asey-oil filter mounting 551025-S7 7/16-20 Hex nut-oil filter mtg.brkt. GFW 13434A Grommet-oil filter bracket GFW 14585 Clip-oil filter tube 358040-S Plug-oil filter drain Tube assy-oil filter outlet Tube assy-oil filter inlet Gasket-oil filter cover bolt Adapter-oil filter tube Spring-oil filter cover bolt Elbow-oil filter Cover-oil filter cover Bolt-cover O611 Radio Suppression Suppressor-spark plug-radio Ground strap-voltage reg.gen. Bond strap-hand brake to heat indicator to speedometer to dash Bond strap-hood to brush guard Bond strap-gas tube to dash Bond strap-gas tube to dash	A 1247 345961 A 1289 A 1237 A 1198 A 1197 A 1233 387891 A 1234 384569 A 1231 A 1235 A 1232 A 1232 A 1285 A 1285 A 1284 A 5041 A 5035 A 5040 A 1699	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

PORD PART NUMBER	LIST PRICE	PART NAME	PART NUMBER	REQUIRE
PW 18858	. 30	Bond strap-gear mounting bolt to starting motor brkt.	A 5033	1
		33866-S7 5/16-24 Hex nut-#3,#4 & #6 strap to dash stud	A 1532	1
100/		34806-S2 5/16 Lockwasher-#3,#4 & #6 strap to dash stud	51833	1
and the last of the last		34706-S2 5/16 Plain washer-#3, #4 & #6 strap to dash	A 1533	1
		351025-87 7/16-20 Hex nut-#3 strap to cyl.head stud nut	A 1550	-
		355421-S7 5/16-24x1 Welded bolt-#3, 4 & 6 strap to dash stud	1 2770	1
PW 18859	.25	Bond strap-rad.stud to flange cross member tube-front	4 5070	1
PW 18871	.30		A 5032	5
	.,,,	34703-S7 #10 Plain washer-clip to bond strap	A 5030	1
		38226-324 #10-32 x 5/8 Binding head screw	A 1702	4
		34079-S7 10-32 Hex nut		2
				2
		34703-S7 #10 Flat washer		2
		34803-S7 10 Lockwasher	52960	2
		For bond strap to brush guard		-
		355420-S7 Special welding bolt-#16 bond strap to floor pan	A 3150	1
		33798-S7 5/16-24 Hex nut #16 bond strap to floor pan	1532	2
				-
PW 18872	.25	Bond strap-rear engine support frame cross member stud	A 5031	1
		355421-S Spec.welding bolt-#15 bond strap to frame	A 3149	1
		33798-S7 5/16-24 Hex nut-#15 bond strap to frame	A 1532	-
CPW 18873	.25		1 5031	2
	,	34703-S7 #10 Flat washer-#9 bond strap to coil		-
CPW 18874	.30		A 1702	1
GPW 18876			A 5036	1
PPW 100/6	.25		A 5038	2
		20311-S7 5/16-24 x 1/2 Hex hd.screw-bond strap cowl to	1648	2
		hood #1 & #2	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	
		34706-S2 5/16 Plain washer-bond strap cowl to hood #1 & #2	1533	2
		34806-S2 5/16 Lockwasher-bond strap cowl to hood #1 & #2	51833	2
GPW 18935-A	.50	Filter unit-generator ground to armature circuit	A 5337	1
CPW 18936-A	6.00	Filter unit-generator regulator	A 1287	1
		20327-S2 5/16-24 x 5/8 Hex head screw-filter to fender		14
		33909-S7 5/16-24 Hex nut-filter to fender	52954	14
		34806-S2 5/16 Lockwasher-filter to fender	51833	14
		27718-S7 1/4-20 x 1/2 Rd.hd.screw-gen.reg.filter unit	72077	1
		field wire		1
	-	34905-S2 1/4 Internal tooth lockwasher-gen.reg.filter unit	52483	-
		field wire screv	52403	1
				-
		33809-S7 1/4-20 Hex nut-gen.reg.filter unit field wire		1
	15.00			
GPW 18960	45.00		A 5980	1
		24347-S7 5/16-24 x 3/4 Hex head screw-filter brkt.to dash	51396	4
		33798-S7 5/16-24 Hex head screw-filter bracket to dash	5910	14
42.50		34806-S2 5/16 Lockwasher-filter bracket to dash	51833	14
1 1 1 L		355516-S 3/8-16 Special carriage bolt	52945	2
		Reqd.as exhaust pipe shield to skid plate		T
	JeepDraw	20388-s 3/8-16 x 1 Hex hd.bolt	5919	1
	Mp.s-Jeepalow.com	Reqd.as exhaust pipe shield to frame		1
		33799-s 3/8-16 Nut	5544	1 3
		2 Reqd.as exh.pipe shield to skid plate		+
		1 Reqd.as exh.pipe shield to frame		+
		34708-S 7/16 Washer-plain	303000	1
	-	The state of the s	303922	1
	-	Reqd.as exhaust pipe shield spacer	50101	+
		34747-S2 3/8 Washer-plain	52101	3
		1 Reqd.as exhaust pipe shield to frame	The same of the sa	-
		2 Reqd.as exh.pipe shield to skid plate		
		34807-32 3/8 Lockwasher	5010	3
	Page 1	1 Reqd.as exh.pipe shield to frame		
		2 Reqd.as exh.pipe shield to skid plate		


BODY PARTS LIST

FORD PART NUMBER	. LIST PRICE		PART NAME	WILLYS PART NUMBER	NUMI
		1800	Body	PART NUMBER	MEGO
PW 1100001		Body assy-comple	-		
FFW IIOOOI			Body bolt No.1 to frame	A 3563	1
			3/8 Flat washer	50163	5
					2
			Hody bolt No.2-frt.flr.pan thru frt.cross sill	51.545	5
			3/8-16 Special flat washer		4
			3/8-16 Stamped nut	52893	5
			3/8-16 Hex nut	5544	5
			Body bolt-No.3-RH side-front floor pan rear cross	51545	1
			aill to frame		
			5/8-16 Stamped nut	52893	1
			3/8-16 Hex nut	5544	1
			5/8 Special flat washer		1
			Body bolt-No. 3-LH side-front floor pan rear cross	51405	1
			sill to frame		
			3/8-16 Clinch nut	A 2263	1
		34807-52	3/8 Lockwasher	501.0	1
		356413-S7	3/8 Special flat washer		1
		20388-32	Body bolt No.4-front to rear floor pan riser to frame	51405	2
		356413-S7	3/8 Special flat washer		4
		35601.6-87	3/8-16 Stamped nut	52893	2
		33799-82	3/8-16 Hex nut	5544	2
		20486-82	Body bolt No.5-body rear cross sill to frame	51542	2
		355943-87	5/16-18 Stamped nut	52845	5
	1		5/16-18 Special washer	52274	4
			5/16-18 Hex nut	6167	2
			Body bolt No. 5 inner and outer-rear panel strainer	639120	4
/- [#	-		to frame		
	Draw	351 359-87	5/16 Special washer	52274	1
		355943-S7	5/16-18 Stamped nut	51845	4
		33797-S2	5/16-18 Hex nut	6167	14
					<u> </u>
		1801	Windshield		
GP 1103302	.65		-	A 2235	2
		351.360-S	Windshield-swing arm-special 5/16 flat washer-inner	A 2491	4
		356286-8	.33 x .7 Special flat washer-outer	A 2490	5
GPW 1103162	. 35	Brackst-windshie		A 2213	2
		20326-87	5/16-18 x 5/8 Hex hd.bolt-pivot brkt.to cowl flg.	51,485	14
		34806-32	5/16 Lockwasher-pivot brkt.to cowl flange	51840	14
		33797-82	5/16-18 Hex nut-pivot brkt.to cowl flange	6167	14
GP 1103304	.65	Bracket-windshie	old swing arm-assy-on tube	V 5525	5
GP 1105508	.10		old swing arm-assy-on frame		2
GPW 1105488	.20			A 2791	2
			1/4-20 x 3/4 Screw-clamp catch to inst.panel	52963	14
GPW 1103027	. 35		hold down-assy-on hood panel	A 3197	2
GP 1103482	2.75			A 2227	5
01 1107405	2117		1/4-20 x 1-7/16 Hex head bolt	A 2485	14
		34805-82	1/4 Lockyasher	A 2486	4
ATT 11 ATALL	9,50			A 3211	1
GPW 1103214	9.50	95633-S	Fastener-post	A 3112	1 5
				A 3111	15
			Fastener-cap	A 3113	1 5
			Fastener-eyelet	A 3054	1 5
		95627-S	Fastener-washer	A 2924	10
95650-56	.05			A 3204	10
GPW 1105268	37.50			A J204	
			3/8-16 x 1-1/2 Hex shoulder bolt No.10-24 x 3/8 Headless cone point set screw		2
			and the second s		1.0

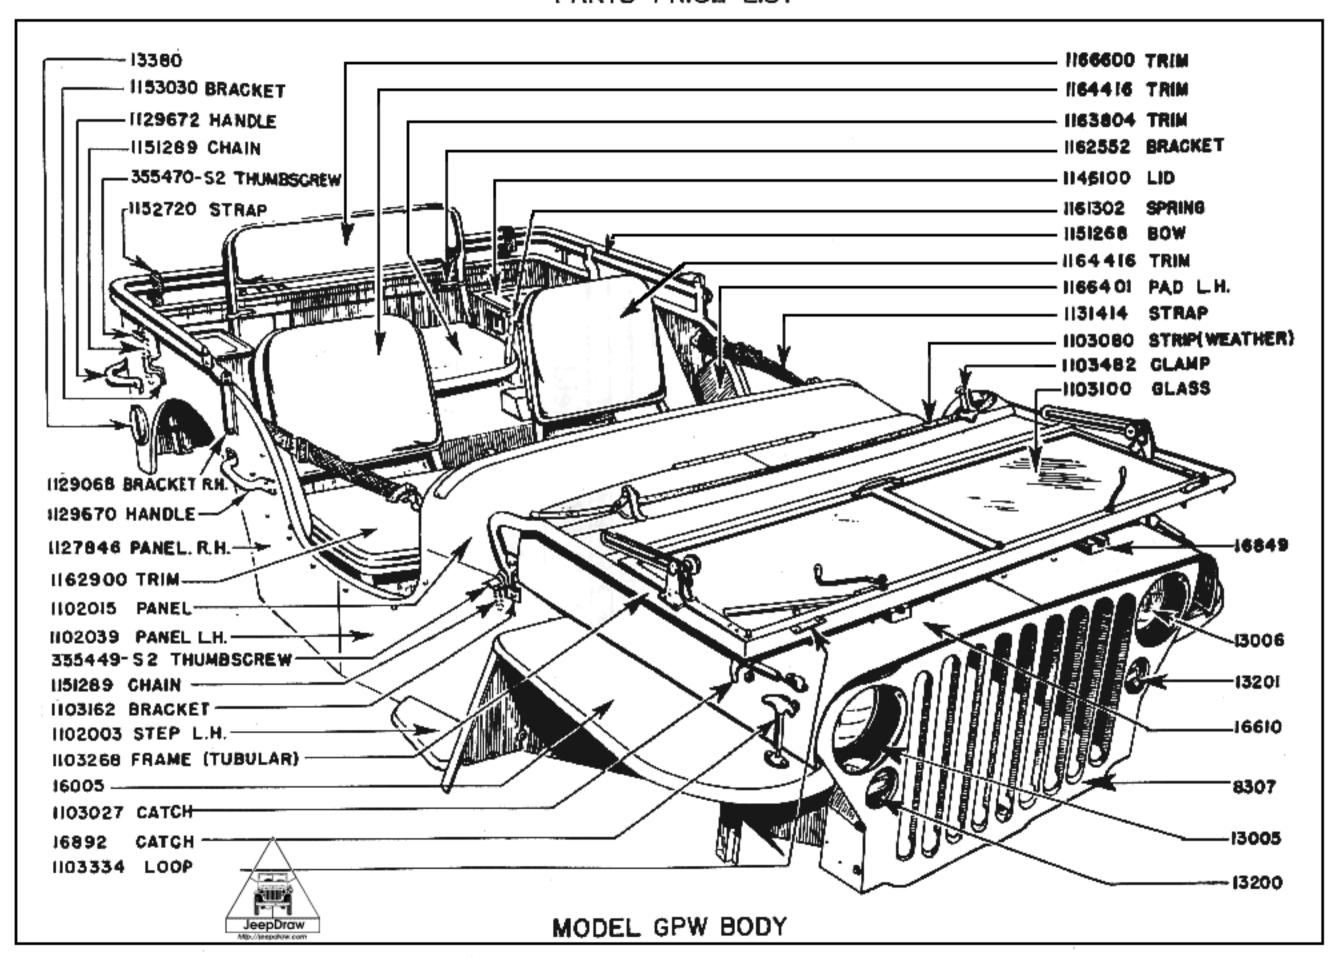

Exercise Park			PARTS PRICE LIST		69
FORD P	ER	LIST PRICE	PART NAME	PART NUMBER	NUMBE
GF 110		6.75	Frame-windshield upper-assy	A 0255	1
16,,14	Mo	The second second second second	38192-S2 No.8-32 x 13/16 B.H.acrew	A 8482	4
1116		10-37	38259-S2 No.10-30 x 13/16 B.H. screw	7 5490	3
1,,,		, , ,	34802-52 No.8 Lockumeher	52705	7
			34176-32 No.10 Elind nut	2481	3
GP 110		10.00	Frame-windshield lower-assy	A 2246	1
GP 110		6.00	Glass-windshield-assy	A 2478	5
GP 110	3334	.18		A 2234	2
			33249-S2 No.10 x 1/2 Self tapping screw	1.2487	4
			34805-52 1/4 Lockwasher	.A 2486	4
GPW 110		1.65	Panel-windshield lower	A 5190	1
GPW 110	3050	.05	Plate-windshield clamp catch mounting	A 2798	â
			36046-53 1/4-20 x 3/4 Flat head screw	52363	4
GPW 110	3447	.25	Reinforcement-windshield clamp catch-RH		1
GPw 110	03446-A	.10	Reinforcement-windshield clamp catch assy-or inst.panel	A 2939	1
B 454	+82-C	Δ .17	Screw-windshield swing arm thumb	A 2238	2
81W 811	189	Δ .05	Screw-windshield swing arm to bracket	A 2239	2
355449.	-52	.25	Screw-windshield pivot thumb-5/8-24 x .50	A 2214	2
GP 110	03106	1,00	Strip-windshield retaining-cork composition	A 2479	1
GP 110	03110	.75	Strip-windshield weather	A 2250	1 1
	03080-A	1,65	Strip-windshield frame to cowl weather	A 2476	1
			35184-S2 No.10 x 1/2 Screw	A 2489	15
B 451	465-C	Δ .04	loop Brow	A 2493	2
	480	Δ .01	a impropries	A 2492	5
GPW 11		_	Windshield assy complete-includes tubular frame	A 3210	1
99N 810			Washer-windshield swing arm spring	A 2483	2
GP 110			Windshield-frame & glass assy	y 5556	1
			Floor Mats and Seals		
GPW 11	11286-A	.15	Cover-gear shift lever housing-rubber	A 2915	1
GPW 11	01735-A	.15	Grommet-transfer shift lever	A 2914	1
GPW 11:	11137-A	.08	Seal-brake cylinder inspection cover	A 2932	1
GPW 11:	11299-A	.20	Seal-fuel line hole floor	A 3116	1
GPW 11:	11520-A	.12	Seal-accelerator treadle rod floor	A 2921	1
GPW 11	12116-A	.20	Seal-transmission cover	A 2994	1
GPW 11	01698-a	.08		A 2931	1
			Seats	1.0157	
GPW 11	62552	.10		A 2453	2
			60362-S 3/8 x 1/2 Round head rivet	A 053.5	2
GPW 11		.30		A 2515	5
GPW 11		.18		A 2787	5
GPW 11	62414	.17		A 2833	5
			60532-S2 1/4 x 3/8 Round head rivet		ļt
GPW 11		.80		A 3076	1
GPW 11	.66405	.50		A 3075	1
GPW 11	.60326	7,50	Frame-passenger seat-assy-included pan & back panel	A 2925	1
GPW 11	60327	10.35	Frame-drivers seat-assy	A 2886	1
GPW 11	61326	4.25	Frame-rear seat-assy-complete	A 2782	1
GPW 11	61 300	2.30	Frame-rear seat back-assy	A 2783	1
CPW 11	60780	.50	Frame-rear seat cushion-assy	A 2785	1
GPW 11	.63206-E	2.95	Pad-front seat cushion-for drivers & pass.seat	A 2906	5
GPW 11	64812-E	1,65	Pad-front seat back-for drivers & pass.seat	A 2905	5
	66800-B		Pad-rear seat back	A 2908	1
	63846-B			A 2916	1
	.62678-E			A 2907	5
GPW 11		3.00		A 3115	1
	66401	3.00		A 3114	1
GPW 11		1			8
GPW 11			36868-32 1/4-20 x 3/4 Round head machine screw	51.539	1 0

FORTS PRICE LIST

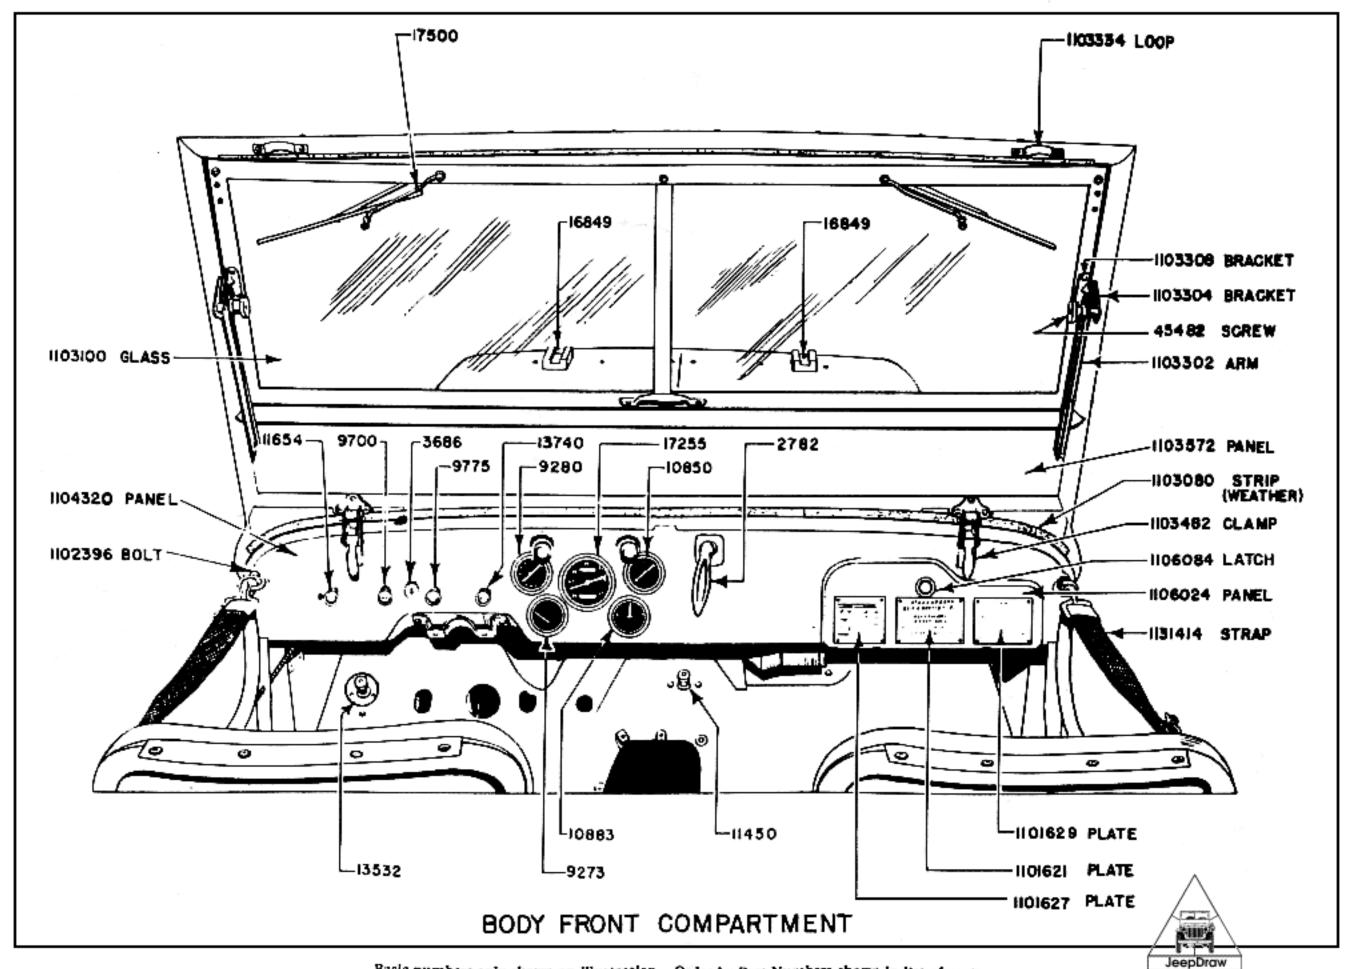

		PARTS PRICE LIST		71
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	REGUIRE
GPW 1162180	,60	Panel-front seat body side crash-assy-RH	à 2910	1
GPW 1162181	.60		A 2911	1
GPW 1162410	.12	Retainer-rear seat pivot tube	V Sore	2
		20308-S2 1/4-20 x 1/2" Hex head bolt	52170	5
		33795-S2 1/4-20 Hex nut	52217	2
		34805-S2 1/4 Lockweaher	52706	5
GPW 1160016-B	25,00	The state of the s	à 3107	1
		355403-82 5/16-18 x 11/16 Hex head bolt	1	1 5
		34706-S2 5/16 Flat washer	5437	2
		34130-S2 5/16 Square nut		1 2
		353202-S 5/16 Nut retainer		5
GPW 1160012-B	25.00	Seat-drivers-assy-complete	A 3106	1
		355403-82 5/16-18 x 11/16 Hex head bolt		2
+		553202-S 5/16 Nut retainer .		5
		34130-S2 5/16-15 Square nut		5
GPW 1160026-B	31.00	Seat-rear-assy-complete	A 3108	1
GPW 1161302	.12	Spring-rear seat frame retaining	A 2830	2
GPW 1131414	2,30	Strap-adjustable safety-assy	A 2883	2
		355569-82 3/8-16 x 1.18 Special shoulder bolt	A 2963	1 2
		34807-S2 3/8 Lockwesher	51 304	5
		33799-S7 3/8-16 Hex nut	6196	2
GPW 1162900 -B	8.50	Trim-front seat cushion-assy-drivers and passenger	A 2986	2
		355163-52 No.10-24 x 5/8 Flat head machine screw	52992	10 -
		34978-So No.10 Hollow ct'sk washer		10
		34803-32 No.10 Lockwasher	52221	10
		355836-s7 No.10-24 Hex nut	52651	10
GPW 1164416	9.75	English and the second	A 2985	5
		32989-32 % 10 x 1/2 Oval head sheet metal screw	52990	20
		54676-Sit Wall Hollow ct'sk washer	1 7-770	20
GPW 1166600	7.00		A 2987	1
011 110000	7.00	52989-S2 Co.10 x 1/2 Oval head sheet metal screw	52990	7 -
		54578-S15 No.10 Hollow ct'sk washer	1	7
GPW 1163804-B	9.00		A 2988	1
014 1103001 5	7,55	32989-S2 No.10 x 1/2 Oval head sheet metal screw	58990	5
		34379-815 No.10 Hollow ct'sk washer	74,230	1 5
			1	
				-
				-
				1
		1805 Handles JeepDraw Manufisespatrus com		
GPW 1129672	.50	Handle-body outside-rear corner	A 2389	5
GPW 1129670	.40		A 2390	2
ì		00326-S2 5/16-18 x 5/8 Hex head bolt	51485	16
		34806-S2 5/16 Lockwasher	518-0	16
		33797-82 5/16-18 Hex nut	52350	16
		34706-S2 5/16 Plain washer	A 2344	2
				-
		Tool Box		
GPW 1146132	.25	Hinge-tool compartment lid-assy	A 3226	5
		355165-52 No. 10-24 x 3/8 Round head machine screw & washer assy		6
GPW 1146126	.06	Plate-tool compartment lid lock striker	A 2832	2
SPV 1146100	.65		A 3227	5
GPW 1143501	.75	Lock-tool compartment lid-assy	A 2895	1
		355165-Se No.10-24 x 3/8 Round head machine screv & washer assy		i.
PW 1146102 -A	.20	Seal-tool compartment lid	A 2503	2
				+
				+
1				

FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	NUMBER
		Body Parts		
Bac	k			
GPW 1140449	.12	Bracket-back panel engine crank-aggy	A 2 ⁹ 53	1
		355-19-52 5/16-18 x 1" Welding bolt	A 2467	1
		33896-82 5/16-18 Wing nut	A 2466	1
		31706-82 5/16 Fint washer	·52274	1
GPW 1144634	.17		A 2857	5
3PW 1140447	.12		\ 247C	l
CPW 1154810	.08		A 2168	6
		355162-S2 No.10-2k x 1/2" Flat head machine screw	6290	12
		34803-57 No.10 Lockwasher	52221	12
		355836-S7 No.10-24 Hex nut	6352	15
3PW 1140324	1,85	Panel-body rear	A 2753	1
GPW 1144606	.10	Strainer-back panel to frame-outer	A 2336	5 .
GPW 1144620	.18	Strainer-back panel to frame-inner	A 3120	2
GPW 1144598	.40		A 2820	1
GPW 1144600	Rs.	Strainer lack panel spare tire-upper-assy JeepDrow	A 2823	1
Flo		Scientific City parts circ appet assy	(R alse)	1 1
GPW 1140441	- 04	Bracket-engine crark hold down-on floor pan	A 2941	5
CPW 11113/22	.25	Cap-fuel tank well drain-assy	A 3055	5
GPW 1112115	.25		A 2990	1
		555544-S2 1/4-20 x 5/3 Hex head bolt & washer asay		5
GPW 1112110	.80		A 2982	1
		355344-S2 1/4-20 x 5/8 Hex head bolt & washer sasy		7
GPW 1111330	.30		A 2760	1
GPW 1111351	,30	Cover-floor pan rear shock absorber-assy-LH	A 2759	1
GPW 1110610	.85	Member-front floor pan front cross-assy	A 2838	1
SPW 1110625	1,30	Member-front floor pan-rear cross-assy	A 2935	1
GPV 1111723	.20	Neck-fuel tank well drain hole-in front floor pan	A 3056	5
		60012-S 3/16 x 1/2 Round head rivet	52635	6
GPW 11111140	5,00		A 2768	1
		353019-S 1/4 Plug-floor pan drain		1
GPW 1111218 .	3.75	Par-rear-floor	A 2773	1
			7-11	1
GPW 1162606	.85		A 3144	2
		Following Used As Foot Rest To Wheel House Panel -	411.04	
		20326-S2 5/16-13 x 5/8 Hex head bolt 34806-S2 5/16 Lockwasher	51485	4
-		, , , , , , , , , , , , , , , , , , , ,	51840	1 4
				4
		353202-S Nut retainer Following used as Foot Rest Support to Floor Pan -		+
	-	20326-32 5/16-18 x 5/8 Hex head bolt	51485	14
		34806-32 5/16 Lockwasher		1
		353202-S 5/16 Nut retainer	51333	4
				1 4
AW 1110110		34130-S2 5/16-19 Square nut Ring-gear shift lever housing cover	1 2000	<u> </u>
GPW 1112119	.20	20344-32 1/4-20 x 3/4 Hex head bolt	A 2919 52167	1
				1 2
		52866-82 No.10 x 5/8 Round head sheet metal screw	52142	3
GPW 1112117	.20	Ring-transmission shift lever grommet	A 2918	1
	-	20344-S2 1/4-20 x 3/4 Hex head bolt	52167	1 2
		32866-ST No.10 x 5/8 Pound hd. sheet metal screw	52142	3
GPW 1112158	.10	Ring-ateering column floor seal	A 2917	1 1

		PARTS PRICE LIST		73
FORD PART NUMBER	LIST PRICE	PART NAME	WILLYS PART NUMBER	REQUI
GPW 1111155	1.75	ran and range	A Been	12
GPW :140474 .	.15	Shield-front sest to rear floor gas tank	A 2 25%	1
		355344-S2 1/4-20 x 5/8 Hex head boil & washer assy		1
		34129-S7 1/4-20 Square nut		3
		34745-S2 1/4 Flotvesher	42772	3
	2	553201-S Mut retainer		3
GPW 1110750	.85		V Süre	1
GPW 1110734	.15		A 2963	1
GPW 1111324 Fro	3.00	Well-front floor pan fuel tank-assy-complete	A 3497	1
	ш			
GPW 1102396	.17	Bolt-safety strap eye	A 2138	5
		54507-S2 3/8 Lockwasher	51304	5
		33799-S2 3/8-16 Mut	5544	5
GPF 1.104366	. 35		A 2361	1
		60332-S2 1/4 x 3/8 Round head rivet	5247	5
GPW 1106050	.25		A 3436	1
		355165-62 No.10-24 x 3/8 Round head machine screw and		3
		vacher asey		
		395836-37 No.10-24 Hex nut	6352	3
CPW 1101669	.40		A 3157	1
GPW 1101670	.70		A 3132	1
		355160-82 No.10-24 x 3/4 Round head machine screw		3
		350838-S2 No. 10 Speed nut		â .
GPW 1106084-B	.25	/\	A 3923	1
GFW 1101610	5.50	//	A 3005	1
GPW 1104320	2,35	Paried - 11:001 wild:10 - 20y	A 35.78	1
GPW 1106024	.50	Panel-glove compartment door-assy-includes ninge	A 3434	1 .
GPW 1102015	1.65	Mb//sepolow.com	A 2747	1
GW 1102038	1.45		A 3007	1
GPW 1102039	1.45		A 3008	1
GPW 1102510	.50		A 2816	<u> </u>
GPW 1102511	.50		A 2815	1
GFW 1102031	.35		A 2190 A 3819	1
GPW 1106064	.06	355165-S2 No. 10-24 x 3/5 Round head screw & lockwasher assy	A 7525	1
		Strip-glove compartment door weather	A 3528	1
GPW 1102330-A	.07	Strip-grove comparament door weather	1 3,22	+
Sid	e			
GPW 1153030	.40	Bracket-top bow pivot	A 2754	2
		20326-82 5/16-18 x 5/8 Hex head bolt	51485	2
		24650-S2 5/16-18 x 5/8 Flat head bolt	52987	3
		34806-52 5/16 Lockwasher	51840	10
		33797-82 5/16-18 Hex nut	52350	10
GPW 1129068	.50		A 2745	1
GPW 1129069	.50		A 2744	1
		20010-S 5/16-18 x 1/2 Hex head bolt	51 391	5
		34806-52 5/16 Lockwasher	51840	2
		33797-S2 5/16-18 Hex nut	52350	5
GPW 1128258	.25	Bracket-shovel-on cowl side panel	A 3085	1
		24650-52 5/16-18 x 5/8 Flat head bolt	52987	2
		34806-82 5/16 Lockwasher	51840	5
		34706-32 5/16 Flat washer	5437	2
		2 1 m - 2 2 1 m - 2 m -	W-3	
		33797-52 5/16-18 Hex nut	52350	5
CRU 110805h	75	33797-52 5/16-18 Hex nut	52550 A 2984	1
GPW 1128254	.75			
GPW 1128254	.75	Clamp-axe-assy-rear 34954-82 No. 14 Ext. tooth lock weaher countersunk		1
GPW 1128254 GPW 1128256	.75	Clamp-axe-assy-rear 34954-82 No. 14 Ext. tooth lock weaher countersunk 36002-52 1/4-20 x 1/2 Flat head machine screw	A 2984	1 2

3470-52	FORD PART NUMBER	LIST PRICE	PART NAME	PART NUMBER	NUMBER
Dept. 119-81.0			54706-S2 5/16 Plain washer	52274	
				52350	4
3460-857 10.10-26 Box nut	CPW 1154810	.08		A 2168	3
200 1278-6 5.00 Penal-body side-38 6.572 4 6.572 4 6.572 4 6.572 4 6.572 4 6.572 4 6.572 5.00 Penal-body side-38 4.2777 1 7 7 7 7 7 7 7 7				6290	6
SW 1278-65 5,00 Real-body side-RB				52221	4
207 1278/87	am, 110001.6			6352	4
CFM 1127866 2.50 Ramal-body rear wheelinguse top-IB				A 2757	1
Section Sect				A 2756	1
Section 1.25 Section Section				A 2772	1
CFM 117855 1.25 Penel-Mody year wheelhouse 12027-III				A 2771	1
CW				A 2770	1
CFM				A 2769	1
CRN					5
1.00 1.00					1
1				A 2968	1
CFW 1182827 .00 Strap-shovel front-many					1 .
Strap-showed rear-showy Strap-showed A 3135 1					1
Strap-aze-assy			/		1
Strainer-body side panel-assy-IE			JoonDraw		1
Strainer-body side panel to wheelhouse					1
CRY 1101627 .20 Plate-speed information A 1350 1	J. # 1120200	,10	Strainer-body aids panel to wheelhouse	A 2325	2
2310 Tarpaulin Bows and Side Curtains	GP¥ 1101627	.15	Plate-gear shift information Plate-nomenclature	A 1331	1
GFW 1151268 5.00 Bow-top-assy-complete A 2897 1 GFW 1151272 2.10 Bow-top front-assy-included in GPW-1151268 bow assy A 2898 1 60k70-S 5716-1" Round head rivet 5216 2 551370-S2 5716-51" Round head rivet 5216 2 GFW 1151289 .05 Chain-top bow thumb acrew-assy A 2501 4 GFW 1120040 5.25 Curtain-body side-assy-HE A 2998 1 GFW 1120041 5.25 Curtain-body side-assy-HE A 3052 14 95626-3 Fastener-male A 3052 14 95626-3 Fastener-eyelet A 3052 14 95705-5 Ratener-eyelet A 3051 14 95705-6 Ratener-eyelet A 3051 14 95705-7 Rex-top-assy-targaulin A 3011 14 GFW 1152700 25.75 Deck-top-assy-targaulin A 3016 4 GFW 1153142 .04 Fivot-top bow A 2900 2 GFW 1153142 <td></td> <td></td> <td></td> <td>7,5027</td> <td>12</td>				7,5027	12
CFW 1151272 2.10 Bow-top front-assy-included in GPW-1151268 bow assy A 2898 1	CT 11 0 0 0				
60470-S 5/16-1" Round head rivet 5216 2 551370-S2 5/16 Special flat washer 71653 2 GFW 1151289 .05 Chain-top bow thumb acrew-asey A 2501 4 GFW 1120040 5.25 Curtain-body side-assy-RE A 2999 1 GFW 1120041 5.25 Curtain-body side-assy-LE A 2998 1 95626-S Fastener-male A 3052 14 95626-S Fastener-syslet A 3053 14 95705-S Fastener-syslet A 3051 14 95705-S Fastener-socket A 3051 14 GFW 1152700 25.75 Deck-top-assy-targaulin A 3616 1 GFW 1154810 .08 Loop-footman A 2168 4 S801-S2 No.10 x 5/8 Flat head sheet metal acrew 52990 4 GFW 1151270 .09 Pivot-top bow-assy A 2901 2 GFW 1151270 .00 Pivot-top bow-assy A 2901 2 GFW 1151270 .00 Pivot-top bow-assy 5/8-16 x 5/8 Hex head bolt 52189 2 34807-S2 3/8 Flat washer 51304 2 GFW 1151297 .04 Ring-top bow thumb acrew chain A 3189 9 355470-S2 .25 Screw-5/16-24 Top bow thumb .2273 2 GFW 115290 .40 Strap-top hold down-assy A 3110 2					1
Spinor-Se 5/16 Special flat weaker 71653 2	VIA II)IEIE	2,10	The style of the s		
GPW 1151289 .05 Chain-top bow thumb screw-asey A 2501 4 GPW 1120040 5.25 Curtain-body side-assy-HE A 2999 1 GPW 1120041 5.25 Curtain-body side-assy-LH A 2998 1 95626-8 Fastener-male A 3052 14 95628-5 Pastener-eyslet A 3053 14 95705-5 Pastener-socket A 3051 14 GPW 1152700 25.75 Deck-top-assy-tarpaulin A 310 1 GPW 1154810 .08 Loop-footman A 2168 4 GPW 1154810 .08 Loop-footman A 2900 2 GPW 1154810 .08 Loop-footman A 2900 2 GPW 1154810 .08 Loop-footman A 2900 2 GPW 115270 .04 Pivot-top bow A 2900 2 GPW 1151270 .80 Pivot-top bow-assy A 2901 2 34807-ss 3/8 Lockwasher 51304 2 34707-ss 3/8 Flat washer 5455 2 356522-ss 39 x 1.12 Oval head spring washer <t< td=""><td></td><td></td><td></td><td></td><td></td></t<>					
GPW 1120040 5.25 Curtain-body side-assy-HE A 2999 1 SP\$626-3 Fastener-male A 3052 14 95628-3 Fastener-eyelet A 3053 14 95705-3 Fastener-eyelet A 3051 14 95705-3 Fastener-socket A 3051 14 95705-3 Fastener-socket A 3051 14 GPW 1152700 25.75 Deck-top-assy-targulin A 3216 1 GPW 1154810 .08 Loop-footman A 2168 4 \$2801-52 No.10 x 5/8 Flat hoad sheet metal acrew 52990 4 GPW 1155142 .04 Pivot-top bow GPW 1151270 .80 Pivot-top bow-assy A 2901 2 20328-52 3/8-16 x 5/8 Hex head bolt 52189 2 \$34807-52 3/8 Tlat washer 5455 2 \$34707-52 3/8 Tlat washer A 2659 2 GPW 1151297 .04 Ring-top bow thumb acrew chain A 3189 9 355470-32 .25 Screw-5/16-24 Top bow thumb \$2 2473 2 GPW 1152950 .40 Strap-top hold down-assy A 3101 2	CPW 1151289	.05			
### CPW 1120041					
95626-S Fastener-male					
9568-S Pastener-eyelet A 3051 14 95705-S Fastener-socket A 3051 14 95705-S Fastener-socket A 3051 14 95705-S Fastener-socket A 3051 14 GFW 1152700 25.75 Deck-top-assy-tarpaulin A 3216 1 GFW 1154810 .08 Loop-footman A 2168 4 \$2801-\$\text{S2} No.10 \times 5/8 \text{Flat head sheet metal acrev} 52990 4 GFW 1153142 .04 Pivot-top bow A 2900 2 GFW 1151270 .80 Pivot-top bow-assy A 2901 2 20328-\$\text{S2} 3/8-16 \times 5/8 \text{Hex head bolt} 52189 2 \$34807-\$\text{S2} 3/8 \text{Lockwasher} 51304 2 \$34707-\$\text{S2} 3/8 \text{Flat washer} 5455 2 \$356522-\$\text{S2} .39 \text{ x 1.12 Oval head spring wesher} A 2639 2 GFW 1151297 .04 Ring-top bow thumb acrev chain A 3189 9 355470-\$\text{S2} .25 \text{Screv-5/16-24 Top bow thumb} A 2473 2 GFW 1152930 .00 Strap-top hold down-assy A 5110 2		74-7			
95705-S Fastener-socket A 3051 14 CFW 1152700 25.75 Deck-top-assy-tarpaulin CFW 1154810 .08 Loop-footman 1268 4 S2801-S2 No.10 x 5/8 Flat head sheet metal acrev S2900 2 CFW 1153142 .04 Pivot-top bow A 2900 2 CFW 1151270 .80 Pivot-top bow-assy CFW 1151270 .80 Pivot-top bow-assy S2801-S2 3/8-16 x 5/8 Hex head bolt S2189 2 S4807-S2 3/8 Lockwasher S1304 2 S4707-S2 3/8 Flat washer S455 2 S56522-S2 .39 x 1.12 Oval head spring washer A 2659 2 CFW 1151297 .04 Ring-top bow thumb acrev chain A 3189 9 S55470-S2 .25 Screw-5/16-24 Top bow thumb A 3189 9 S55470-S2 .25 Screw-5/16-24 Top bow thumb A 3141 2 CFW 1152720 .30 Strap-top hold down-assy A 3141 2					
GFW 1152700 25.75 Deck-top-assy-tarpaulin A 3216 1 GFW 1154810 .08 Loop-footman A 2168 4 52801-52 No.10 x 5/8 Flat head sheet metal screw 52990 4 GFW 1155142 .04 Pivot-top bow A 2900 2 GFW 1151270 .80 Pivot-top bow-assy A 2901 2 GFW 1151270 .80 Pivot-top bow-assy A 2901 2 20328-52 3/8-16 x 5/8 Hex head bolt 52189 2 34807-32 3/8 Lockwasher 51304 2 34707-52 3/8 Flat washer 5455 2 595522-52 .39 x 1.12 Oval head spring washer A 2659 2 GFW 1151297 .04 Ring-top bow thumb screw chain A 3189 9 355470-32 .25 Screw-5/16-24 Top bow thumb A 2473 2 GFW 1152930 .40 Strap-top roll-assy A 3110 2 GFW 1152720 .30 Strap-top hold down-assy A 3110 2					
GPW 1154810 .08 Loop-footman	GPW 1152700	25.75			
32801-S2 No.10 x 5/8 Flat head sheet metal acrew 52990 \$\frac{1}{2}\$ GPW 1153142 .04 Fivot-top bow A 2900 2 GPW 1151270 .80 Pivot-top bow-assy A 2901 2 20328-S2 3/8-16 x 5/8 Hex head bolt 52189 2 34807-S2 3/8 Lockwasher 51304 2 34707-S2 3/8 Flat washer 5455 2 356522-S2 .39 x 1.12 Oval head spring washer A 2659 2 GPW 1151297 .04 Ring-top bow thumb acrev chain A 3189 9 355470-S2 .25 Screw-5/16-24 Top bow thumb A 2473 2 GPW 1152930 .40 Strap-top roll-assy A 3141 2 GPW 1152720 .30 Strap-top hold down-assy A 3110 2					
GPW 1153142 .74 Pivot-top bow A 2900 2 GPW 1151270 .80 Pivot-top bow-assy A 2901 2 20328-s2 3/8-16 x 5/8 Hex head bolt 52189 2 34807-s2 3/8 Lockwasher 51304 2 34707-s2 3/8 Flat washer 5455 2 356522-s2 .39 x 1.12 Oval head spring washer A 2639 2 CPW 1151297 .04 Ring-top bow thumb acrev chain A 3189 9 355470-s2 .25 Screw-5/16-24 Top bow thumb A 2473 2 GPW 1152950 .40 Strap-top roll-assy A 3141 2 GPW 1152720 .30 Strap-top hold down-assy A 3110 2			32801-52 No.10 x 5/8 Flat head sheet metal screw		
20328-S2 3/8-16 x 5/8 Hex head bolt 52189 2 34807-S2 3/8 Lockwasher 51304 2 34707-S2 3/8 Flat washer 5455 2 356522-S2 .39 x 1.12 Ovel head spring washer A 2639 2 GPV 1151297 .04 Ring-top bow thumb screw chain A 3189 9 355470-S2 .25 Screw-5/16-24 Top bow thumb A 2473 2 GPV 1152950 .40 Strap-top roll-assy A 3141 2 GPV 1152720 .30 Strap-top hold down-assy A 3110 2	GPW 1153142	.04			
20328-s2 3/8-16 x 5/8 Hex head bolt 52189 2 34807-s2 3/8 Lockwasher 51304 2 34707-s2 3/8 Flat washer 5455 2 356522-s2 .39 x 1.12 Ovel head spring washer A 2639 2 CPW 1151297 .04 Ring-top bow thumb screw chain A 3189 9 355470-s2 .25 Screw-5/16-24 Top bow thumb A 2473 2 CPW 1152990 .40 Strap-top roll-aesy A 3141 2 CPW 1152720 .30 Strap-top hold down-aesy A 3110 2	GPW 1151270	.80	Pivot-top bow-assy	A 2901	2
34807-32 3/8 Lockwasher 51304 2 34707-52 3/8 Flat washer 5455 2 356522-52 .39 x 1.12 Ovel head spring washer A 2659 2 CPW 1151297 .04 Ring-top bow thumb screw chain A 3189 9 355470-32 .25 Screw-5/16-24 Top bow thumb A 2473 2 CPW 1152990 .40 Strap-top roll-asey A 3141 2 GPW 1152720 .30 Strap-top hold down-asey A 3110 2	Ì		20328-s2 3/8-16 x 5/8 Hex head bolt		
34707-82 3/8 Flat washer 5455 2 356522-52 .59 x 1.12 Ovel head spring washer A 2659 2			34807-32 3/8 Lockwasher		
356522-52 .39 x 1.12 Ovel head apring weather			34707-82 3/8 Flat washer		
CPW 1151297 .04 Ring-top bow thumb screw chain A 3189 9 355470-32 .25 Screw-5/16-24 Top bow thumb A 2473 2 CPW 1152990 .40 Strap-top roll-accy A 3141 2 CPW 1152720 .50 Strap-top hold down-accy A 3110 2			356522-82 .39 x 1.12 Ovel head apring weather		
355470-32 .25 Screw-5/16-24 Top bow thumb A 2473 2 CPW 1152990 .40 Strap-top roll-accy A 3141 2 CPW 1152720 .50 Strap-top hold down-accy A 5110 2	CPW 1151297	• O ₁ †	Ring-top bow thumb screw chain		
GPW 1152950 .40 Strap-top roll-accy A 3141 2 GPW 1152720 .50 Strap-top hold down-accy A 5110 2	355470-32	.25	Screw-5/16-24 Top bow thumb		
2000		.40			
GPW 1152730 .40 Strsp-top resr-sesy A 5109 6		. 30		A 3110	2
	GPW 1152730	.40	Strap-top rear-assy	A 5109	6

NUMERICAL LIST OF BODY PARTS



				Mp://sepdow.com						
Ford Part Number	List Price	Group Number	Willys Number	Ford Part Number	List Price	Group Number	Willys Number			
в 45465-C	بلات. ما	1801	A 2493	GPW 1112:10	. 30	1907	y 59%			
в 45430 в 45492-с	.01	1901	A 2492	GPW 1112115	.25	1907	X 2990			
8 45442-C 81W 811189	. 17 . 04	1801 1901	A 2239	GPV 1112116-A GPV 1112117	.20 .20	1902 1907	a 2994 a 2919			
GPW 1100001	.04	1900	A 2239 A 2981	GPW 1111218		1307				
GPW 1191610	5.50	1807	A 3995	CPW 1112119	3.75 .20	1377	A 2775 A 2919			
CPW 1101621	.20	25.US	A 1330	GPW 1112153	.10	1907	A 2917			
CPW 1101627	.15	55.05	A 1331	GPV 1120040	5.25	2510	A 2999			
GPW 1101629	.20	5505	A 1329	GPW 1120041	5.25	2317	A 2995			
GPW 1101669	.40	1507	A 3157	GPV 1127946	5.00	1807	A 2757			
GPW 1101670	.70	1907	A 3132	GPW 1127947	5,00	1907	A 2756			
GPW 1101698-A GPW 1101735-A	, 08	1902 1902	A 2931	GPW 1127948 GPW 1127949	2,50	1997 1997	A 2772			
GPW 1102002	,15 1,00	1507	A 2914		2.50		A 2771			
GPW 1102003	1,00	1907		GPW 1127850 GPW 1127851	1.25	1907 1807	A 2770			
GPW 1102015	1.65	1807	A 2747	GPW 1128257	1,25 ,20	1807	A 2769 A 3137			
GPW 1102051	.35	1807	A 2190	GPW 1125242	,08	1907	A)1)1			
GPW 1102038	1,45	1507	A 3007	GPW 1128244	.35	1807	A 2968			
GPW 1102039	1.45	1807	A 3008	GPW 1129247	.40	1907	A 3135			
GPW 1102330-A	.07	1977	A 3528	GPW 1128254	.75	1907	A 2984			
GPW 1102396	. 17	1807	A 2139	CPW 1129256	.20	1907	λ 2995			
GPW 1102510	.50	1907	A 2816	GPW 1123258	.25	1807	A 3082			
GPW 1102511 GPW 1102980	.50	1807	A 2815	CPW 1129267	.30	1907	A 3139			
GPW 1102950 GPW 1103010	.90 55.00	2607 1901	A 3770	GPW 1128286	.19	1907	A 2325			
GP 1103014	40.00	1501	A 3210 A 2226	GPW 1129063 GPW 1129069	.50	1907 1807	A 2745			
GP 1103020	6.75	1901	A 2255	GPW 1129200	.50 .60	1907	а 2744 а 2946			
GPW 1103027	. 35	1901	A 3197	GPW 1129670	.40	1805	A 2390			
GP 1103030	10.00	1801	A 2246	GPW 1129672	.50	1905	A 2389			
GPW 1103050	.05	1901	A 2798	GPW 1131414	2,30	1304	A 2883			
GPW 1103080-A	1,65	1901	A 2476	GPW 1140324	1.95	1907	A 2753			
GP 1103100	6.00	1801	A 2479	GPW 1142441	.04	1307	A 2941			
GF 1103106	1.00	1901	A 2479	GPW 1140447	. 12	1507	A 2470			
GP 1103110 GPW 1103162	. 75	1901 1901	A 2250	CPW 1147449 CPW 114744	.12	1907	A 2953			
GPW 1103214	.35 9.50	1801	A 2213 A 3211	GPW 1143501	. 75	1907 1906	A 2930 A 2995			
GPW 1103268	37.50	1901	N JE11	GPW 1144598	.40	1807	Y 5950			
GP 1103302	.65	1801	A 2235	GPW 1144600	.85	1907	A 2923			
GP 1103304	.65	1901	A 2232	GPW 1144606	.10	1507	A 2336			
GP 1103308	.10	1901		GPW 1144620	.19	1907	A 3120			
GP 1103334	.19	1901	A 2234	GPW 1144634	.17	1807	A 2957			
GP₩ 1103446-A	.10	1801	A 2939	GPW 1146100	. 65	1906	A 3227			
GPW 1103447	.25	1801		GPW 1146102-A	.20	1806	A 2503			
GP 1103432	2.75	1901	A 2227	GPW 1146126	.06	1956	A 2832			
GPW 1105498 GPW 1103572	.20 1.65	1801 1801	A 2791	GPW 1146132	.25	1906	A 3226			
GPW 1104320	2.35	1977	A 3190 A 3578	GPW 1151268 GPW 1151270	5.00 .Bo	2310 2310	A 2897 A 2901			
GPW 1104366	.35	1977	A 2361	GPW 1151272	2,10	2310	A 2595			
CPW 1106024	.50	1807	A 3434	CPW 1151289	.05	2310	A 2501			
GPW 1105050	.25	1307	A 3436	GPW 1151297	. 04	2310	A 3199			
GPW 1106064	.06	1907	A 3919	GPW 1152700	25.75	2310	A 2979			
GPW 1106084-B	.25	1807	A 3823	CPW 1152720	.30	2310	A 3110			
GPW 1110610	.95	1807	а 2838	GPW 1152730	.40	2310	A 3109			
GPW 1110625	1.30	1807	A 2935	GPW 1152950	.40	2310	A 3141			
GPW 1110734	. 15	1907	A 2965	GPW 1153030	.40	1807	A 2754			
GPW 1110750 GPW 1111137-A	.85	1907	v 5548	GPW 1153142 GPW 1154810	.04	2310 2310	A 2168			
GPW 1111137-A	.08 5.50	18 02 1 80 7	A 2932 A 2768	GF# 1194019	.00	1807	v e100			
CPW 1111155	1.75	1907	A -3222	GPW 1160012-B	26.00	1804	A 3106			
GPW 1111218	3.75	1807	A 2773	GPV 1160016-B	26.00	1904	A 3107			
GPW 1111256-A	.15	1802	A 2915	GPW 1160026-B	31.00	1904	A 3108			
GPW 1111299-A	,20	1802	A 3116	GPW 1160314	. 30	1804	A 2515			
GPW 1111323	.20	1977	A 3056	GPW 1160326	7.50	1904	A 2925			
GPW 1111324	5.00	1307	A 3497	GPW 1160327	10.35	1304	A 2986			
GPW 1111330	.30	1807	A 2760	GPW 1160780	.50	1804	A 2798			
GFW 1111331 GFW 1111520-A	.30	1407 19 02	A 2759	GPW 1161300	2.30	1804	A 2795			
Of a IIII350-8	.12	T THAC	A 2921	GPW 1161302	.12	1904	A 2830			

NUMERICAL LIST BODY PARTS

70

Ford Part Number	List Price	Group Number	Willys Number	Ford Part Number	List Price	Group Number	Willys Number
GPW 1162180	.60	1804	A 2911	GPW 1163846-B	3.75	1804	A 2916
GPW 1162181	.60	1904	A 2910	CPW 1164416	8.25	1804	A 2995
CPW 1162402	.18	1904	A 2797	GPW 1164912-B	1.65	1904	A 2975
GPW 1162410	.12	1904	A 2945	GPW 1166400	3.00	1904	A 3115
GPW 1162414	.17	1804	A 2333	GPW 1166401	3.00	1804	A 3114
GPW 1162552	.10	1804	A 2453	GPW 1166404	80	1804	A 3076
GPW 1162606	.95	1807	A 3144	GPW 1166405	.80	1804	A 3075
GPW 1162678-B	.45	1304	A 2907	CPW 1166600	7.00		
CPW 1162900-B	13.50	1904	A 2986	GPW 1166800-B	1.65	1804	A 2908
GPW 1163206-B	2.95	1804	A 2906	99W 8103311	.01	1801	A 2483
GPW 1163804-B	20,00	1904	A 2988				





FORD STANDARD PARTS

PORD PART MUMBER LIST PRICE		LIST PRICE WILLYS		PORD PART NUMBER		LIST PRICE PART NUMBER		FORD PART	LIS	T PRICE	WILLYS PART NUMBER
							'				1.
20046-82	1.150	.02	51523	20588-87	1.35C	.02	A 1746	24348-s		.01	6412
20300-87	.650	.01	51738	20389-67	1.500	.02		24357-87		.01	
20304-82	1.100	.01	51514	20406-57		.02	6660	24366-87		.01	6428
20305-67		.04	A 1623	20407-S			5922	24369-S		.02	50151
20309-57	• • • •	.01	51732	20486-52	2.4oc	.03	51542	24386-52		.01	51486
20310-32	.8oc	.01	51.391	20514-S2		.02	51545	24387-57		.01	5934
20311-67		.01	1648	20521-67	1.75C	.02	51508	24388-s		.02	51405
20325-67		.02	5920	21492-32		.02	51308	24389-52		.02	5919
20326-52		.01	51485	21522-3		.20		24407-S		.02	5922
20327-82	.85c	.01		23017-816	11.50M	.02	323397 ,	24408-5		.03	52911
20328-s2	1.100	.02	52189	23393-52	.50C	.01 .	52983	24409-87	1.500	.02	6606
20344-92	.55C	.01	52167	23395-S		. 04	52945	24426-52		.01	6157
20347-S2		.01	51.396	23498-82	.8oc	.01	52372	24427-87	1.00C	.02	6609
20349-52		.02	50163	24308-s		.01	51763	24428-8		.02	51406
20349-87		.02	50163	24309-S2		.01	52169	24429-57		.02	50878
20366-8		.01	6428	24310-8		.01	51 391	24430-S		.04	6184
20367-82	1,30C	.02	50929	24320-82	.75c	.01	52189	24454-52	2.65C	.03	
20384-52	.70C	.01	6188	24325-S	1,200	.02	638154	24489-S		.02	52379
20386-62	.90C	.01	639120	24327-52	.30C	.01	51396	24505 -87	1.250	.02	50992
20 386 -57	• • • •	.02	639120	24327-67	.60c	.01	52132	24534-S		.03	6486
20 38 8-s	1.45C	.02	51405	24344-57-8	.70C	.01	52666	21+555-s		.05	51.371
20388-82	1.60C	.02	51405	24346-67	.75C	.01	51523	24 6 22-3	.350	.01	A 1725

			FORD	ST.	ΑN	D A	RD P	ARTS	;	JeepDraw	77
FORD PART NUMBER	Li	ST PRICE	WILLYS PART NUMBER	FORD PART NUMBER	LIST	PRICE	WILLYS PART NUMBER	FORD PART		T PRICE	WILLYS PART NUMBER
			•		-						
24650-S2	1.250	.00	58987	55911-S2		.01	A 673	36824-\$2		.01	
24 916-82		. 12	A 1707	3 3921- 57	.600	.01	638155	36829- 9 7		.01	52834
25063-S7				33925-S7	.35C	.01		36845-62	. 300	.01	6988
26046-82			52963	33927-57	1.350	.02	52925	56868-32		.01	51539
26147-87		.01	52036	外017- 52		.02	A 1640	36931-823		. 15	
26452 -5 2	. 250	.01	51040	34033-s18		* Of*	64 36	36932-S7	.70C	.01	a 1650
26457-57	,500	.01	52705	34051-87	.200	.01	A 1610	37789-s		.01	A 1620
26467-57		.01	5253	34052-82	.20¢	.01	6214	38095-S		.01	1037
26480-62	.350	.01	6287	34054-32	.450	.01	6989	38192-52	1,250	.02	
26483-67	.550	.01	51492	34056-s16		.01	223457	38226-324		.01	
26496-8	1.600		5780	34079-57	. 300	.01	1 1617	38259-32	1,100	,02	
26498-52		.01	6988	54083-s2		.02	636575	39114-52		.01	52962
27063-87	.45C	.01		34129-82	.250	.01	52165	60012 -S	.15C	.01	52635
27097 -62	,45C	.01	50060	34130-S2		.01	6167	60330-8	.100	.01	5198
27145-52		.01	6383	34141-52	.200	.01	A 1589	60332~52	.40C		5247
27161-S2	,650	.01		34176-87	1.550	.02	2481	60356-87	.150	.01	521.09
27693-S		.02	1032	34701-57	.15C	.01	A 1667	60571-8	.300	.01	52207
27718-57		.05		34702-52	.15C	.01	A 1666	60375-9	1,250		51561
28378-523		.03	1072	34703-87	.150	.01	A 1615	60470 -B	.45C	.01	5216
31026-87	.55C	.01	A 1670	34705-S2	.25C	.01	A 1616	62216-S	.15C	_	655860
51027-98		.01	a 1668	34706-92	. 300	.01	5437	62627-33	. 30C		51182
31032-57		.01	116211	34707-82	. 30¢	.01	5455	63543-87	.20C	.01	A 1567
31037-87		.01	116212	34707-S7	.250	.01	A 1680	64647-8	.300	.01	A 1015
31061-58		.01	116213	34708-s	, 30C	.01	303922	72003-5	2.00%	.250 .01	5067
31079-67	.500	.01	51819	34711-S		.01	116207	72004-S	, 50M	.100 .02%	5354
31583-87	.45C	.01	A 1686	34742-57	.45C	.01		72008-S	. 50X	.100 .02K	5435
31588-67	.60C	.01	л 1636	34745-52	.200	.01	52702	72009-5	.50N	.100 .021	52967
31596-S	.4oc	.01	A 1572	34746-82	.200	.01	52274	72016-8	.50N	.10C .02X	5020
31628-S7	.650	.01	11 34 39	34747-S2	.200	.01	52101	72017-S		.10C .03X	
31662-S		.05	116215	34747-97	.250	.01	A 1680	72034 -9		.100 .75H	
31866-8	,400	.01	5580	34801-57	.200	.01	A 1613	72053-8		.150 1.00	51.08
32799-67		.01	5544	34802-52	.200	.01	6330	72043-57		.600 .01	52976
32801-32	.500	.01	52990	34803-57	.150	.01	52221	72062-6	.041	.15C 1.00M	52527
32859-82		.01		34804-52	.150	.01	51.969	72063-S	. 30C	.01	5 2944
32866-32	,50C	.01	52142	34805-52	.200	.01	52706	72071-3		.15C .04X	5397
32924-52	.45C	.01	52809	34806-S2	,25C	.01	51833	72089-S	1.50%	.200 .05X	51.74
52989-S2	.400	.01	52990	34807-52	.300	.01	5010	72867-57		.07	A 1685
33184 -52	,50C	.01	A 2489	34808-52	.60C	.01	5059	73880-S		.03	339043
33849-52	.650	.01	A 2487	34809-52	.700	.01	5009	73889-67		.03	A 1006
33784-32		.02	A 491	34811-82		.01	, , ,	73904-87		.04	311003
33785-S	.650	.01	5544	34824-52	.500	.01	519 6 9	73928-57		.06	A 1004
33786-s2		.03	636575	34846-82	,250	.01	52045	74019-5	. 35C		650484
33775-S2	.500	.01	5790	34848-62		.01	52968	74113-8		.01	51921
35795-87	.350	.01	5790	34902-8	.200	.01		74121-6	.70C	.01	51091
33796-82	.350	.01	5914	34905-S2		.01	52483	74127-6	.750	.01	51460
33797-32	.500	,01	6167	34906-S	.30C	.01	52428	74174-5	.65C	.01	A 1641
33798=32	.6°C	.01	5910	34907-32	.45C	.01	#2352	74175-6		.01	5017
33799-82	.700	.01	5544	34921-5	••••	.01	52874	74178-s		.03	5036
338no-sa		.01	5901	349 :2-6		.01	636528	74182-S		.03	50917
33801-84		.02	5536	34939-52	.250	.01	A 1597	88027-s		.03	584958
33802 - 32	1,300	.02 .02	5039	34941-S2	.50¢	,01	52510	88032 -s	2,300	.03	332515
			2:27	35613-518		.18	a 520	88042-8		.04	3001.43
33809-87 33846-82	1,800	∵os •os	637924	36002-52		.01	51541	88057-87		.04	632159
35864-S		.01	5916	36009- s		.01	A 1618	88082-s		.03	349712
55866-87		.01	1532	36045-S2	.8oc	.01	52963	88141-8		.03	375981
33 88 0-82	1,000	.02	4,734	36783-s	.500	.01	A 1632	88350-s		.01	337304
33896-sa		.03	a 2466	36787-S7	. 700	.01	A 1633	89752-62		.05	77 JUH
33909-52 33909-57	• • • •	.01	52954	36822-S	****	.01	A 1588	92047-S	. 350		52743
11707-31	* * * *	10.1	J4 7,74		****	• 07	A 1,000	760+1-0	. ///		10143

FORD STANDARD PARTS

FORD PART NUMBER	LI	ST PRICE	WILLYS PART NUMBER	FORD PART NUMBER	LIS	T PRICE	WILLYS PART NUMBER	FORD PART NUMBER	LIST	PRICE	PART NUMBER
			. *	eggett on	•		-	985478			
956 26-8	• • • •	.07	A 3050	355344-82				356077-S5	• • • •	.03	639115
9 56 27-8	.700		A 305h	355352-87	1. 8 50	.02 04	A 1019	356124-8 356125 <i>-</i> 8	••••	.08	а 876
95628-S	.70C		A 3053	355378-s			A 973	356126-S		.04	A 980
95633-s	••••	.06	A 3112	355396-5	• • • • •	.05	636796			.04	436569
95705-5	200	.07	A 3051	355398	• • • • •	.06	51798	356201-8 356205-8		.02	51662
350433'-S	.800	.01	630129	355399-57		.02	. 01.67	356208-37		3.0	A 1135
350838-52		.01		355419-82	• • • •	.02	A 2467	356229-s		.10	
350953-52	• • • • •	.01	A 2375	355420-57		.02	3150 3149	356263-s	.50c		A-1350
350953; S7A3		.01	A 2375	355421-S		.02	2149	356263-87	****	.02	A 1612
	1.75C	.02	. 0067	355421-S7			639107	356264-87		.02	A 1612
351015-57 351025-58	• • • •	.03	д 22 6 3 638539	355426-S		.02	51858	356286-8	3.200	.Oli	4 01:00
351059-87	• • • • •	.03	10558	355442-S		.03	57836	356303-s			A 2490
351175-87		.0)	10//0	355444-S		.04	632158	356305-s		.02	639121
351303-62	.150	.01	A 2584	355451-S	• • • • •	.04	639052	356371-S7		.01	52768
351355-S7	.15C	.01	N 2,000	355452-S		.35	A 1397	356376-s	• • • •		A 1401
351.359-87		.02	52274	355455+8		.05	51823	356394-s2		.03	A 1125 52835
351360-8	****	.01	A 2491	355456-S	• • • •		A 3179	356413-52	.50C	.01	
351370 <i>-</i> 32	.300	.01	71633	355475-S2	****	.02	630129	356413-87		.07	5455
351383-62	,150	.01	5455	3554 76- \$ 35548 3-\$	••••	.02	A 872	356436-s			
351466-624		.02	637923		1 250	.02	A 1559	356439-s	• • • •	.01	A 1396
			0)196)	355485-87	1.250	.02	A 1596	356504-S	• • • •	.05	638381
351505-S7	1.750	.02	374586	555486-S7	1.450		633949	356522 -S2		.05 .06	636570
351915-S	.35C	.01	374681	35549 6- \$.02	632157	356524-S			A 2639
351926-S	,400 ,600	.01 .01	3 (4001	355497-3	• • • • •	.03		356525-S	••••	.03	634762
352101 <i>-</i> 6 352103 <i>-</i> 6	.60C	.01		355498-82		,10	50163 634850	356561-S		.02	
352104-6	.600	.01		355499-8	• • • • •	.03	A 871	357008~s		.04	A 498
				355511 -S			52945	357016-\$19		.01	637432
	1.200	.02		355516-S	• • • •	.02	_	357073-S		.01	52019 ^
	1.200	.02		355526 -8		,03		357074-S	• • • •	.10	
	1.200	.02	649800	355533-s 355546-62		.06 .05	A 1137			.10	
353023-67 353035-AS7		.08 .14	638500 638224	355550-S		.06	A 963	357075-s 3570 76- s		.10	
	••••		_			.06	A 997	357100-S	• • • • •	.10	JeepDrgw
353047-S7		.ch	392909	355551-8 355552-8	• • • •	.05	A 877	357202-s	• • • • •	.02	Mp.//sepdow.com
353051 -S 353052-S5	1,300	.05	636538 52525			.03	A 1136	357417-S		. O L .	636571
353064 -8		.03	5140	355554-S		.20	A 2983	357418-S	• • • •	.04	A 524
353075-s	3.200	.04	5599	355569-S2	1.10C	.20	375910	357419-S2	• • • • •	.12	635840
			635838	355571-S		.05	A 903	357420-S	• • • •	.01	A 2875
553081-S	350	.02		355578-S		.04	630101	357421-S	• • • •	.05	337112
	1.35C	.02	A 3111	355597-s 355698-s		.05	A 967	357423-S	* ***	.04	52788
353201 -6 553202 -8	.300 .750	.01		355699-8		, Ola	636527	357426-8	3.30C	.04	
553202-62	.8oc	.01	6167				A 147	357501-s		al.	
		,06	116384	355741-8	• • • •	.15			••••	.04	300573
355067-87				355752-S		.20	A 1227	357553-818 357689-8		.03	392468
355095-87	F00	.01	5556	3557 6 2-82	• • • •		6352	357 699- 8	* * * *	.06	635886
355130-\$7	.500	.01	5113	355836-S7		.01			****	.05	A 834
355131-S	• • • •	.01	5064	355836-58	.25C	0.5	6352	357703-S	••••	.05	A 1714
355132-S		.01	116588	355858-s	••••	.05	116219	357713-87	****	.02	
355158-52		.01	51.82	355883-S	• • • •	.02	A 1611	358019-S	3.15C	.04	5138
355160-52	.65c	.01	5272	355943-87	600	.01	52845	358048-s		.05	636577
355162-82	****	.01	51537	355944 - S5	.60C	.01	A 1565	358059-8	••••	. 04	A 1104
355163-82	****	.01	52992	355957-S7-8	3	.02		358061-S	****	.02	A 5120
355164-8	••••	.04	A 1584	355966-s	• • • •	.04	A	358063-s	****	.05	376373
355165-82	* * * *	.01		356016-87		.01	52893	358064-S	****	.01	5085
355200-S	****	.02	116207	356021-5	• • • •	* 0/*	636962	358074 -6		.05	A 1721
355253-S		.05	115905	356026-s		.05	0	358075-S			
355262-S	.500	.01	380197	356028-s	• • • •	.01	52825	358087-S	• • • • •		
355344-S		.01	52170	356038-S7		.12	a 1318	358148-s		.01	A 3113