

INDEX

Accelerating Pump, Carburetor.....	46
Adjustment, Brake.....	101
Adjustment, Carburetor Idling.....	45
Adjustment, Clutch Pedal.....	37
Adjustment, Current Regulator.....	67
Adjustment, Cutout Relay.....	67
Adjustment, Distributor Breaker Points.....	64
Adjustment, Hand Brake.....	106
Adjustment, Front Axle Differential.....	91
Adjustment, Front Wheel Bearing.....	108
Adjustment, Generator Regulator.....	66
Adjustment, Rear Axle Differential.....	96
Adjustment, Rear Wheel Bearings.....	108
Adjustment, Steering Gear.....	111
Adjustment, Valve.....	21
Adjustment, Voltage Regulator.....	67
Air Cleaner.....	13-50
Alignment, Frame.....	119
Alignment, Front Wheels.....	114
Ammeter.....	6
Anti-Freeze Solutions.....	54
Armature Tests, Generator.....	64
Axle, Caster Front.....	117
Axle, Front.....	86
Axle Shaft, Front.....	86
Axle Shaft Oil Seal.....	91
Axle Shaft, Rear.....	93
Axle Shaft, Universal Joint.....	86

B

Battery.....	57
Bearing, Camshaft.....	23
Bearing Seal, Crankshaft Rear.....	26
Bendix, Starter.....	69
Body.....	125
Brake Adjustment.....	101
Brake Drums.....	109
Brake, Hand.....	106
Brake, Foot.....	101
Brake Fluid.....	105
Brake Hose.....	106
Brake, Master Cylinder.....	104
Brake Pedal, Adjustment.....	101
Brake Relining.....	103
Brakes, Bleeding.....	104
Brake Shoe Replacement.....	103
Brake Specifications.....	107
Brake Troubles and Remedies.....	107
Brake Wheel Cylinder.....	105

C

Camshaft.....	23
Capacity, Air Cleaner.....	3
Capacity, Brake System.....	3
Capacity, Cooling System.....	3
Capacity, Crankcase.....	3
Capacity, Front Axle.....	3
Capacity, Fuel Tank.....	3
Capacity, Rear Axle.....	3
Capacity, Transfer Case.....	3
Capacity, Transmission.....	3
Carburetor.....	42
Carburetor Accelerating Pump.....	46

Carburetor Choke.....	6-44
Carburetor Float Level.....	45
Carburetor Idling Adjustment.....	45
Carburetor Metering Rod.....	46
Chassis Lubrication.....	10-11
Clutch.....	37
Clutch, Finger Adjustment.....	39
Clutch Pedal Adjustment.....	37
Clutch Specifications.....	41
Clutch Troubles and Remedies.....	41
Connecting Rod.....	26
Connecting Rod and Piston Alignment.....	27
Connecting Rod, Steering.....	114
Cooling System.....	53
Cooling System Specifications.....	56
Cooling System Troubles and Remedies.....	55
Crankcase Oil, When to Change.....	9
Crankshaft.....	24
Crankshaft Rear Bearing Seal.....	26
Cutout Relay.....	67
Cylinder Boring.....	29
Cylinder Checking.....	28
Cylinder Head.....	21
Cylinder Hone.....	29

D

Differential.....	93
Distributor, Ignition.....	63
Draining Cooling System.....	53
Driver Instructions.....	5

E

Electrical System.....	57
Electrical System Specifications.....	71
Electrical System Troubles and Remedies.....	70
Engine.....	17
Engine Compression.....	3
Engine Lubrication.....	9
Engine Mountings.....	32
Engine Special Tools.....	133
Engine, Starting.....	7
Engine Troubles and Causes.....	34
Engine Tune-Up.....	18
Exhaust System.....	52

F

Fan Belt.....	55
Fender Lamp.....	62
Field Test, Generator.....	65
Filter, Fuel.....	49
Filter, Oil.....	32
Float Level, Carburetor.....	45
Floating Oil Intake.....	31
Frame.....	119
Frame Alignment.....	119
Freight Car Unloading.....	4
Front Axle Specifications.....	92
Front Axle Troubles and Remedies.....	91
Front Springs.....	121
Front Wheel Alignment.....	114
Fuel Gauge.....	57
Fuel Pump.....	48
Fuel System.....	42
Fuel System Specifications.....	51
Fuel System Troubles and Remedies.....	50

G

Gasoline Gauge.....	57
Gauge, Oil Pressure.....	32
Gauge, Oil Level.....	7
Gauge, Temperature.....	54
Gearshift Lever, Transmission.....	7
Generator.....	64
Generator Regulator Adjustments.....	66
Glass, Windshield.....	125
Grinding Valves.....	18
Guides, Valves.....	21

H

Headlamps.....	61
Headlamp Aiming.....	61
Heat Indicator.....	54
Heat Valve, Manifold.....	52
Horn.....	69

I

Ignition Distributor.....	63
Ignition System Wiring.....	64
Ignition Timing.....	64
Inflation Pressures, Tires.....	110
Inspections.....	14
Instructions, Driver.....	5
Instructions, Shifting Transfer Case.....	6-8
Instructions, Shifting Transmission.....	7-8
Instructions, Starting Engine.....	7
Instructions, Unloading Freight Car.....	4

L

Lever, Hand Brake.....	106
Lever, Transfer Case Shifting.....	6
Light Switch.....	5-61
Lubricant Specifications.....	12
Lubrication, Chassis.....	10
Lubrication, Engine.....	9
Lubrication, Front Axle.....	13
Lubrication, Rear Axle.....	13
Lubrication, Steering Gear.....	13
Lubrication, Transfer Case.....	13
Lubrication, Transmission.....	13

M

Main Bearings.....	24
Main Bearing Replacement.....	24
Master Cylinder, Brake.....	104
Manifold Heat Control.....	52
Manifold, Intake and Exhaust.....	52
Metering Rod, Carburetor.....	46
Mountings, Engine.....	32
Muffler.....	52

O

Oil Filter.....	32
Oil Gauge, Pressure.....	32
Oil, Floating Intake.....	31
Oil Level Gauge.....	7
Oil Pump.....	29
Oil Seal, Axle Shaft.....	91
Oil Seal, Crankshaft.....	26
Operating Instructions.....	5

P

Pintle Hook.....	119
Piston, Engine.....	27

Piston Pins.....	27
Piston Rings.....	27
Propeller Shaft, Front.....	83
Propeller Shaft, Rear.....	83
Pre-operation Instructions.....	4

R

Radiator.....	53
Rear Axle.....	93
Rear Axle Shaft.....	93
Rear Axle Specifications.....	100
Rear Axle Troubles and Remedies.....	100
Rear Springs.....	121
Relining Brakes.....	103
Repair Operations, Brakes.....	101
Repair Operations, Carburetor.....	45
Repair Operations, Clutch.....	39
Repair Operations, Engine.....	18
Repair Operations, Front Axle.....	86
Repair Operations, Fuel Pump.....	48
Repair Operations, Generator.....	64
Repair Operations, Ignition Distributor.....	63
Repair Operations, Propeller Shafts.....	83
Repair Operations, Rear Axle.....	93
Repair Operations, Steering Gear.....	111
Repair Operations, Starting Motor.....	67
Repair Operations, Transfer Case.....	79
Repair Operations, Transmission.....	73
Repair Operations, Universal Joints.....	83

S

Serial Number Plate.....	3
Shackles, Rear Spring.....	121
Shifting Transfer Case Gears.....	6-8
Shifting Transmission Gears.....	7-8
Shock Absorbers.....	123
Spark Plugs.....	18-21
Special Tools, Engine.....	133
Special Tools, Front Axle.....	126
Special Tools, Rear Axle.....	126
Special Tools, Transfer Case.....	126
Special Tools, Transmission.....	126
Specifications, Brakes.....	107
Specifications, Clutch.....	41
Specifications, Cooling System.....	56
Specifications, Electrical System.....	71
Specifications, Engine.....	35
Specifications, Frame.....	120
Specifications, Front Axle.....	92
Specifications, Fuel System.....	51
Specifications, Lubricant.....	12
Specifications, Propeller Shaft and Universal Joints.....	85
Specifications, Rear Axle.....	100
Specifications, Shock Absorbers.....	124
Specifications, Steering Gear.....	118
Specifications, Transfer Case.....	82
Specifications, Transmission.....	78
Specifications, Wheel and Tire.....	110
Speedometer.....	6
Springs, Front.....	121
Spring Shackles, Front.....	121
Springs, Rear.....	121
Springs, Valve.....	21
Starting Engine.....	7
Starting Motor.....	67
Starting Vehicle.....	7
Starting Switch.....	5-69

Steering Connecting Rod.....	114
Steering Gear.....	111
Steering Gear, Troubles and Remedies.....	118
Steering Geometry.....	114
Steering Knuckle.....	90
Switch, Ignition.....	5
Switch, Light.....	5-59
Switch, Starting Motor.....	5-69

T

Tail and Stop Light.....	62
Temperature Indicator.....	6
Thermostat.....	53
Throttle, Hand.....	5
Tie Rod.....	114
Timing Chain.....	23
Timing Ignition.....	64
Timing, Valve.....	24
Tires.....	110
Torque Reaction Spring.....	121
Towing Vehicle.....	8
Transfer Case.....	79
Transfer Case Shifting Lever.....	6-8
Transfer Case Special Tools.....	126
Transfer Case Specifications.....	82
Transfer Case Troubles and Remedies.....	82
Transmission.....	73
Transmission Gearshift Lever.....	7
Transmission Specifications.....	78
Transmission Troubles and Remedies.....	75
Troubles and Remedies, Brake.....	107
Troubles and Remedies, Clutch.....	41
Troubles and Remedies, Cooling System.....	55
Troubles and Remedies, Electrical.....	70
Troubles and Remedies, Engine.....	34
Troubles and Remedies, Front Axle.....	91
Troubles and Remedies, Fuel System.....	60
Troubles and Remedies, Rear Axle.....	100

Troubles and Remedies, Steering Gear.....	118
Troubles and Remedies, Springs.....	124
Troubles and Remedies, Transfer Case.....	82
Troubles and Remedies, Transmission.....	75

U

Universal Joint, Axle Shaft, Front.....	86
Universal Joints, Propeller Shaft.....	83
Unloading Instructions.....	4

V

Valves.....	18
Valves, Grinding.....	18
Valves, Refacing.....	20
Valve Springs.....	21
Valve Tappet.....	23
Valve Timing.....	24
Voltage Regulator.....	67

W

Water Pump.....	54
Wheel.....	108
Wheel Bearings.....	108
Wheel, Camber Front.....	115
Wheel Cylinder, Brake.....	105
Wheel, Toe-in Front.....	114
Windshield Glass.....	125
Windshield Weatherstrip.....	125
Wiring Diagram, Complete.....	58
Wiring Diagram, Gas Gauge.....	59
Wiring Diagram, Generator.....	65
Wiring Diagram, Horn.....	69
Wiring Diagram, Ignition.....	63
Wiring Diagram, Lights.....	60
Wiring Diagram, Starter.....	69

LUBRICATION SPECIFICATIONS

CANADIAN & BRITISH

See Lubrication Chart
Page 11

ITEM TO BE LUBRICATED See Page 10 & 11	HOW APPLIED	Capac.	B. W. D.		D. N. D.		Nearest Commercial Equivalent		Miles
		Imper.	Specified	☐ Emg'y	Summer	Winter	Summer	Winter	
Engine Crankcase (39)	Filler pipe R. side check level daily	3½ qts.	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	2000
*Transmission Case (28)	Filler plug R. side—add Oil to level of plug	1¾ pts.	C-600	M-600	390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 80	5000
Transfer Case (29)	Filler plug—add oil to level of plug	2½ pts.	M-600	C-600	140	100	Aviation Eng. Oil—No. 140	Aviation Eng. Oil—No. 100	5000
Differential F. & R. (30)	Filler plug in cover—add Hypoid oil to level of plug	2 pts.	Hypoid 90		390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 80	5000
Propeller Shaft Universal Joints F & R (6)	Fitting	Fill	C-600	M-600	390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 80	1000
Air Cleaner	Remove Cover	1 pt.	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	1000
Front Axle Shaft Universal Joint & Steering Knuckle Bearings (27)	Filler plug outer casing	½ lb.	Grease G.S.		632	632	Wheel Bearing Lub.	Wheel Bearing Lub.	1000
F & R Wheel Bearings (19)	Remove and Repack	Fill	Grease G.S.		632	632	Wheel Bearing Lub.	Wheel Bearing Lub.	5000
Steering Gear Housing (22)	Remove Plug	6½ oz.	C-600	M-600	390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 80	1000
Steering Bell Crank (10) Steering Tie Rods (3) Steering Connecting Rod (4) Spring Shackles F & R (1) Spring Pivot Bolts F & R (2) Clutch & Brake Pedal Shaft (10) Propeller Shaft Slip Joints (7)	Fitting Fitting each end Fitting each end Fittings 8 Fittings 5 Fittings 2 Fitting 1 each		Grease G.S.		632	632	Chassis Grease	Chassis Grease	1000
Starter Front (36)	Oil Hole	5 drops	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	1000
Distributor (34)	Oil Cup on side	5 drops	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	1000
Distributor Shaft Wick (34)	Oil Can	1 drop	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	2000
Distributor Arm Pivot (34)	Oil Can	1 drop	M-120	M-160	51	45	Auto Eng. Oil—S. A. E. 20W	Auto Eng. Oil—S. A. E. 10W	2000
Distributor Cam (34)	Wipe with grease		Grease G.S.		665	665	Mineral Jelly	Mineral Jelly	2000
Clevis Pins and Yokes (21)	Oil Can	5 drops	M-160	M-120	390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 80	1000
Pintle Hook (40)	Oil Can	5 drops	M-160	M-120	390	360	Truck Hypoid—S. A. E. 90	Truck Hypoid—S. A. E. 90	1000

Hydraulic Brake Fluid No. 2

510

510

Lockheed 21, Delco
Super 9 or Iso

*Remove Skid Plate to drain Transmission
Shock Absorbers Non-Refillable
☐ Emergency