BODY

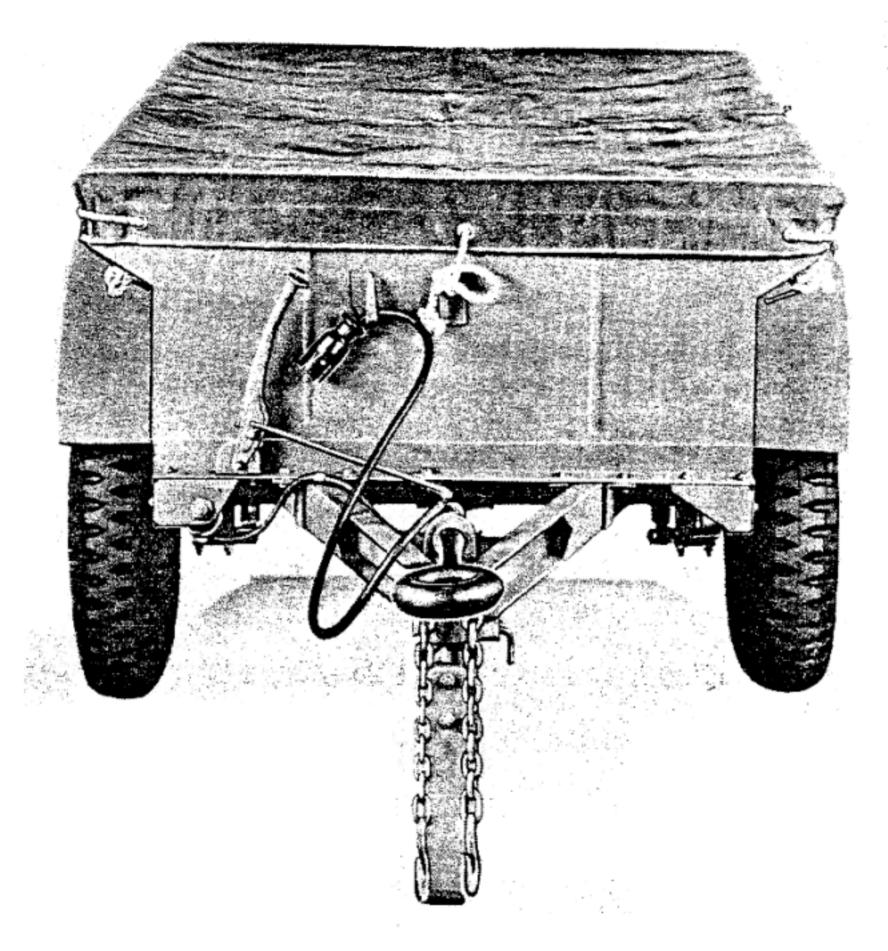


FIG. 20—BODY AND TARPAULIN

The body is of all steel construction and welded into one unit with the frame side rails. The box panels are all of 18 gauge steel strengthened with 16 gauge, 1" O.D. welded tubular frame around the top of the box. All panels have wide welding flanges which strengthen the box and provide large welding and sealing surfaces. They are reinforced with webs for further strength. The box is water tight and will float the vehicle when loaded with a 500 pound load. The water line is 12 inches above the box floor.

A manually operated drain valve is provided in

the right rear corner of the floor which seals against a seat welded to the body.

The fenders are replaceable and bolted to the frame and brackets on the body. The fenders are interchangeable and can be used on either side.

The brake hand lever is mounted on the front side of the body at the right.

A tarpaulin Fig. 20 is provided to cover the box and is held on by taking a half hitch around the body hooks. When not in use it is carried folded in the box.

TOOLS

The manufacturers of this vehicle recommend the use of special precision tools and close inspecion of each part for assurance of proper operation and maximum service

When necessary special tools facilitate dis-

hand tool sets.

assembling, checking and reassembling of the unit.

To aid the mechanic in performing satisfactory repairs, we suggest that tools as listed in this section or their equivalent be available when making repairs.

OPERATING INSTRUCTIONS FOR SERVICE TOOLS

Supplied by Kent-Moore Organization
Detroit. Michigan

Detroit, Michigan	
	Willys Part No
J-270-1—DRIVER HANDLE. A heavy duty driving handle with a threaded end, on which can be mounted various adapters for removing and replacing bearing cups, oil seals, etc.	A-6221
J-1436—WHEEL BEARING CUP AND OIL SEAL AND UTILITY PULLER. This item is a general utility tool with a wide range of uses such as removing oil seals, bearing cups, etc. Fingers are expanded or retracted by merely turning the handle right or left. A heavy sliding knocker that guides on the tool shaft and strikes against a lug welded to end of shaft, provides powerful leverage in removing parts pressed in place in various assemblies.	A-6226
J-1743—WHEEL BEARING RACE AND HUB OIL SEAL REPLACER. Designed to replace the bearing race and oil seal without damage.	A-6230
J-1744 — WHEEL BEARING ADJUSTING NUT WRENCH AND HANDLE. This hollow wrench is designed with a pilot guide ring on the inside of the body to prevent the wrench from slipping off the thin adjusting nuts. This construction permits tremendous pressure being applied without danger of the wrench slipping off and injuring the operator.	A-6231
J-1764—PAIR OF HOOKS FOR REMOVING SPINDLE LOCK WASHERS. The lock washer which is placed between the bearing adjusting nut and the lock nut has a tongued ear that rides in the spindle keyway. Removal is sometimes difficult because of housing interferences, and these hooks will materially assist in withdrawing the washer from the spindle.	A-6238
J-1765—BRAKE ECCENTRIC ADJUSTING TOOL. This tool has two rectangular slots to fit the eccentric adjusting lugs on brake shoe anchor pins. The tool is designed to operate with box type wrenches such as are supplied with mechanics hand tool sets.	A-6239

PARTS SECTION

FOR

¼ TON−2 WHEEL TRAILER

Built For U. S. GOVERNMENT

BANTAM MODEL T3

Contract Number W-2425-qm-672

U. S. A. Reg. Numbers 0253934 to 0277083 WILLYS MODEL MB-T

Contract Number W-2425-qm-673

U. S. A. Reg. Numbers 0212994 to 0244966

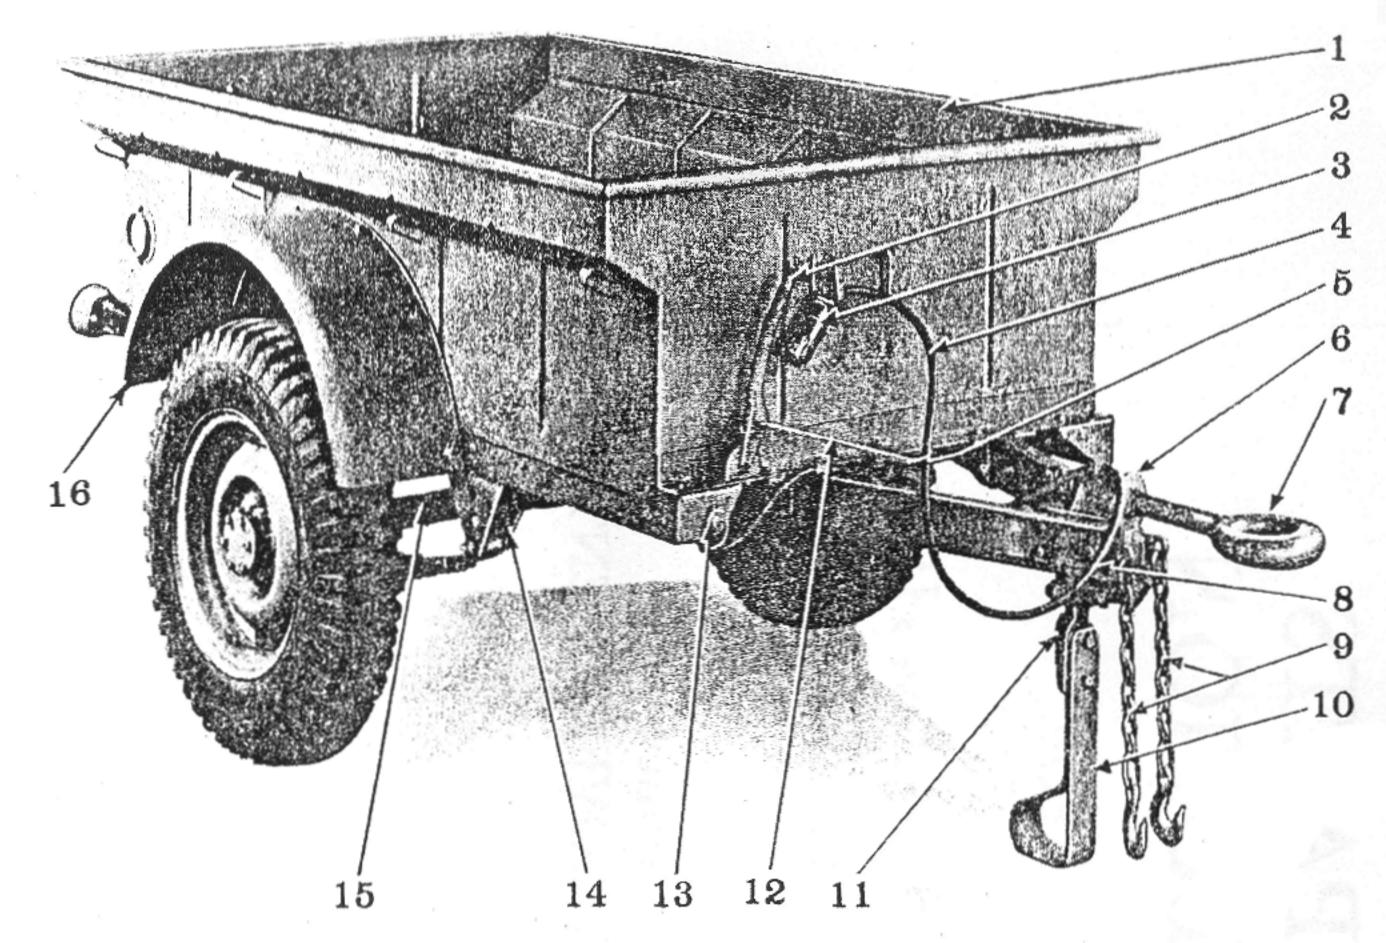


FIG. 21-FRONT VIEW OF TRAILER

Gov't Item Group No. No.	Bantam Part No.	Willys Part No.	Name	Item No.	Gov't Group No.	Bantam Part No.	Willys Part No.	Name
1 1800 2 1201 3 0606 4 0606 5 1201 6 1506 7 1506 8 0606	14300 14302 14448 14317 14306 14269 14280	A-3978 A-6378 A-6558 A-6387 A-6000 A-6466 A-6370 A-6557	Body Assembly Complete Hand Brake Lever Coupling Socket Cable Plug Coupling Socket Cable Assembly Hand Brake Bell Crank Draw Bar Bracket Assembly Lunette Eye Coupling Socket Cable	14	1506 1506 1506 1201 0606 1506 1000	14282 14229 14228 14305 14276 14263 14246 14245	A-6392 A-6368 A-6371 A-6400 A-6021 A-4005 A-6823 A-3994	Safety Chain Support Leg Support Bracket Hand Brake Lever Rod Blackout Light Switch Spring Pivot Bracket Front Axle Assembly Fender Assembly

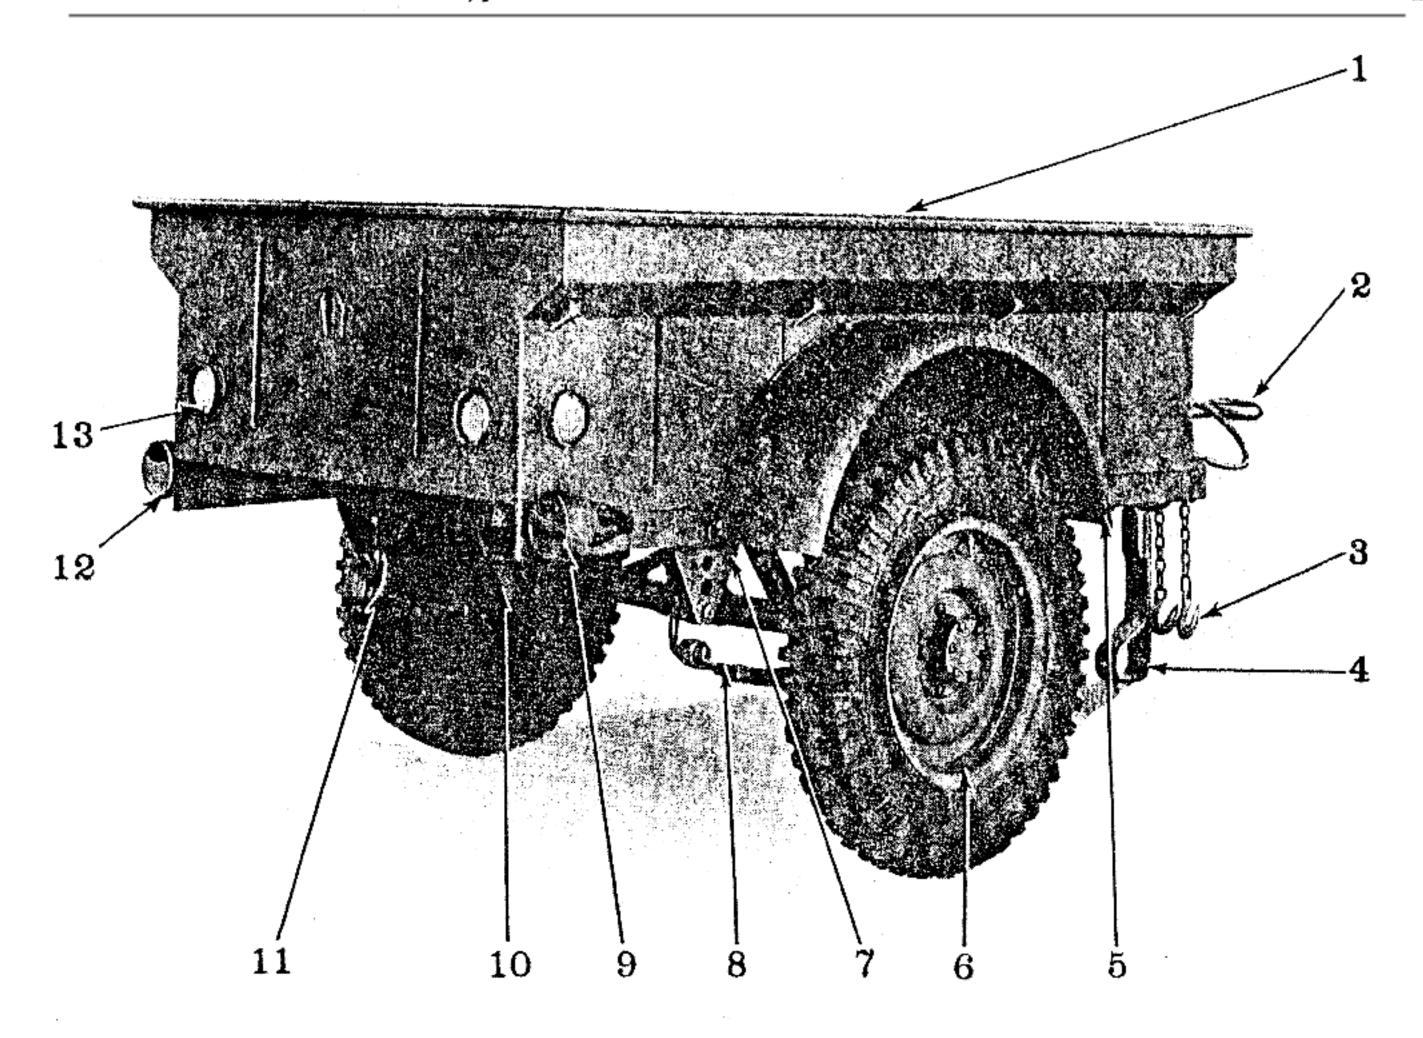


FIG. 22—REAR VIEW OF TRAILER

Item No.	Group	Bantam Part No.	Willys Part No.	Name	Item No.	Gov't Group No.	Bantam Part No.	Willys Part No.	Name
1 2 3 4 5	1800 1506 1506 1506 1701	14319 14280 14282 14229 14245	A-3977 A-6370 A-6392 A-6368 A-3994	Body Assembly Lunette Eye Safety Chain Support Leg Fender Assembly	8 9 10 11 12	1601 0608 1603 1602 0608	14268 R-11540 14297 14312 R-11544	A-1065 A-169 A-514 A-1064	Spring Assembly Tail and Stop Lamp—Right Shock Absorber Spring Shackle "U" Bolt Tail and Stop Lamp—Left
7	1301 1506	14231 14394	A-5467 A-6455	Wheel Assembly Spring Shackle Bracket—Rear Right	13	0608	14084	A-1306	Reflex Reflector