

NUMERICAL INDEX

Bantam Part No.	Willys Part No.	Description	Gov't Group No.	List
R-10111	A-1691	Hub Assembly	1302	\$ 6.00
R-10246	637936	Bushing	1603	.10
R-10247	A-6510	Washer, Special	1603	.02
R-11022	A-1690	Hub and Drum	1302	8.60
R-11023	A-1689	Hub and Drum	1302	8.60
R-11027	A-476	Nut	1302	.05
R-11028	A-475	Nut	1302	.05
R-11540	A-1065	Lamp	0608	8.32
R-11544	A-1064	Lamp	0608	8.08
14070	A-6010	Spring	1506	.04
14073	A-6009	Handle and Sleeve	1506	1.00
14084	A-1306	Reflector	0608	.90
14156	A-6766	Clip	1201	.05
14220	A-6518	Screw	1506	.05
14222	A-6515	Screw	1506	.28
14228	A-6371	Bracket	1506	6.00
14229	A-6368	Leg, Support	1506	3.60
14231	A-5467	Wheel, Combat	1301	4.01
14232	A-5468	Wheel, Combat — Inner	1301	3.78
14234	A-5488	Ring, Lock	1301	2.16
14235	A-6519	Screw	1506	.25
14236	A-3986	Hook	1800	.10
14237	A-3997	Bracket	1701	.10
14243	A-4015	Bracket	1800	1.00
14245	A-4179	Fender	1701	2.56
14246	A-6823	Axle	1000	33.20
14255	A-6038	Cap, Hub	1302	.10
14257	A-6511	Clip, Spring	1000	.36
14259	A-5471	Nut	1301	.05
14260	A-4048	Tarpaulin	1800	POA
14263	A-4005	Bracket	1506	.60
14264	A-6448	Brace	1506	.12
14268	A-612	Spring	1601	5.15
14269	A-6466	Bracket and Plunger	1506	10.40
14270	A-6776	Bolt	1602	.25
14274	A-4018	Socket, Right	1800	.65
14275	A-4017	Socket, Left	1800	.65
14276	A-6021	Switch	0606	1.36
14280	A-6370	Eye, Lunette	1506	12.00
14282	A-6392	Chain	1506	1.45
14291	A-4022	Eyelet	1800	Doz. .07
14292	A-4023	Washer	1800	Doz. .07
14297	A-169	Absorber, Shock	1603	3.75
14298	A-6388	Washer	1506	.05
14299	A-6375	Spring	1506	.60
14300	A-3978	Body	1800	POA
14301	A-6389	Washer	1506	.05
14302	A-6378	Lever	1201	3.13
14303	A-6376	Ratchet	1201	.60
14304	A-6329	Pawl, Hand Brake	1201	.40
14305	A-6400	Rod	1201	.24
14306	A-6000	Crank	1201	.16
14307	A-6517	Pin, Pivot	1201	.35
14312	A-514	Bolt, "U"	1602	.50
14313	A-513	Bolt, "U"	1602	.50
14314	634432	Bushing	1602	.30
14315	635532	Bushing	1602	.30
14316	A-6377	Bumper, Axle	1506	.25
14317	A-6387	Cable	0606	8.70
14318	A-6340	Cable	0606	.60
14319	A-3977	Body	1800	POA
14320	A-6404	Brake	1200	20.00
14321	A-6403	Brake	1200	20.00
14325	A-6406	Cable and Conduit	1201	3.00
14326	A-5470	Bolt	1301	.10
14327	A-6768	Equalizer, Cable	1201	.10
14328	A-6516	Bolt, Cable Hook	1201	.15
14330	A-6028	Clamp	1506	.25
14331	A-6027	Clamp	1506	.25
14332	A-572	Plate and Shaft Assy. — Right	1000	1.68
14333	A-571	Plate and Shaft Assy. — Left	1000	1.68
14334	A-6338	Harness, Wiring	0606	3.05
14336	A-3979	Fastener, Ring	1800	Doz. .05
14338	392909	Fitting	1506	.03
14338	392909	Fitting	1602	.03
14340	A-6527	Screw	1506	.08

All Prices Subject to Change Without Notice.

Part Numbers with the prefix letter (R) are also used on the American Bantam ¼-ton Truck Model BRC.

Bantam Part No.	Willys Part No.	Description	Gov't Group No.	List
14342	A-6339	Cable.....	0606	1.25
14346	A-4062	Seat, Ball.....	1800	.15
14348	A-6431	Plate, Name.....	2202	.20
14353	662276	Grommet.....	0606	.04
14356	635985	Connector.....	0606	.06
14357	A-6459	Plate, Backing.....	1208	3.30
14358	A-6458	Plate, Backing.....	1208	3.30
14359	116549	Shoe and Lining.....	1202	1.25
14362	116550	Shoe and Lining.....	1202	1.25
14365	637903	Strut, Brake.....	1203	.24
14366	637902	Strut, Brake.....	1203	.24
14367	637899	Pin, Anchor.....	1203	.15
14368	637900	Cam.....	1203	.10
14369	637901	Plate, Anchor Pin.....	1203	.10
14370	A-754	Eccentric.....	1203	.15
14371	637905	Spring.....	1203	.09
14372	637906	Lever.....	1203	.70
14375	For A-612	Leaf, Spring No. 1.....	1601	1.00
14376	For A-612	Leaf, Spring No. 2.....	1601	1.10
14377	For A-612	Leaf, Spring No. 3.....	1601	.70
14378	For A-612	Leaf, Spring No. 4.....	1601	.65
14379	For A-612	Leaf, Spring No. 5.....	1601	.60
14380	For A-612	Leaf, Spring No. 6.....	1601	.50
14381	For A-612	Leaf, Spring No. 7.....	1601	.35
14382	For A-612	Leaf, Spring No. 8.....	1601	.30
14383	359039	Bushing.....	1601	.32
14384	116609	Bolt.....	1601	.10
14385	116458	Clip, Small.....	1601	.20
14386	116460	Clip, Large.....	1601	.20
14394	A-6455	Bracket and Brace.....	1506	2.28
14395	A-6449	Bracket and Brace.....	1506	2.28
14398	A-4072	Bracket, Right.....	1800	.15
14399	A-4058	Bracket, Left.....	1800	.15
14400	A-6539	Gasket, Cover.....	0606	.07
14401	A-6538	Plate, Cover.....	0606	.10
14402	A-6540	Nut.....	0606	.16
14403	A-1350	Lockwasher.....	0606	.01
14404	116600	Lining and Rivets.....	1202	3.00
14405	A-5986	Cap, Valve.....	1301	.03
14406	A-5987	Sleeve.....	1301	.18
14407	A-5549	Wheel, Combat — Outer.....	1301	3.25
14408	A-515	Seal.....	1602	.05
14409	A-1252	Retainer.....	1602	.04
14421	A-6508	Nut.....	1000	.03
14427	A-4045	Rope, Anchor.....	1800	.90
14434	A-4105	Support, Valve.....	1800	.20
14435	A-4109	Valve Assembly.....	1800	.90
14436	A-6526	Pin, Clevis.....	1201	.01
14438	A-5472	Plate, Instruction.....	1301	.05
14439	345961	Grommet.....	0606	.05
14440	374586	Rivet.....	1202	.07
14442	637923	Lockwasher.....	1203	.01
14443	A-6475	Rod, Hand Brake Pawl.....	1201	.15
14444	A-6476	Spring, Pawl Rod.....	1201	.05
14445	A-6477	Pin, Pawl Rod.....	1201	.02
14446	A-6478	Button, Pawl Rod.....	1201	.45
14447	A-6557	Cable, Coupling Socket.....	0606	3.75
14449	A-6474	Body, Hand Brake.....	1201	1.15
14453	307556	Terminal.....	0606	.02
14454	A-6640	Sleeve, Insulator.....	0606	3.00
14455	A-6533	Terminal.....	0606	.05
14456	A-6641	Insulator.....	0606	.02
14457	A-6644	Clamp, Cable.....	0606	.10
14458	A-6645	Insulator.....	0606	.05
14459	A-6642	Shield, Dust.....	0606	.05
14448	A-6558	Plug, Coupling Socket.....	0606	5.00
14461	A-6637	Plug, End.....	0606	1.45
14462	A-6643	Clip, Contact.....	0606	.20
14463	A-6638	Screw.....	0606	.04
14464	53004	Screw.....	0606	.02
R-20050	A-474	Bolt, Hub.....	1302	.05
R-20051	A-473	Bolt, Hub.....	1302	.05
R-20731	A-472	Drum, Brake.....	1302	3.25
R-21031	A-904	Gasket.....	1302	.05
R-21159	52942	Cone.....	1302	3.21
R-21160	52943	Cup.....	1302	2.04
R-21161	A-865	Washer.....	1302	.08
R-21162	A-866	Nut.....	1302	.25

All Prices Subject to Change Without Notice.

Part Numbers with the prefix letter (R) are also used on the American Bantam ¼-ton Truck Model BRC.

Bantam Part No.	Willys Part No.	Description	Gov't Group No.	List
R-21163	A-867	Lockwasher.....	1302	.05
R-21164	A-864	Seal.....	1302	.55
R-21355	A-1074	Service Unit.....	0608	2.48
R-21356	A-1078	Service Unit.....	0608	2.88
R-21357	A-1075	Service Unit.....	0608	3.20
R-21379	A-1073	Housing.....	0608	1.46
R-21380	A-1079	Door — Right.....	0608	.60
R-21381	A-1076	Door — Left.....	0608	.60
R-21382	A-1077	Screw.....	0608	.09
1 x 21-R	53042	Screw.....	1506	.02
1 x 8-R	5934	Screw.....	1201	.02
1 x 12-R	A-6025	Bolt.....	1201	.04
1 x 23-R	50847	Screw.....	1506	.04
1 x 14-R	53048	Screw.....	1201	.02
1 x 26-R	A-903	Screw.....	1200	.03
1 x 12-R	50847	Screw.....	1506	.03
1 x 10-R	6299	Screw.....	1302	.02
1 x 43-R	6609	Bolt.....	1201	.04
1 x 46-R	6609	Screw.....	1208	.03
1 x 56-R	53031	Bolt.....	1701	.02
1 x 57-R	53036	Screw.....	1506	.05
9 x 1-R	51738	Screw.....	0606	.02
9 x 2-R	5113	Screw.....	0606	Doz. .05
9 x 3-R	5064	Screw.....	0606	Doz. .06
9 x 16	52834	Screw.....	0603	Doz. .08
9 x 17-C	52131	Screw.....	0606	Doz. .04
9 x 18-C	53055	Screw.....	0606	.01
9 x 19-R	52236	Screw.....	1800	Doz. .10
9 x 20	53063	Screw.....	0606	.02
31 x 1	5914	Nut.....	0608	.01
31 x 2-R	50802	Nut.....	1201	.01
31 x 2-R	50802	Nut.....	1208	.01
31 x 3-R	636575	Nut.....	1200	.01
31 x 3-R	50922	Nut.....	1506	.01
31 x 5-R	637924	Nut.....	1203	.05
31 x 5-R	50811	Nut.....	1506	.05
31 x 5-R		Nut.....	1603	.05
31 x 2-R	50802	Nut.....	1601	.01
31 x 27-R	53037	Nut.....	1506	.02
31 x 28-R	53033	Nut.....	1701	.02
31 x 52-R	5910	Nut.....	1202	.04
31 x 53-C	A-755	Nut, Eccentric.....	1203	.02
31 x 53-R	5781	Nut.....	1201	.01
32 x 2-R	53062	Nut.....	0606	.02
32 x 3	6214	Nut.....	0606	.03
32 x 4-R	6352	Nut.....	0606	Doz. .03
32 x 5	52216	Nut.....	0606	Doz. .08
32 x 7-R	5790	Nut.....	0608	Doz. .06
33 x 78-R	53046	Nut.....	1201	.01
33 x 79-R	53041	Nut.....	1506	.02
33 x 80-R	53040	Nut.....	1506	.03
33 x 81-R	53043	Nut.....	1602	.05
33 x 83-R	53039	Nut.....	1506	.12
33 x 84-R	53052	Nut.....	1506	.15
35 x 27-R	52891	Nut.....	1201	.01
35 x 28-R	52909	Nut.....	1506	.01
62 x 2	53035	Screw.....	1506	.02
66 x 1-R	52993	Screw.....	0606	Doz. .07
90 x 1	A-6639	Washer.....	0606	.02
90 x 6-R	53051	Washer.....	1201	Doz. .08
90 x 7-R	53032	Washer.....	1701	Doz. .05
91 x 4-R	52221	Lockwasher.....	0606	Doz. .01
91 x 6-R	52706	Lockwasher.....	0606	Doz. .02
91 x 6-R	52706	Lockwasher.....	0608	Doz. .02
91 x 7-R	53047	Lockwasher.....	1201	Doz. .02
91 x 7-R	53047	Lockwasher.....	1506	Doz. .02
91 x 8-R	52046	Lockwasher.....	1200	.01
91 x 8-R	5010	Lockwasher.....	1203	.01
91 x 8-R	52046	Lockwasher.....	1302	.01
91 x 8-R	52046	Lockwasher.....	1506	.01
91 x 8-R	52046	Lockwasher.....	1701	.01
91 x 10-R	53045	Lockwasher.....	1506	Doz. .06
91 x 59-R	53044	Lockwasher.....	1000	Doz. .08
91 x 107-R	51833	Lockwasher.....	1208	.01
91 x 110-R		Use Bantam Part No. 14442. (This applies only to the item in Gov't Group No. 1203)		
91 x 110-R		Lockwasher.....	1603	Doz. .10
92 x 2	52569	Lockwasher.....	0606	.02

All Prices Subject to Change Without Notice.

Part Numbers with the prefix letter (R) are also used on the American Bantam ¼-ton Truck Model BRC.

¼ TON TWO WHEEL GOVERNMENT TRAILER

Bantam Part No.	Willys Part No.	Description	Gov't Group No.		List
92 x 3	52754	Lockwasher.....	0606	Doz.	.03
92 x 4-R	53053	Lockwasher.....	1800		.02
92 x 24-R	52859	Lockwasher.....	0606	Doz.	.08
92 x 36	53054	Lockwasher.....	0606		.09
92 x 86	53024	Lockwasher.....	0608		.01
92 x 24-C	53023	Lockwasher.....	0606	Doz.	.06
100 x 4	5215	Rivet.....	1506		.01
100 x 5	50769	Rivet.....	1800	Doz.	.15
100 x 6	5215	Rivet.....	1800		.01
105 x 2	52613	Rivet.....	2202	Doz.	.06
115 x 4	5067	Cotter Pin.....	1201	Doz.	.01
35 x 28-R	5020	Cotter Pin.....	1201	Doz.	.01
115 x 32	5152	Cotter Pin.....	1201	Doz.	.02
115 x 31	5021	Cotter Pin.....	1506	Doz.	.02
115 x 33	5021	Cotter Pin.....	1602	Doz.	.02
115 x 58	5137	Cotter Pin.....	1506	Doz.	.03
115 x 60	5108	Cotter Pin.....	1506	Doz.	.03
115 x 89	50255	Cotter Pin.....	1506	Doz.	.06
181 x 4	A-5598	Clip.....	0606	Doz.	.05
181 x 7	A-5449	Clip.....	0606		.03
181 x 13	A-5450	Clip.....	0606	Doz.	.10
181 x 16	A-6809	Clip.....	0606		.01

All Prices Subject to Change Without Notice.

Part Numbers with the prefix letter (R) are also used on the American Bantam ¼-ton Truck Model BRC.